
Cadillac

1957-70 SERIES PARTS LIST

ELDORADO BROUGHAM

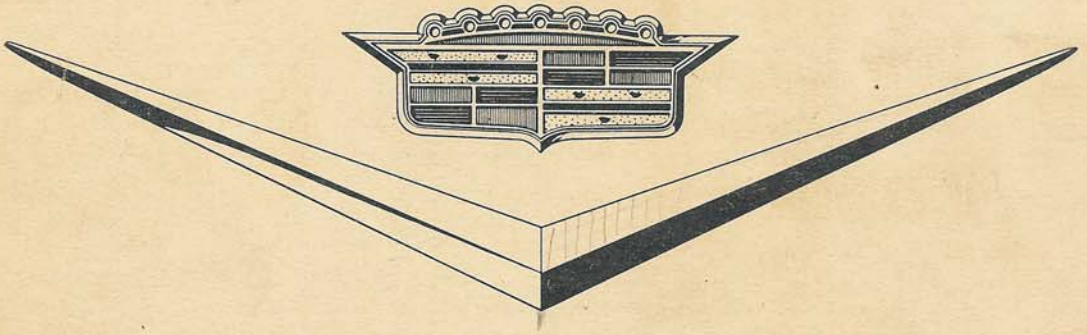


D

Cadillac

1957-70 SERIES PARTS LIST

ELDORADO BROUGHAM

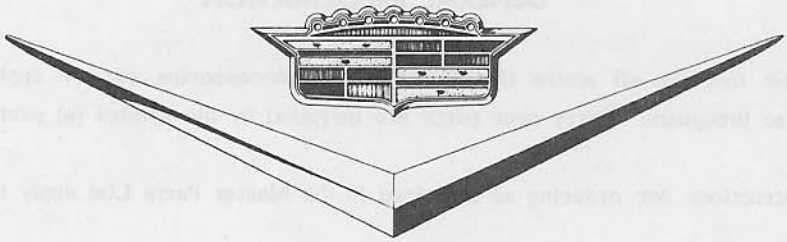

THIS PARTS LIST EFFECTIVE APRIL 1, 1957

ISSUED BY:

PARTS AND PRICES ARE SUBJECT TO CHANGE OR REMOVAL WITHOUT NOTICE

© 1957
CADILLAC MOTOR CAR DIVISION
GENERAL MOTORS CORPORATION

LITHO IN U.S.A.

CONTENTS

CHART OF ENGINE NUMBERS . . . . . PAGE G-2

CHART OF TIRE SIZE . . . . . PAGE G-2

BODY STYLE . . . . . PAGE G-3

CHART OF CAPACITIES . . . . . PAGE G-3

BODY NAME PLATE INFORMATION . . . . . PAGE G-3

CHART OF COLOR COMBINATIONS . . . . . PAGE G-4

CHART OF COLOR DATA FOR INTERIOR PAINTED PANELS AND MOLDINGS. . . . . PAGE G-5

LIST OF ILLUSTRATIONS . . . . . PAGE G-7

CHASSIS PARTS SECTION . . . . . PAGE 1

BODY PARTS SECTION . . . . . PAGE 99

ACCESSORIES SECTION . . . . . PAGE 137

NUMERICAL PRICE LIST . . . . . PAGE 155

GENERAL INFORMATION

This Parts List includes all active Chassis, Body and Accessories service replacement parts used on Series 57-70 Cadillac Brougham. Carry over parts are indicated by the symbol (•) prefixing the part number.

The same instructions for ordering as contained in the Master Parts List apply to all parts included in this list.

The Numerical Price List included with this Parts List contains only those items which are new and exclusive 57-70 Series parts.

The Prices on carry over parts are included in the Series 1957 Numerical Price List and/or the Parts and Accessories Numerical Price List.

Group sections are arranged according to the Master Parts List and may be inserted in their respective positions. As additional information becomes available, it will be released in the regular Parts Release and Change Notice and/or Replacement Page Service.

ENGINE NUMBERS

Series	Engine Serial No.	Engine Unit No.
1957-70	57-70000001 to	70S1 and up

TIRE SIZE

8.40 x 15

BODY STYLE

STYLE NO.	SERIES	BODY TYPE	WHEEL BASE	OVERALL LENGTH
57-7059X	57-70	5 Pass. Sedan	126	216.3

1957 SERIES BODY NAME PLATE

It is very important that the information on the Body Name Plate for 1957 Series cars be checked to determine accessories, paint colors, trim and other features in the body construction.

The plate is attached to the hood ledge of the body under the engine hood. The following information noted with numerical or letter key symbols will be found on the body plate.

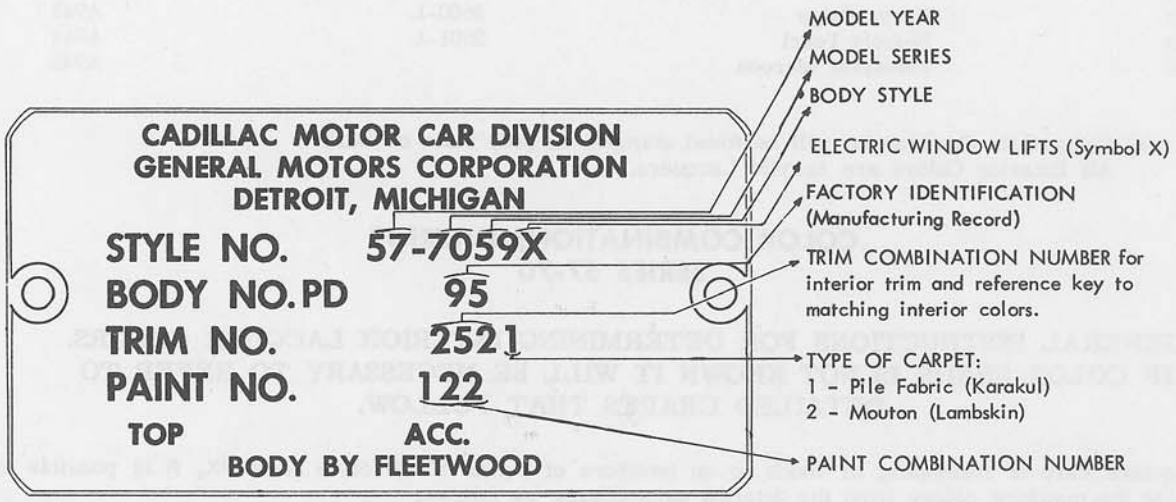


CHART OF CAPACITIES

	Series 57-70
Engine Crankcase	5 qts.
Cooling System (with Heater)	22 1/2 qts.
Gasoline Tank	20 gal.
Hydramatic Transmission Refill	11 qts.
Dry	11 1/2 qts.
Rear Axle	5 pts.
Power Steering, Complete System	1 5/8 pts.
Air Conditioner - Freon #12	4 lbs.
Frigidaire #525 Oil Refill	9 oz.
Dry	12 oz.

Interior moldings, panels and painted parts are finished in colors to harmonize with the interior trim material color shades. To assist in determining trim color requirements, if the trim color is not known, reference can be made to the trim code chart shown below. For convenience and assistance in procurement, the original color name and numbers are shown with matching Dupont formula number reference. On parts using high temperature drying enamels, a reference is made to nearest match of air-drying lacquers.

For easy reference and to cover the most commonly called for areas and parts, the reference is keyed to three (3) major group charts, Instrument Panel, Door and Quarter Trim Panels, Steering Column Jacket and Covers, Horn Ring and other parts.

TRIM CODE COLOR REFERENCE CHART

REFERENCE CHART FOR DETERMINING PAINT COLORS ON INTERIOR PARTS FROM THE PAINT CHARTS BY TRIM CODE NO.

NOTE: TRIM CODE NUMBERS SHOWN IN THIS PARTS LIST CORRESPOND TO THE FIRST THREE DIGITS OF THE TRIM CODE NO. STAMPED ON METAL NAME PLATE ATTACHED TO LEFT SIDE OF COWL UNDER HOOD. (SEE NAME PLATE EXAMPLE ON PAGE G-3).

TO MATCH TRIM CODE NO.	TRIM COLOR
110,120,130,140,150	Lt. Gray (Cloth) w/Dark Gray (Leather)
111,121,131,141	Lt. Gray (Cloth) w/Lt. Gray (Leather)
118,128,138,148	Lt. Gray (Cloth) w/White (Leather)
151	Lt. Gray (Leather)
158	Lt. Gray (Leather) w/White (Leather)
212,222,232,242	Med. Blue (Cloth) w/Med. Blue (Leather)
218,228,238,248	Med. Blue (Cloth) w/White (Leather)
252	Med. Blue (Leather)
258	Med. Blue (Leather) w/White (Leather)
414,424,434,444	Beige (Cloth) w/Beige (Leather)
454	Beige (Leather)
616,626,636,646	Med. Green (Cloth) w/Green (Leather)
618,628,638,648	Med. Green (Cloth) w/White (Leather)
656	Med. Green (Leather)
658	Med. Green (Leather) w/White (Leather)
858	White (Leather)
859	White (Leather) w/Black (Leather)
958	Black (Leather) w/White (Leather)
959	Black (Leather)

COLOR CHARTS FOR INTERIOR PAINTED MOLDINGS, PANELS AND RELATED PARTS

GROUP 7.3880 HORN RING
GROUP 18.0100 STEERING COLUMN JACKET & COVER
GROUP 18.0175 COVER, STEERING COLUMN
GROUP 33.0020 INSTRUMENT PANEL
GROUP 33.0260 INSTRUMENT PANEL ASH TRAY DOOR
GROUP 33.1060 INSTRUMENT PANEL DOOR
GROUP 34.5550 TRIM PANEL SIDE OF COWL
GROUP 34.8015 TRIM PANEL FRONT DOOR (UPPER)
GROUP 34.8045 TRIM PANEL REAR DOOR (UPPER)
GROUP 34.8745 TRIM PANEL REAR QUARTER (UPPER)

TO MATCH TRIM CODE NO.	MOLDING AND PANEL COLORS	R - M LACQUER	DUPONT FORMULA NO.
Style 57-7059X			
110,111,120,121,130, 131,140,141,150,151	Wimbledon Gray	L-21-A-048	82834
118,128,138,148,158, 218,228,238,248,258, 618,628,638,648,658, 858,859,958,959	Chamonix White	L-21-W-038	82838
212,222,232,242,252	Lake Placid Blue	L-21-B-103	82835
414,424,434,444,454	Kenya Beige	L-21-N-047	82837
616,626,636,646,656	Jamaican Green	L-21-G-097	82836

GROUP 34.0320 FRONT SEAT ADJUSTERS
GROUP 35.0000 BATTERY BOX AND COVER
GROUP 54.6375 AIR CONDITIONING DOORS


TO MATCH TRIM CODE NO.	COLOR NAME	R - M LACQUER	DUPONT FORMULA NO.
110,111,118,120,121, 128,130,131,138,140, 141,148,150,151,158	Deauville Gray	L-21-A-049	
212,218,222,228,232, 238,242,248,252,258	Copenhagen Blue	L-21-B-104	
414,424,434,444,454	Nairobi Brown	L-21-N-048	
616,618,626,628,636 638,646,648,656,658	Laurentian Green	L-21-G-098	
858,859,958,959	Black	L-21-K-400	44

GROUP 54.0210 FRONT RADIO SPEAKER HOUSING


TO MATCH TRIM CODE NO.	COLOR NAME	R - M LACQUER	DUPONT FORMULA NO.
110,111,120,121,130, 131,140,141,150,151	Wimbledon Gray	L-21-A-048	82834
118,128,138,148,158	Deauville Gray	L-21-A-049	
212,222,232,242,252	Lake Placid Blue	L-21-B-103	82835
218,228,238,248,258	Copenhagen Blue	L-21-B-104	
414,424,434,444,454	Kenya Beige	L-21-N-047	82837
616,626,636,646,656	Jamaican Green	L-21-G-097	82836
618,628,638,648,658	Laurentian Green	L-21-G-098	
858,859,958,959	Black	L-21-K-400	44

LIST OF ILLUSTRATIONS


	PAGE NO.
RIGHT FRONT VIEW—STYLE 57-7059X—ELDORADO BROUGHAM	G-8
RIGHT REAR VIEW—STYLE 57-7059X—ELDORADO BROUGHAM	G-9
FRONT END VIEW—SERIES 57-70	G-10
RADIATOR GRILLE, FINS HEADER AND MOLDINGS—SERIES 57-70	G-11
AIR SPRING PIPE LAYOUT—SERIES 57-70	G-12
AIR SPRING PIPE LAYOUT—SERIES 57-70	G-13
FRONT SUSPENSION—AIR RIDE—SERIES 57-70	G-14
REAR AIR SUSPENSION—SERIES 57-70	G-15
REAR SUSPENSION CONTROL YOKE AND REAR AXLE HOUSING—SERIES 57-70	G-16
INSTRUMENT PANEL—SERIES 57-70	G-17
INSTRUMENT PANEL CLUSTER—EXPLODED VIEW—SERIES 57-70	G-18
HEADLAMP—SERIES 57-70	G-19
LAMP—FOG, PARK AND DIRECTIONAL SIGNAL—SERIES 57-70	G-20
STOP, TAIL, BACK-UP AND REAR LICENSE LAMPS—SERIES 57-70	G-21
BODY SHEET METAL OUTLINES—STYLE 57-7059X—ELDORADO BROUGHAM	G-22
EXTERIOR TRIM MOLDING LAYOUT—SERIES 57-70	G-23
INTERIOR FRONT DOOR TRIM LAYOUT—STYLE 57-7059X	G-24
INTERIOR REAR DOOR TRIM LAYOUT—STYLE 57-7059X	G-25
BODY INTERIOR VIEW—STYLE 57-7059X—ELDORADO BROUGHAM	G-26
ELECTRIC ANTENNA—SERIES 57-70	G-27

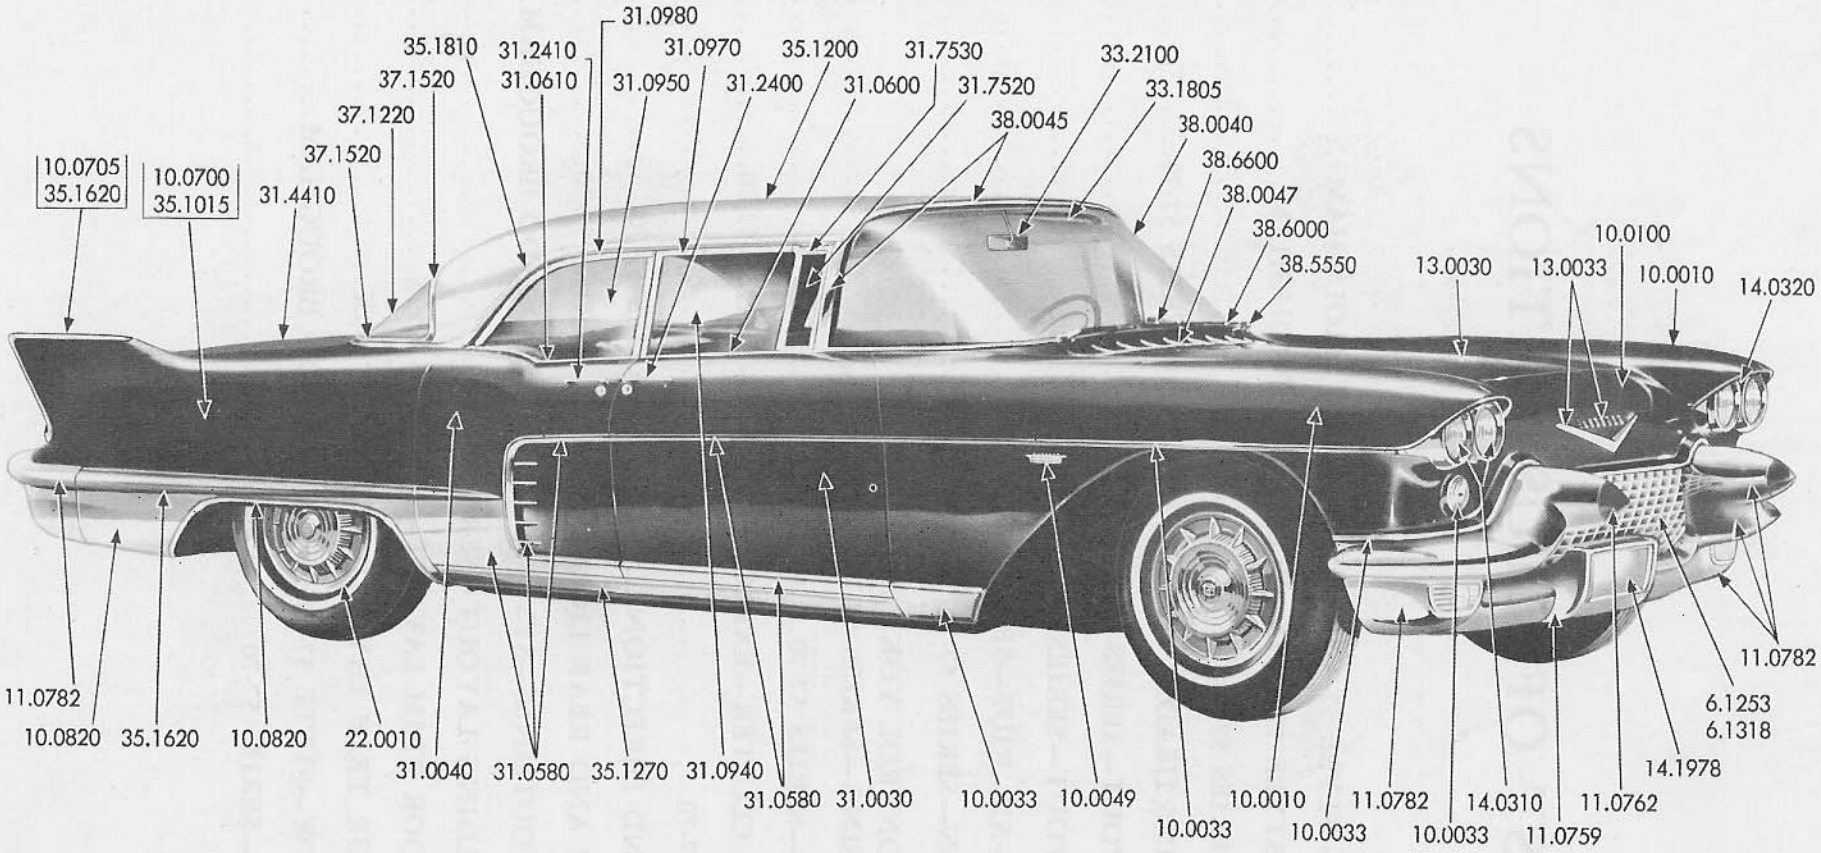


RIGHT FRONT VIEW—STYLE 57-7059X—ELDORADO BROUGHAM

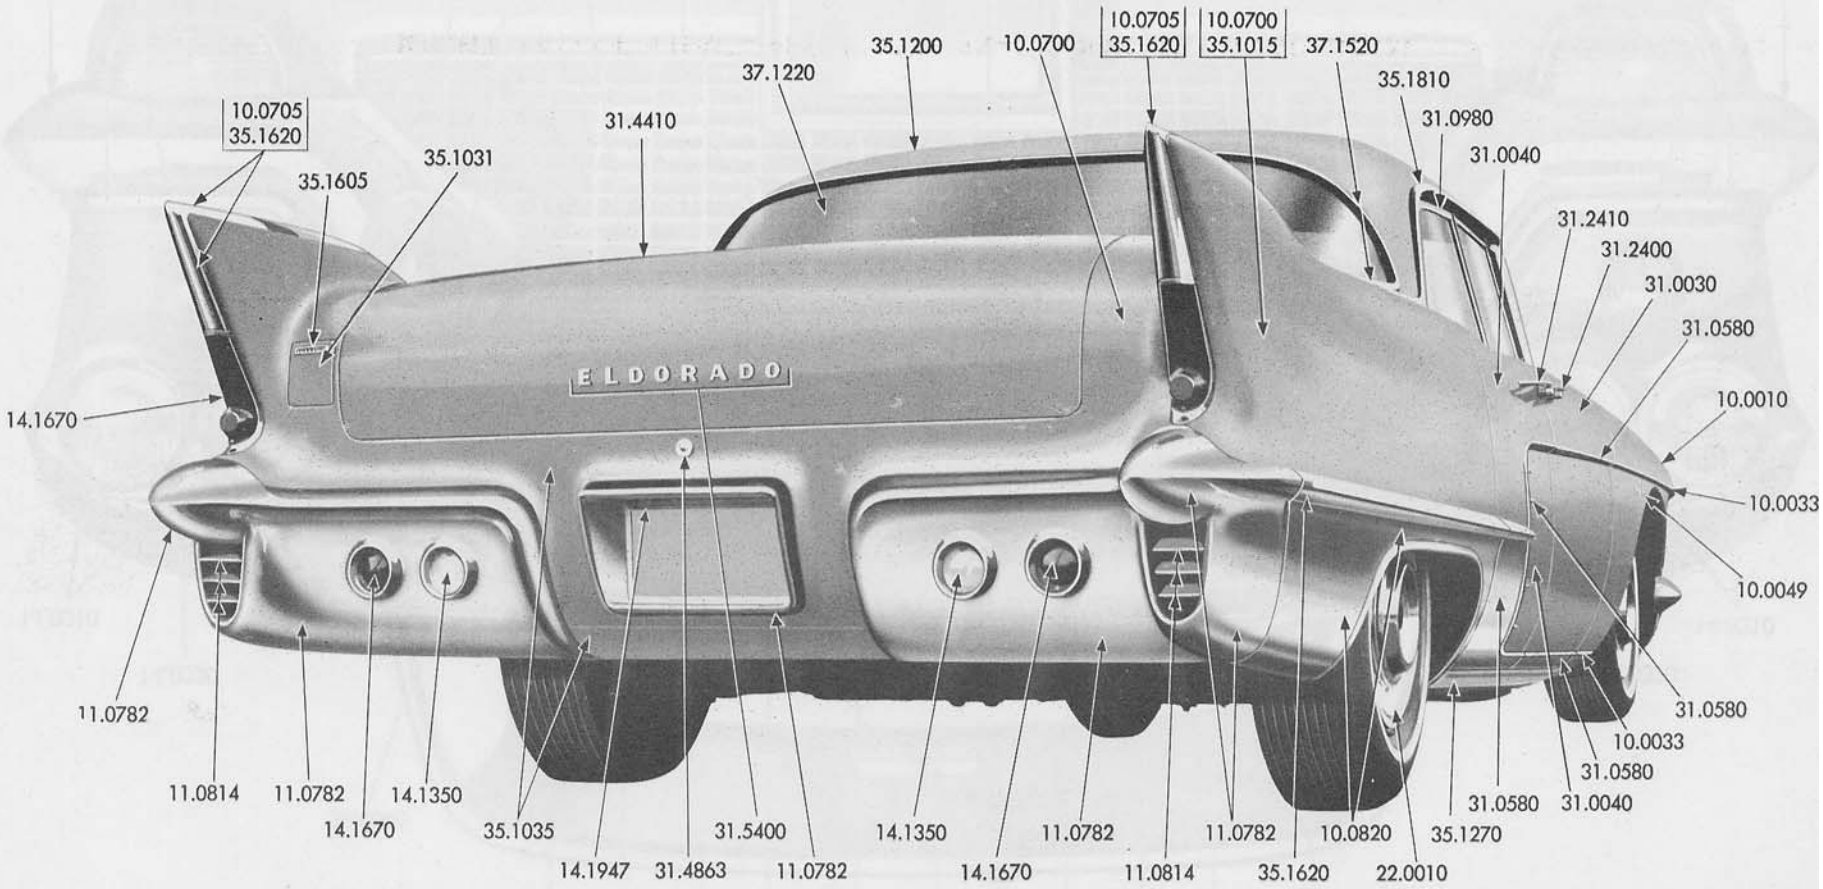


RIGHT REAR VIEW—STYLE 57-7059X—ELDORADO BROUGHAM

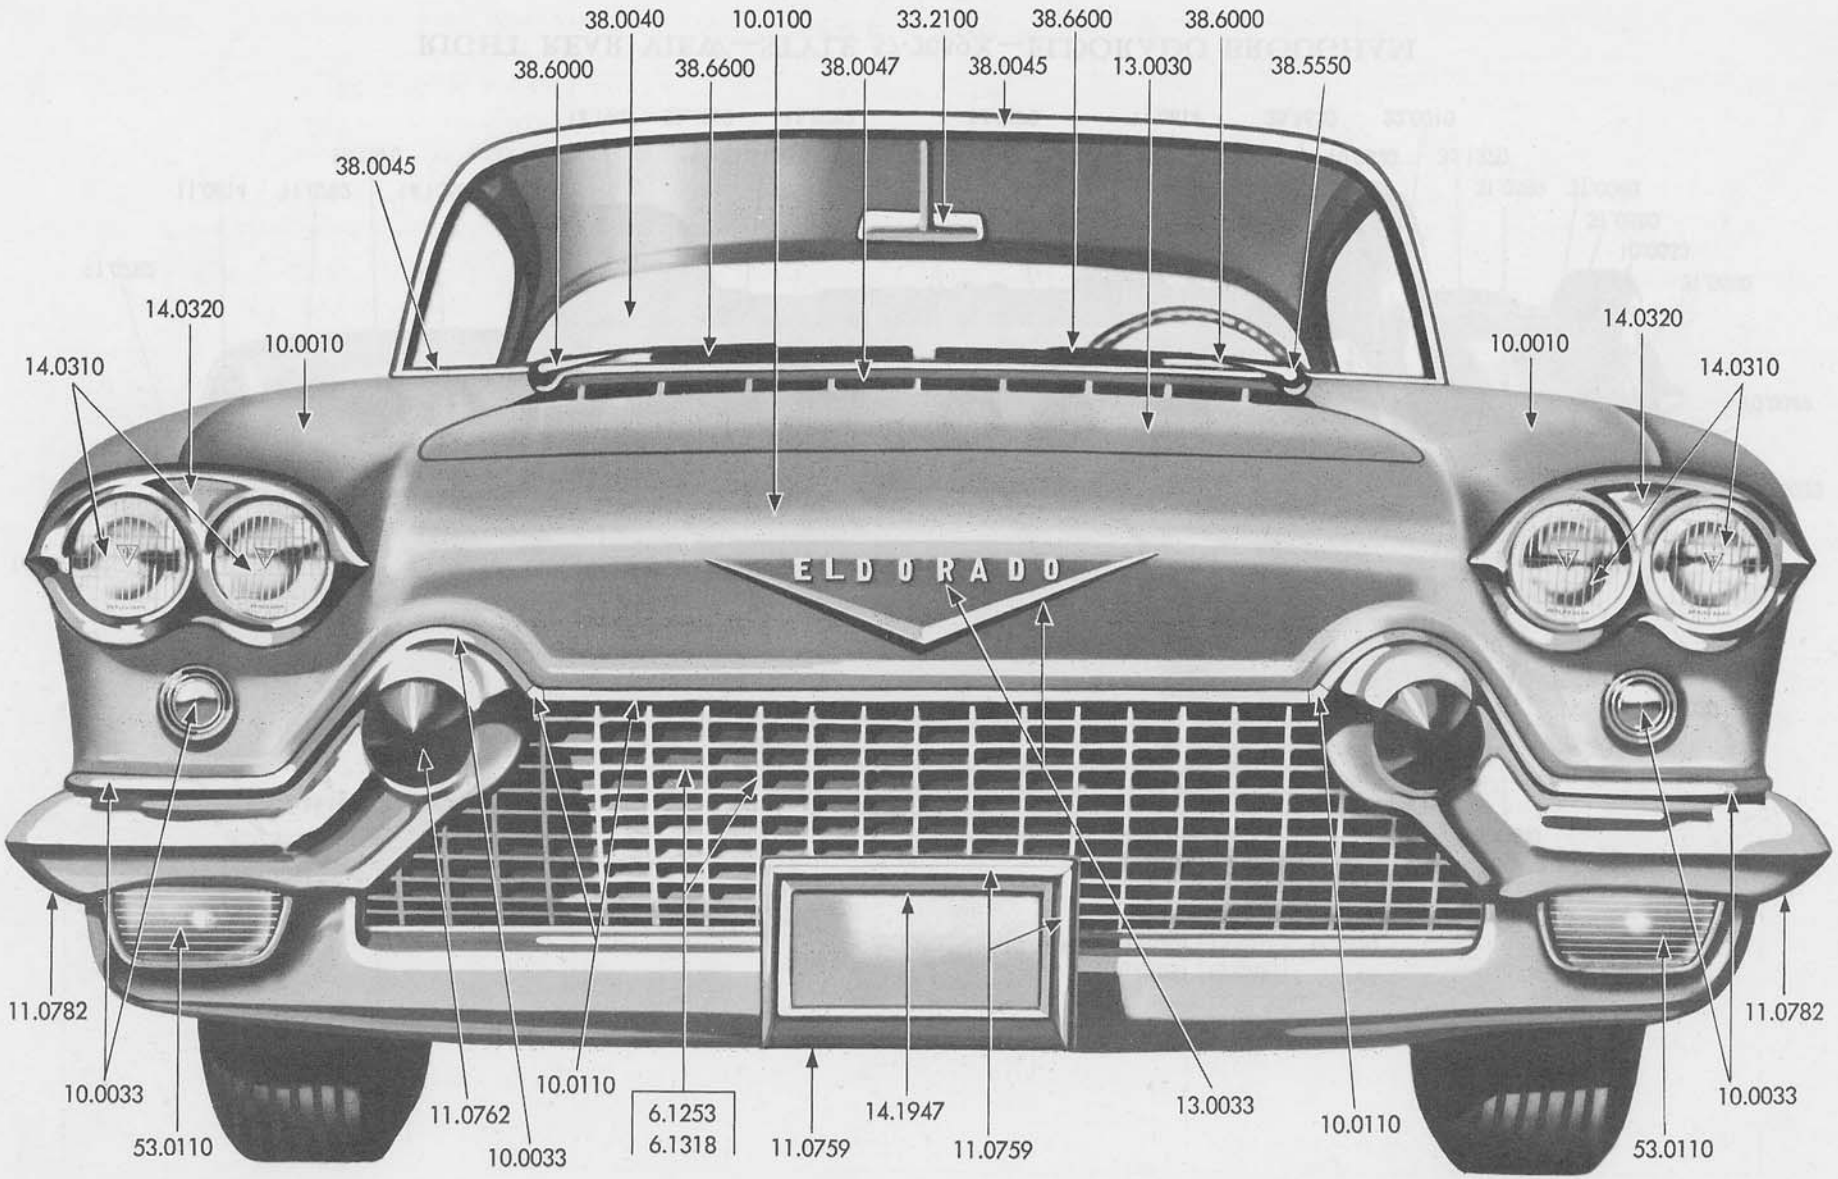

FRONT END VIEW—SERIES 57-70

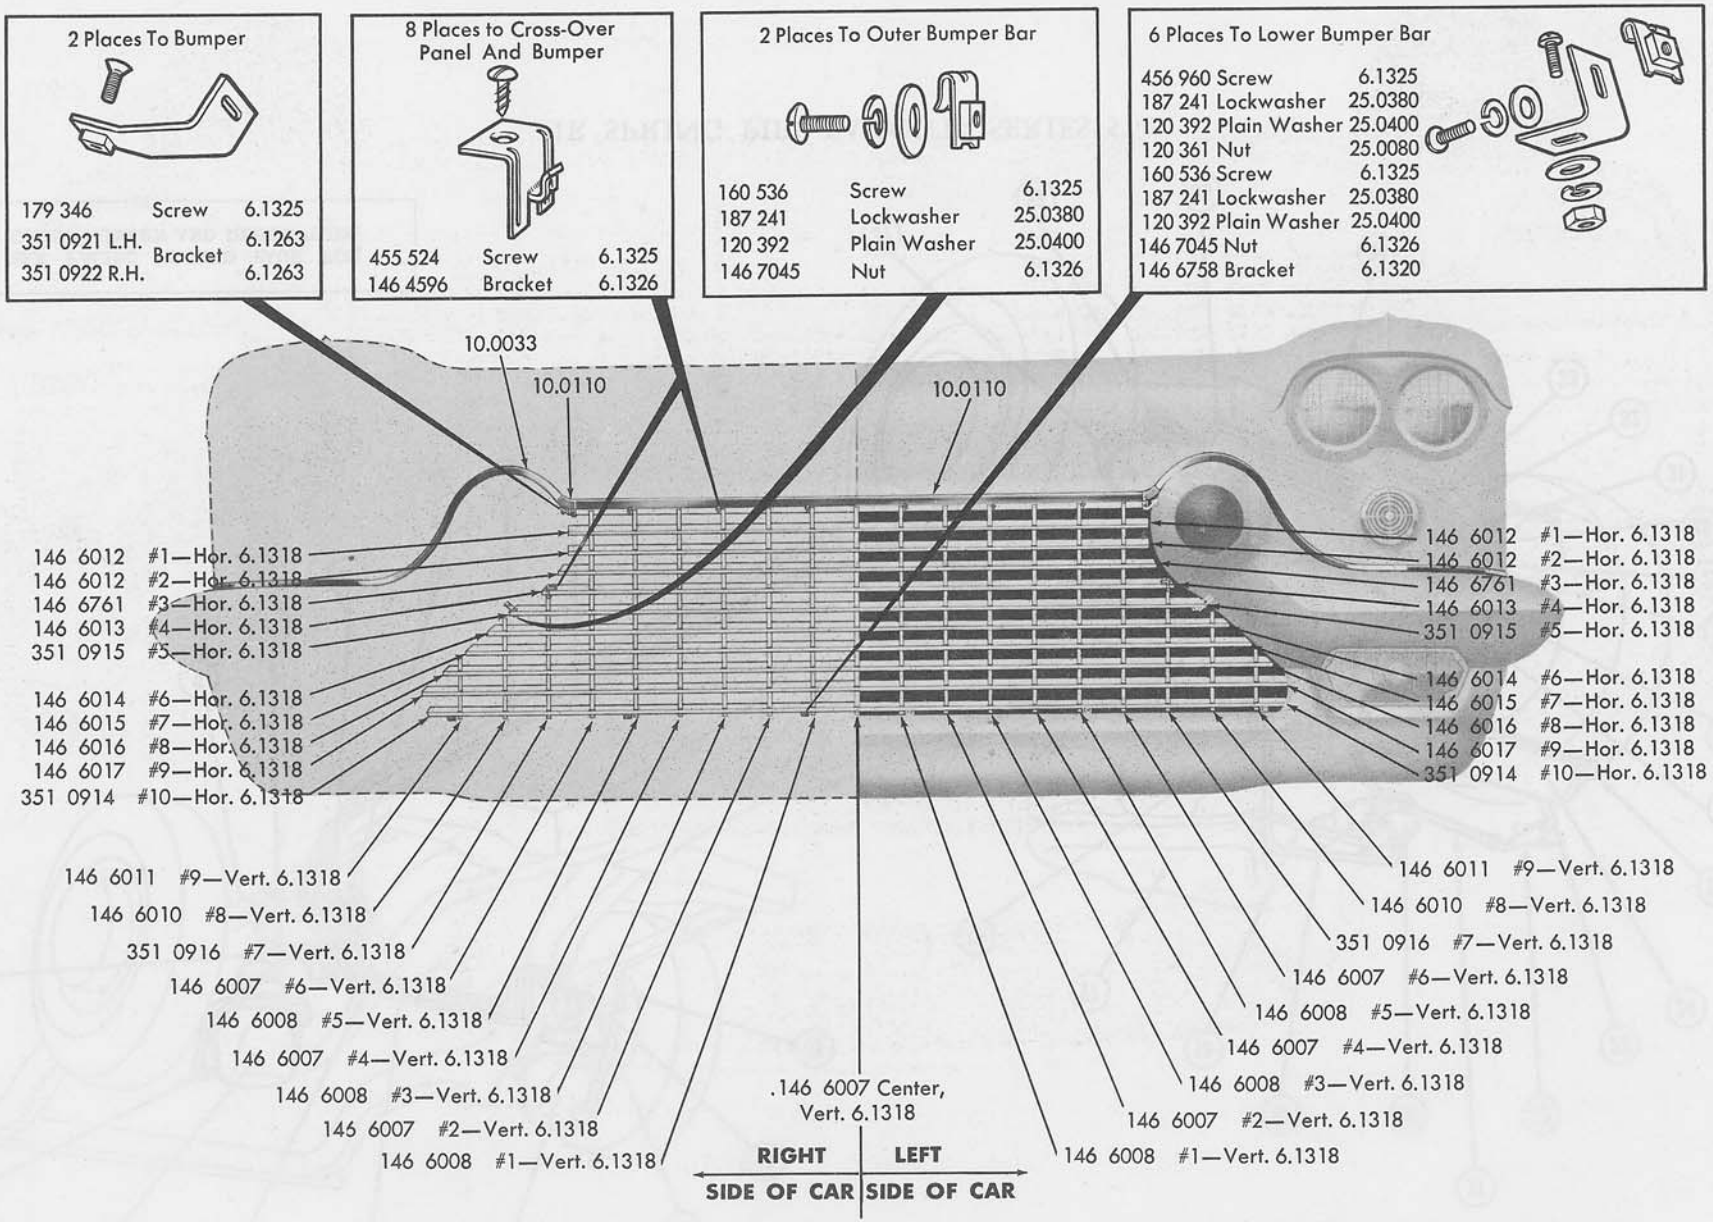

RADIATOR GRILLE, FINS HEADER AND MOLDINGS—SERIES 57-70

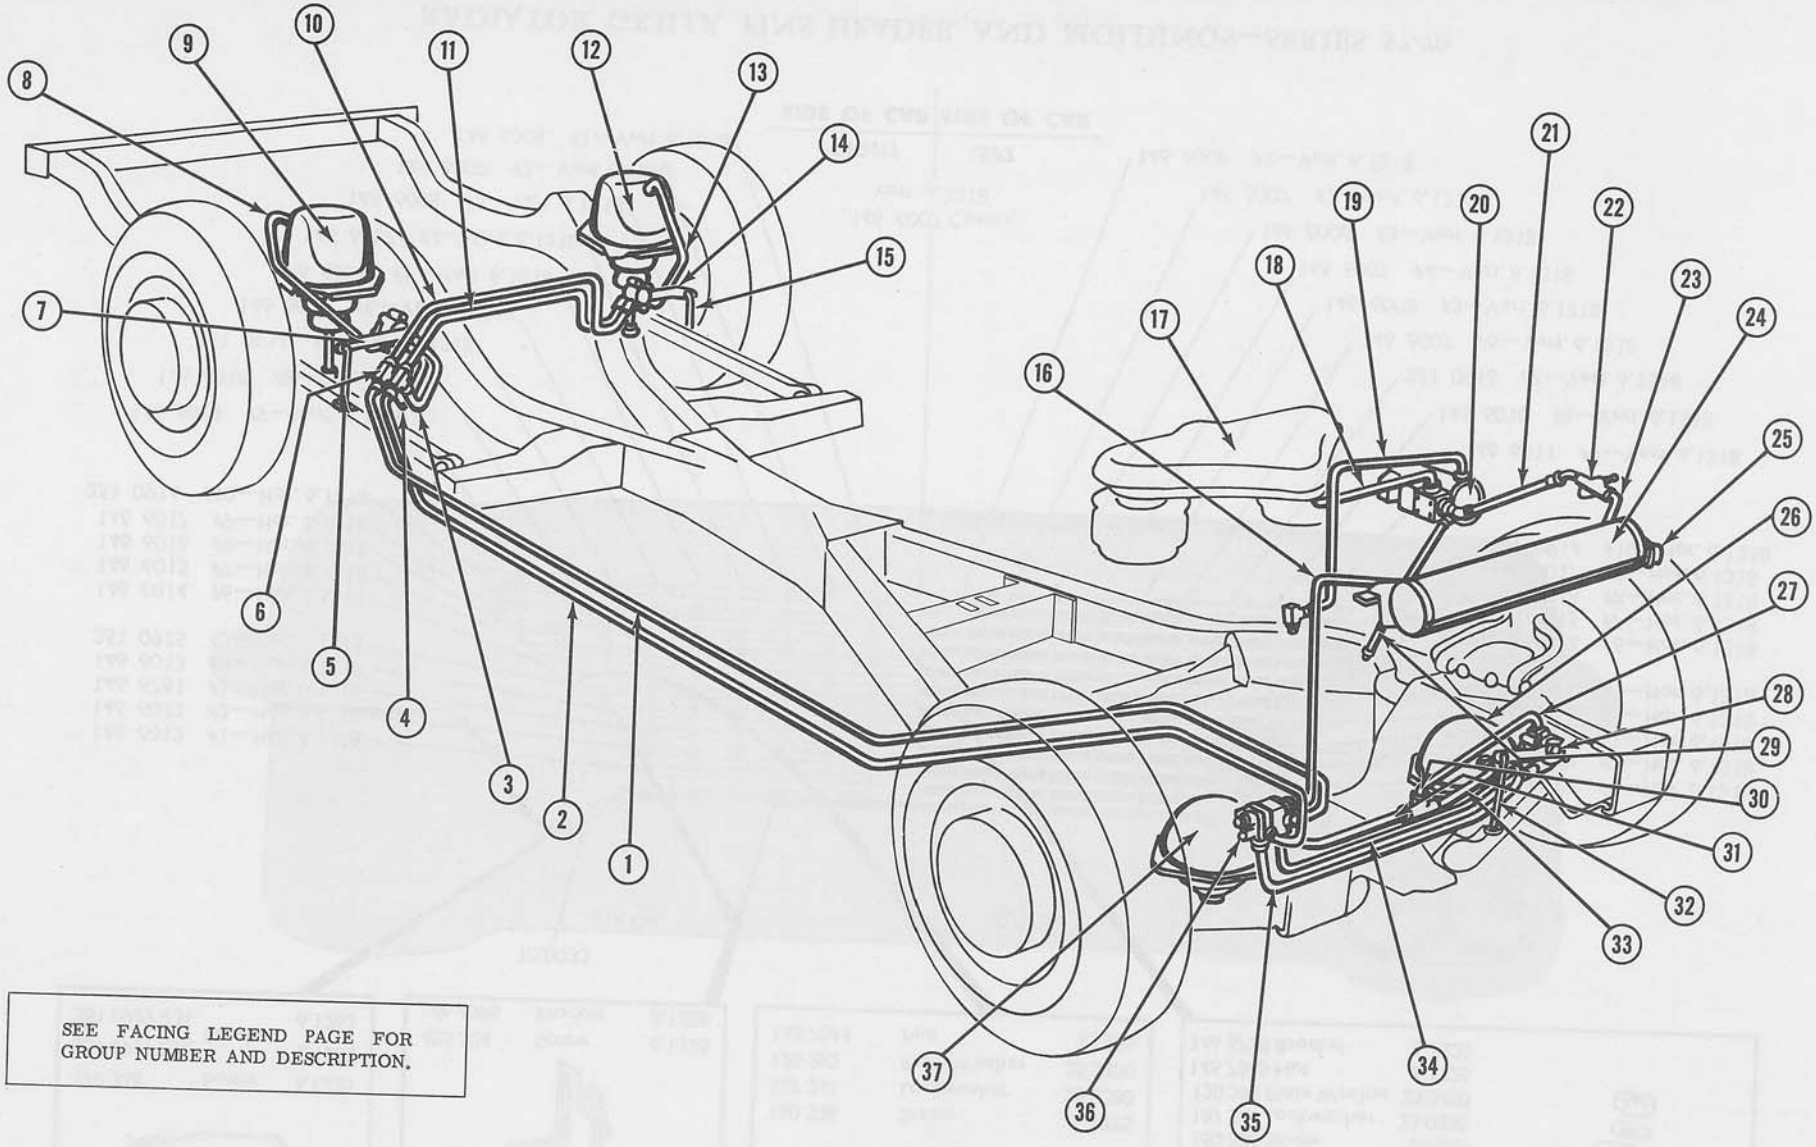


SEE FACING LEGEND PAGE FOR GROUP NUMBER AND DESCRIPTION.

AIR SPRING PIPE LAYOUT—SERIES 57-70


ILLUSTRATION LEGEND

AIR SPRING PIPE LAYOUT


Key No.	Part No.	Group No.	Description
1	109 8693	17.2250	Pipe, solenoid to rear tee fitting, (pressure)
2	109 8693	17.2250	Pipe, solenoid to rear tee fitting, (exhaust)
3	109 8696	17.2250	Pipe, rear tee fitting to RH rear leveling valve (exhaust)
4	109 8696	17.2250	Pipe, rear tee fitting to RH rear leveling valve (pressure)
5	146 6475	17.2190	Link, adjusting, rear spring leveling valve
6	146 7325	17.2285	Tee, solenoid pipes to leveling valve
7	553 6758	17.2170	Valve, air spring leveling, RH rear
8	109 8688	17.2250	Pipe, rear check valve to rear air dome, RH
9	146 5747	17.2000	Dome, rear air spring, RH
10	109 8694	17.2250	Pipe, rear tee fitting to LH rear leveling valve (exhaust)
11	109 8694	17.2250	Pipe, rear tee fitting to LH rear leveling valve (pressure)
12	146 5746	17.2000	Dome, rear air spring, LH
13	109 8688	17.2250	Pipe, rear check valve to rear air dome, LH
14	553 6758	17.2170	Valve, air spring leveling, LH rear
15	146 6475	17.2190	Link, adjusting, rear spring leveling valve
16	109 8689	17.2250	Pipe, air tank to solenoid
17	(see Parts List)	12.1170-80	Air cleaner
18	109 8356	17.2350	Hose, air intake, air cleaner to compressor (rubber-9" long)
19	145 7313	17.1880	Oil pipe, engine to compressor. Oil feed
20	530 2935	17.1800	Compressor, air
21	146 7256	17.2350	Hose, air compressor to service tee (flexible)
22	534 1736	17.2305	Tee, service, air tank to air lines
23	109 8695	17.2250	Pipe, air tank to service tee
24	146 7806	17.2300	Tank, air
25	150 8641	17.2310	Switch, air pressure indicator
26	351 0877	17.2000	Dome, front air spring, LH
27	109 8696	17.2250	Pipe, front leveling valve to check valve tee
28	553 6759	17.2170	Valve, air spring leveling, front
29	146 7314	17.1880	Oil pipe, engine to compressor. Oil return
30	553 3166	17.2290	Tee, check, front air springs
31	109 8688	17.2250	Pipe, front check tee to RH front air dome
32	146 6476	17.2190	Link, adjusting, front spring leveling valve
33	109 8687	17.2250	Pipe, front check tee to LH front air dome
34	109 8689	17.2250	Pipe, control solenoid to front leveling valve (exhaust)
35	109 8689	17.2250	Pipe, control solenoid to front leveling valve (pressure)
36	553 3165	17.1900	Solenoid, air spring control
37	351 0964	17.2000	Dome, front air spring, RH

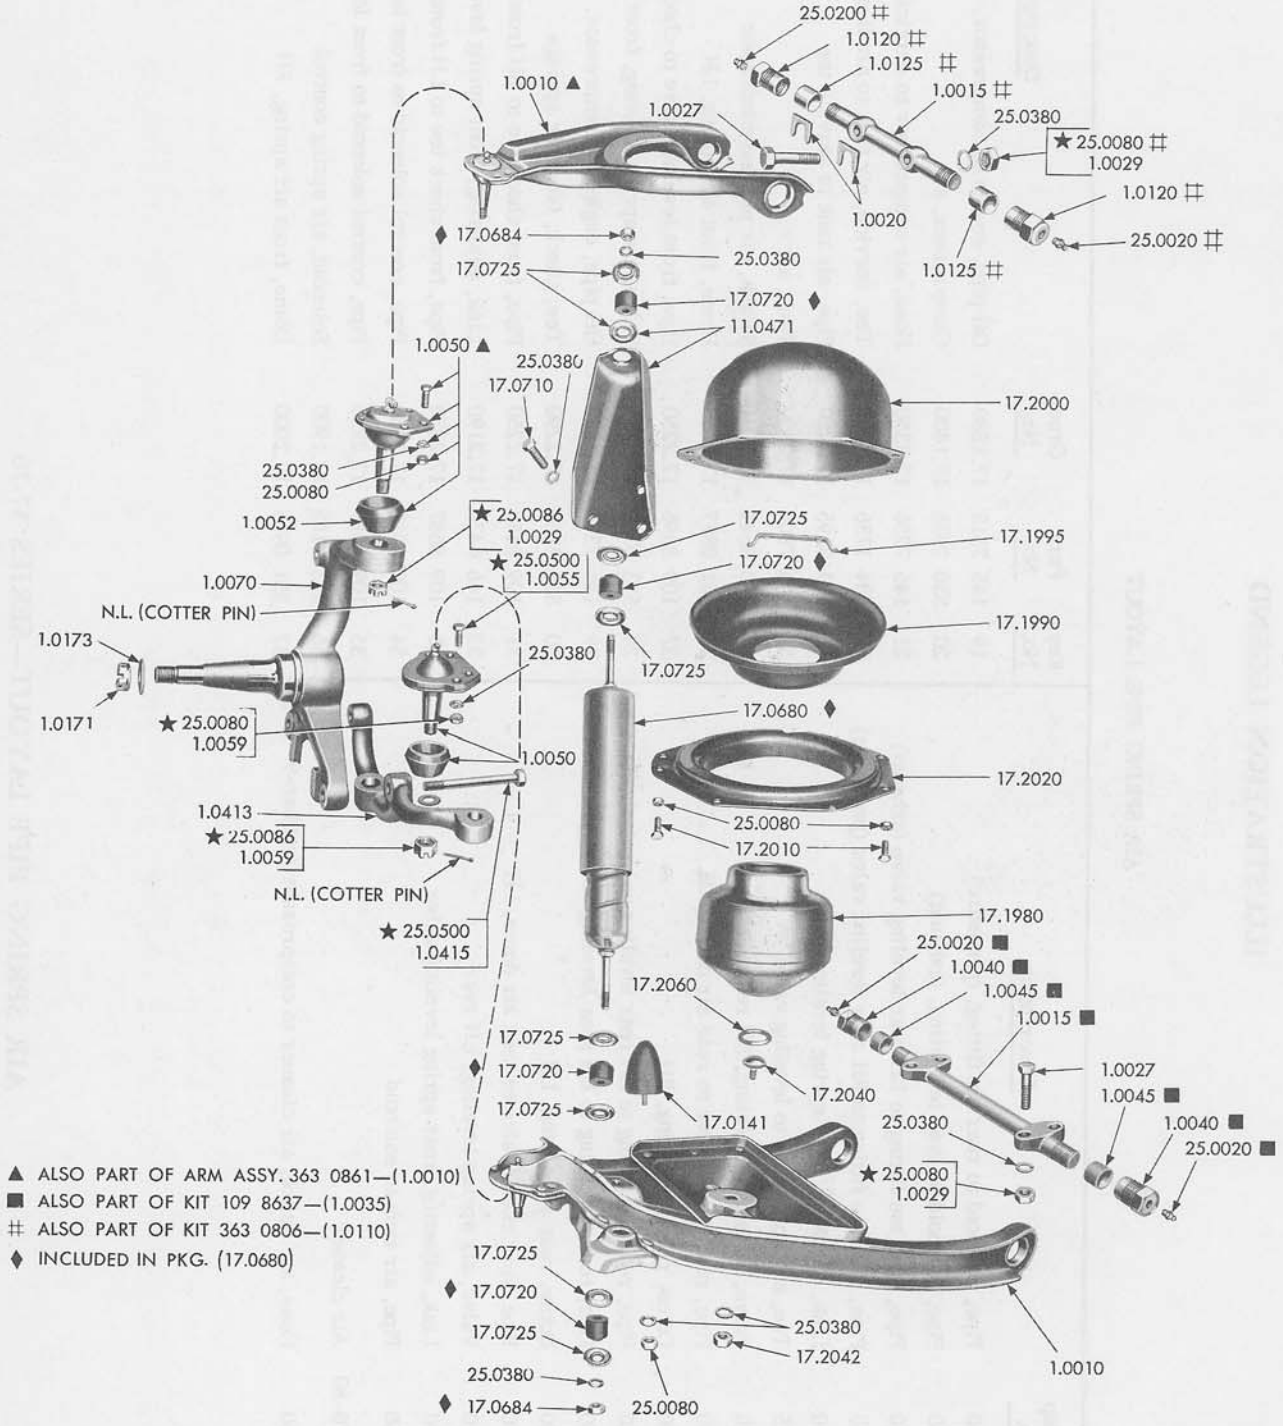


FRONT SUSPENSION—AIR RIDE—SERIES 57-70

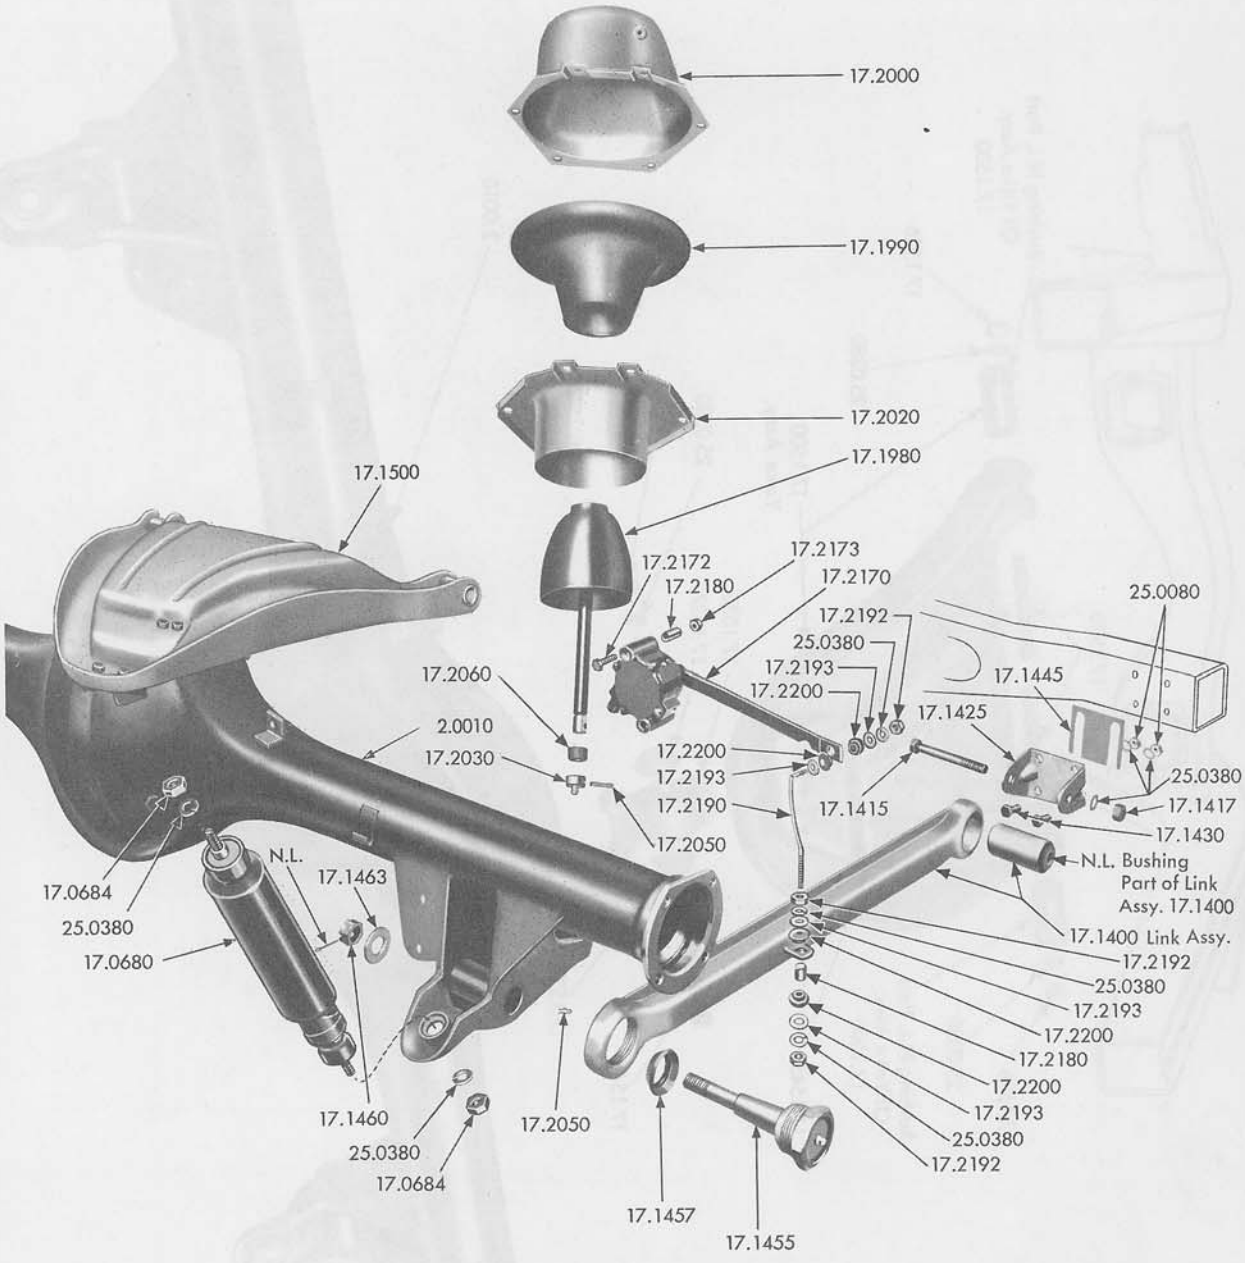


REAR AIR SUSPENSION—SERIES 57-70

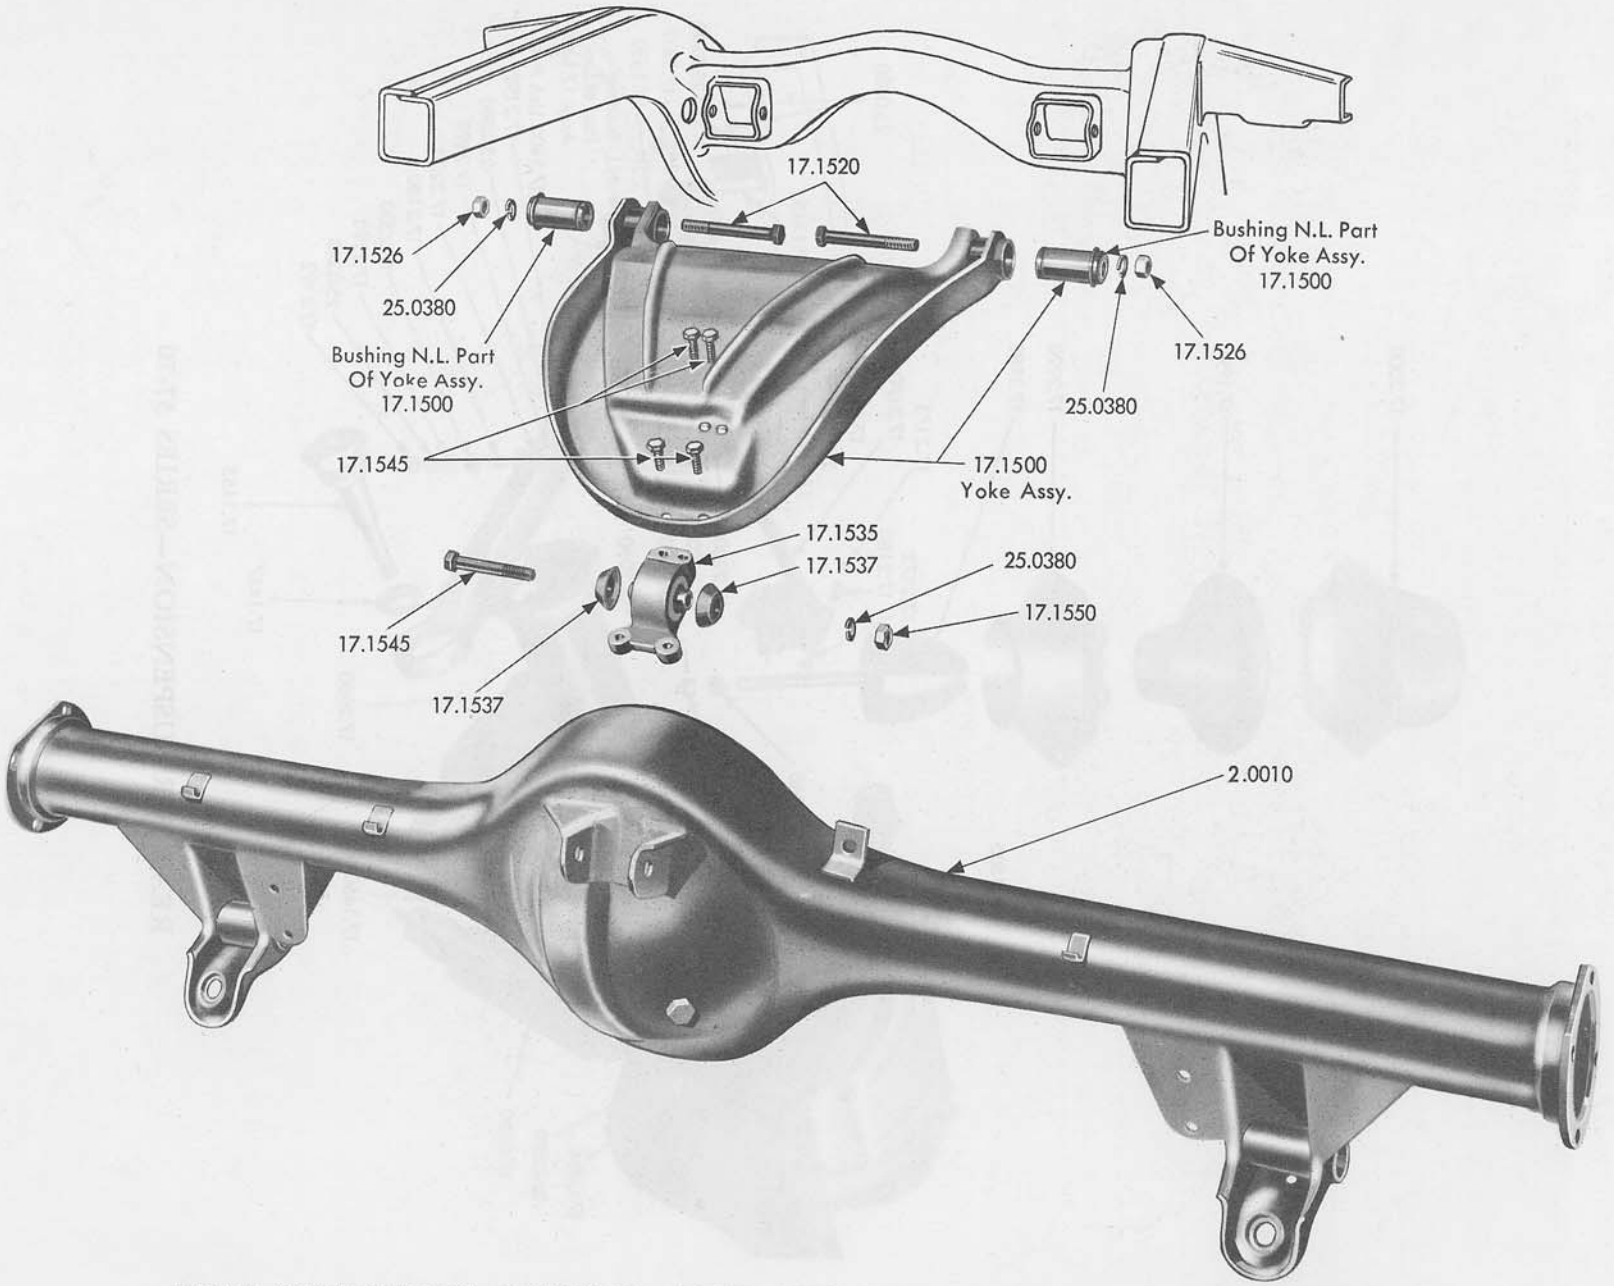


REAR SUSPENSION CONTROL YOKE AND REAR AXLE HOUSING—SERIES 57-70

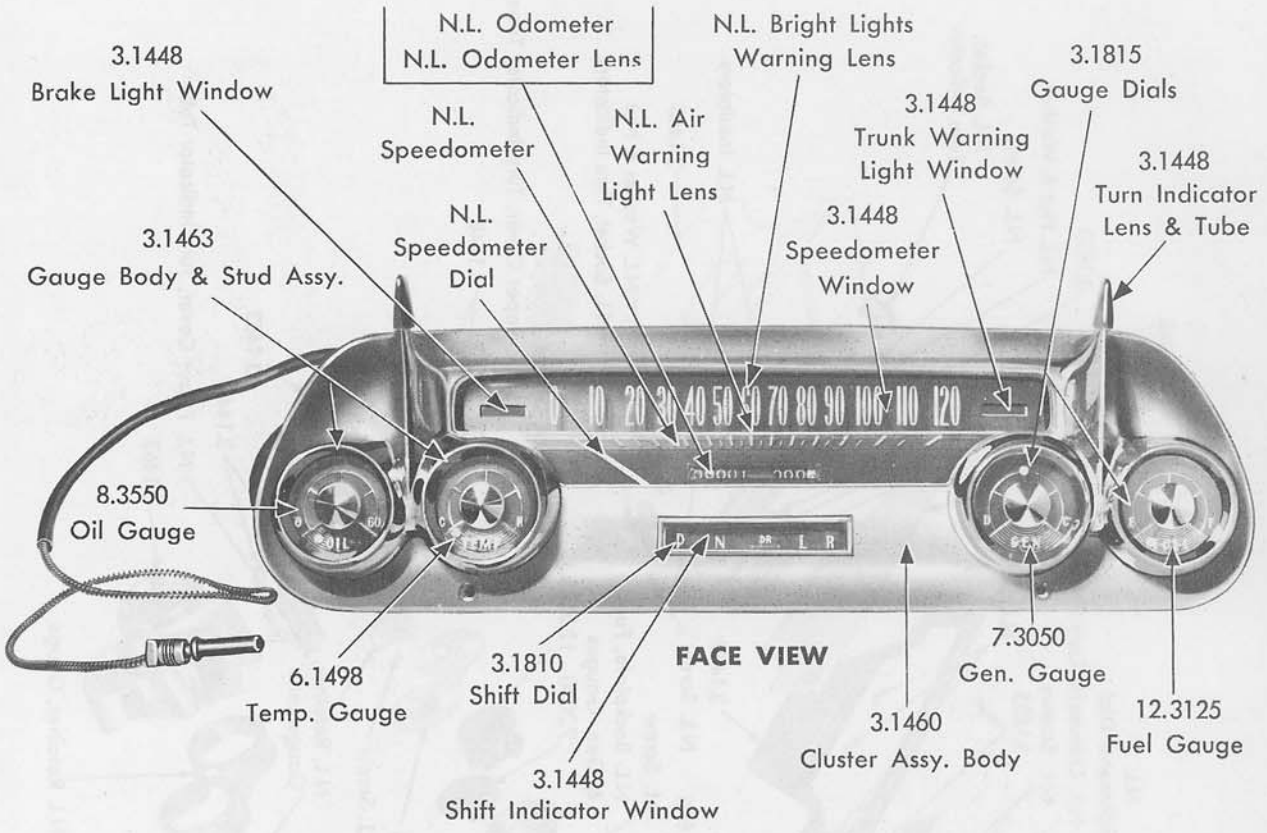


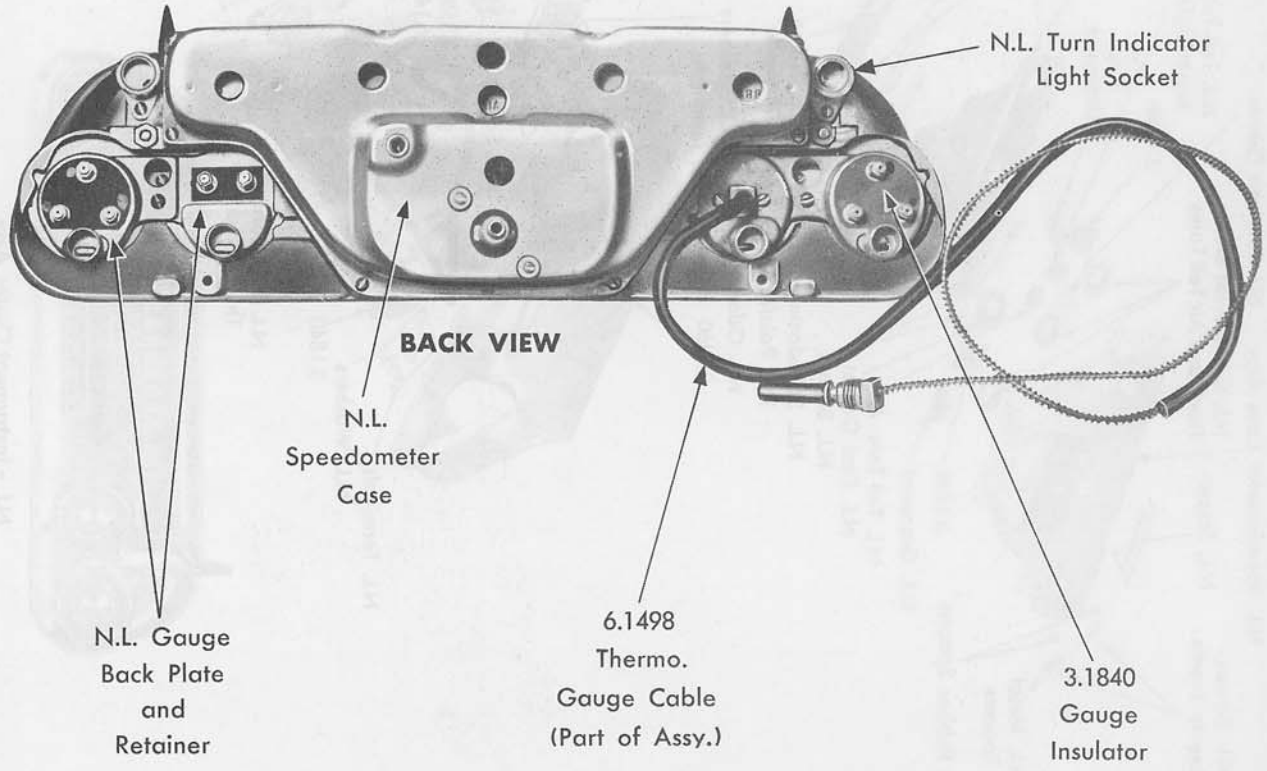


INSTRUMENT PANEL—SERIES 57-70

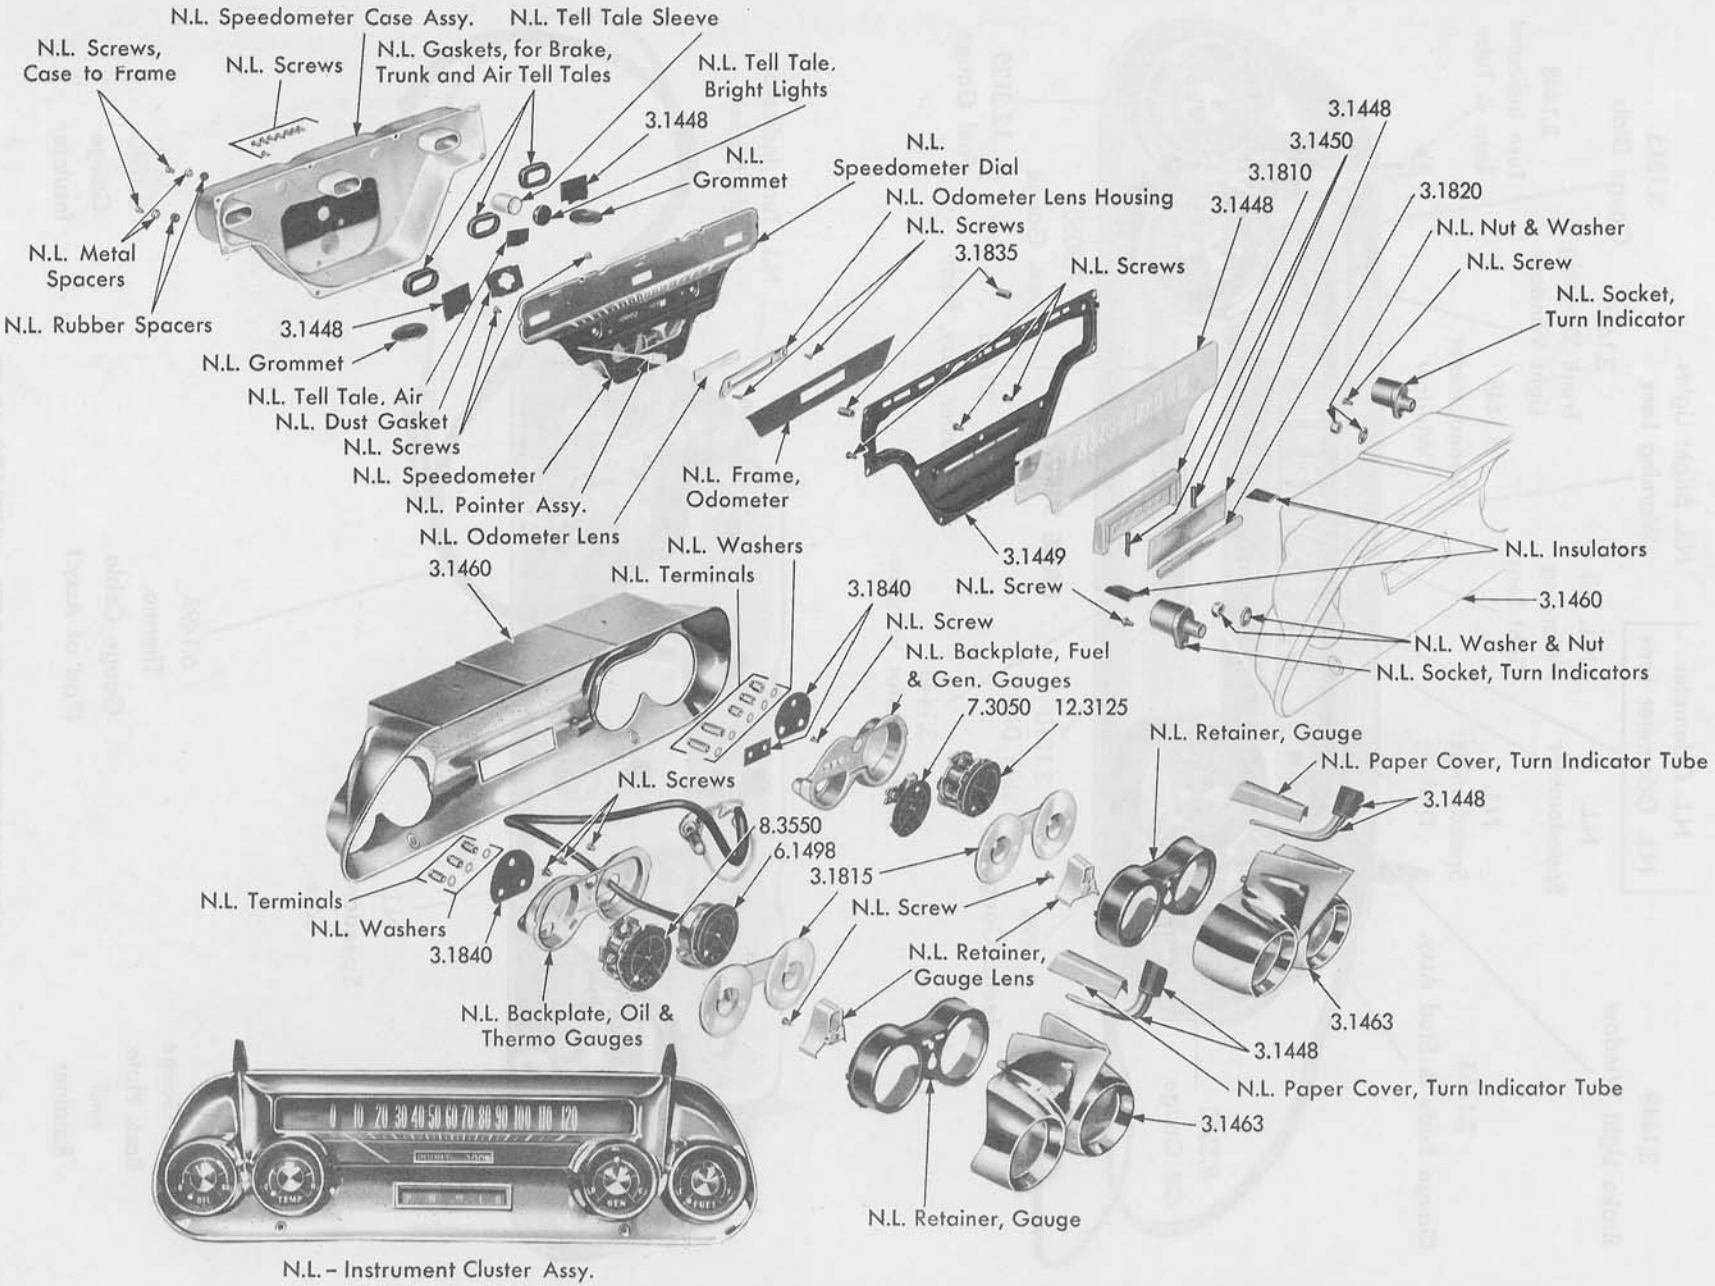


INSTRUMENT PANEL CLUSTER—EXPLODED VIEW—SERIES 57-70

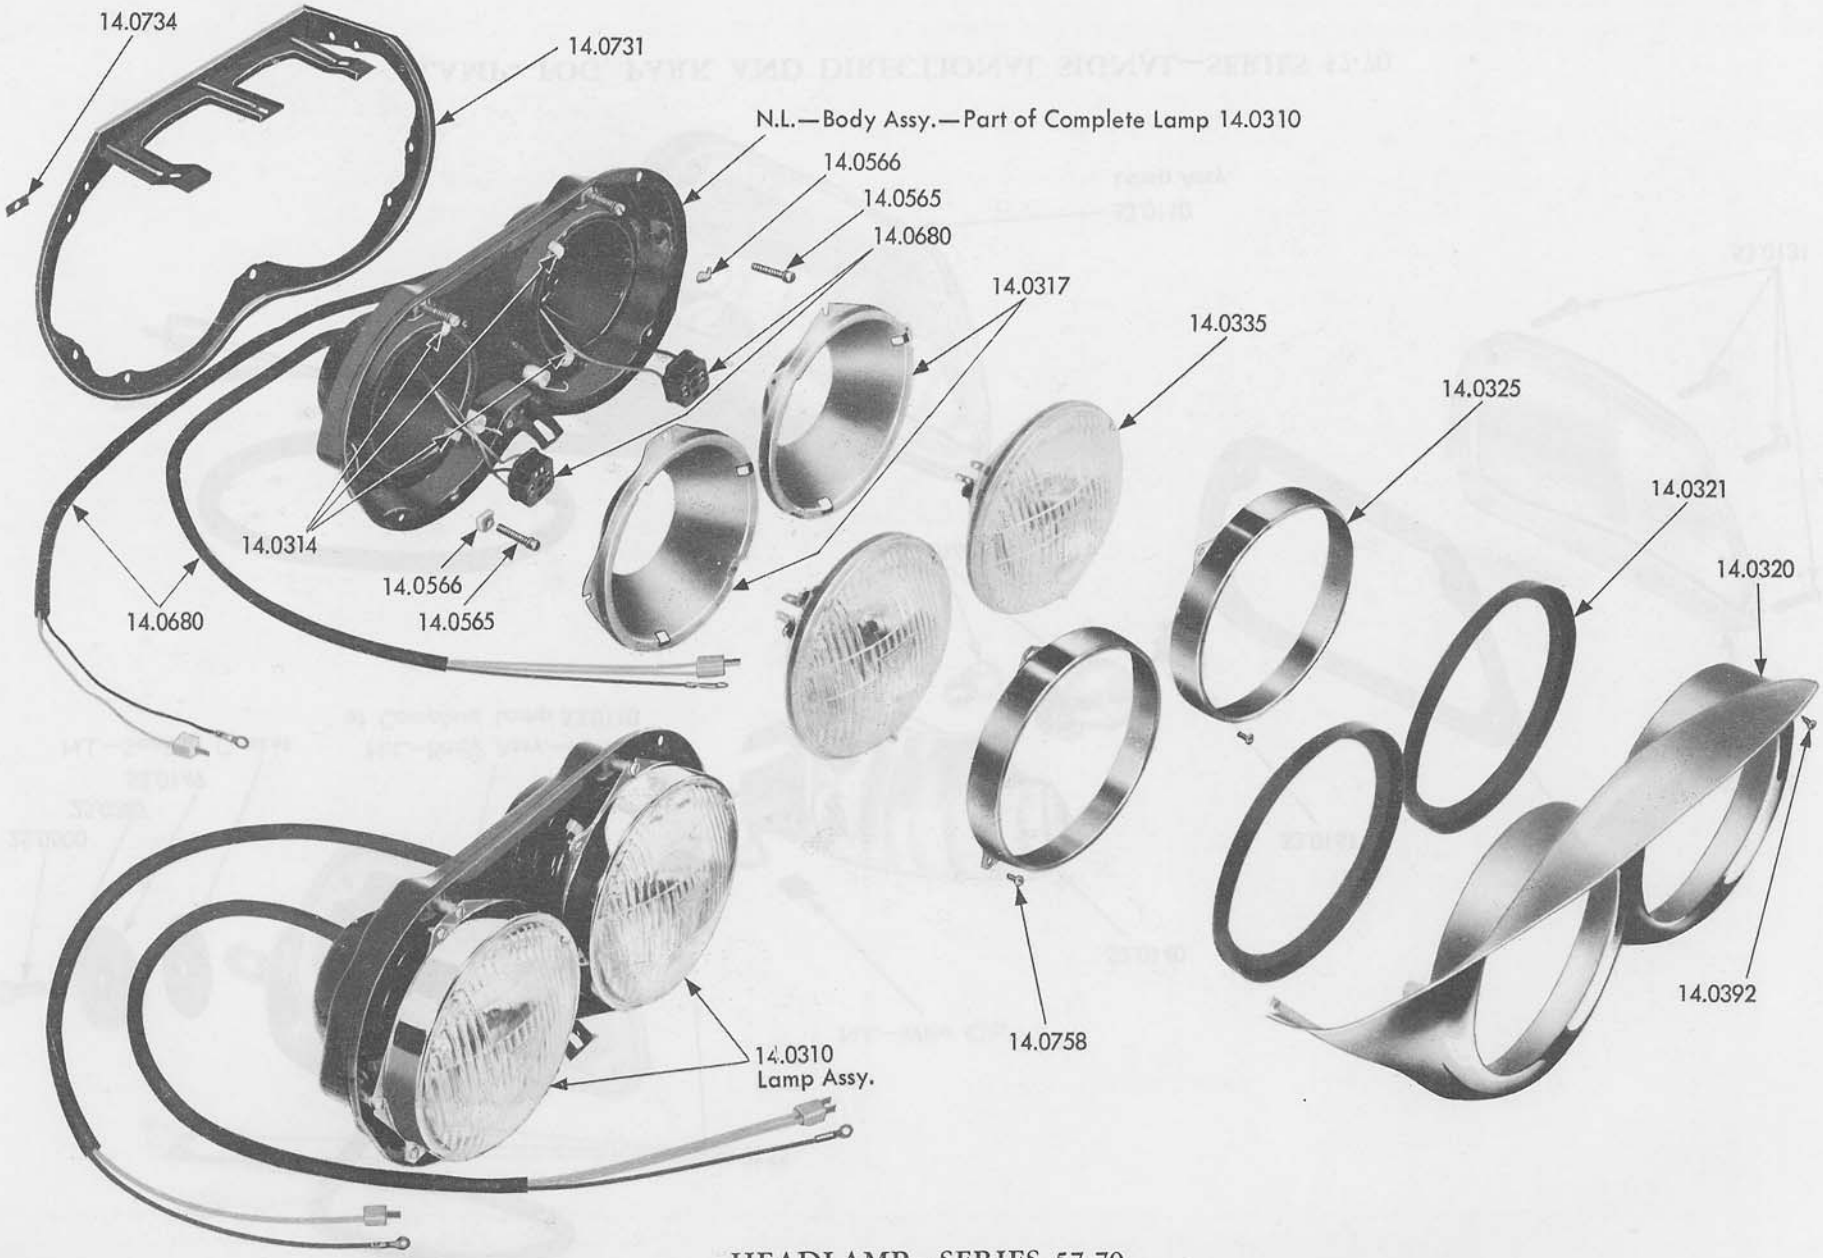


HEADLAMP—SERIES 57-70

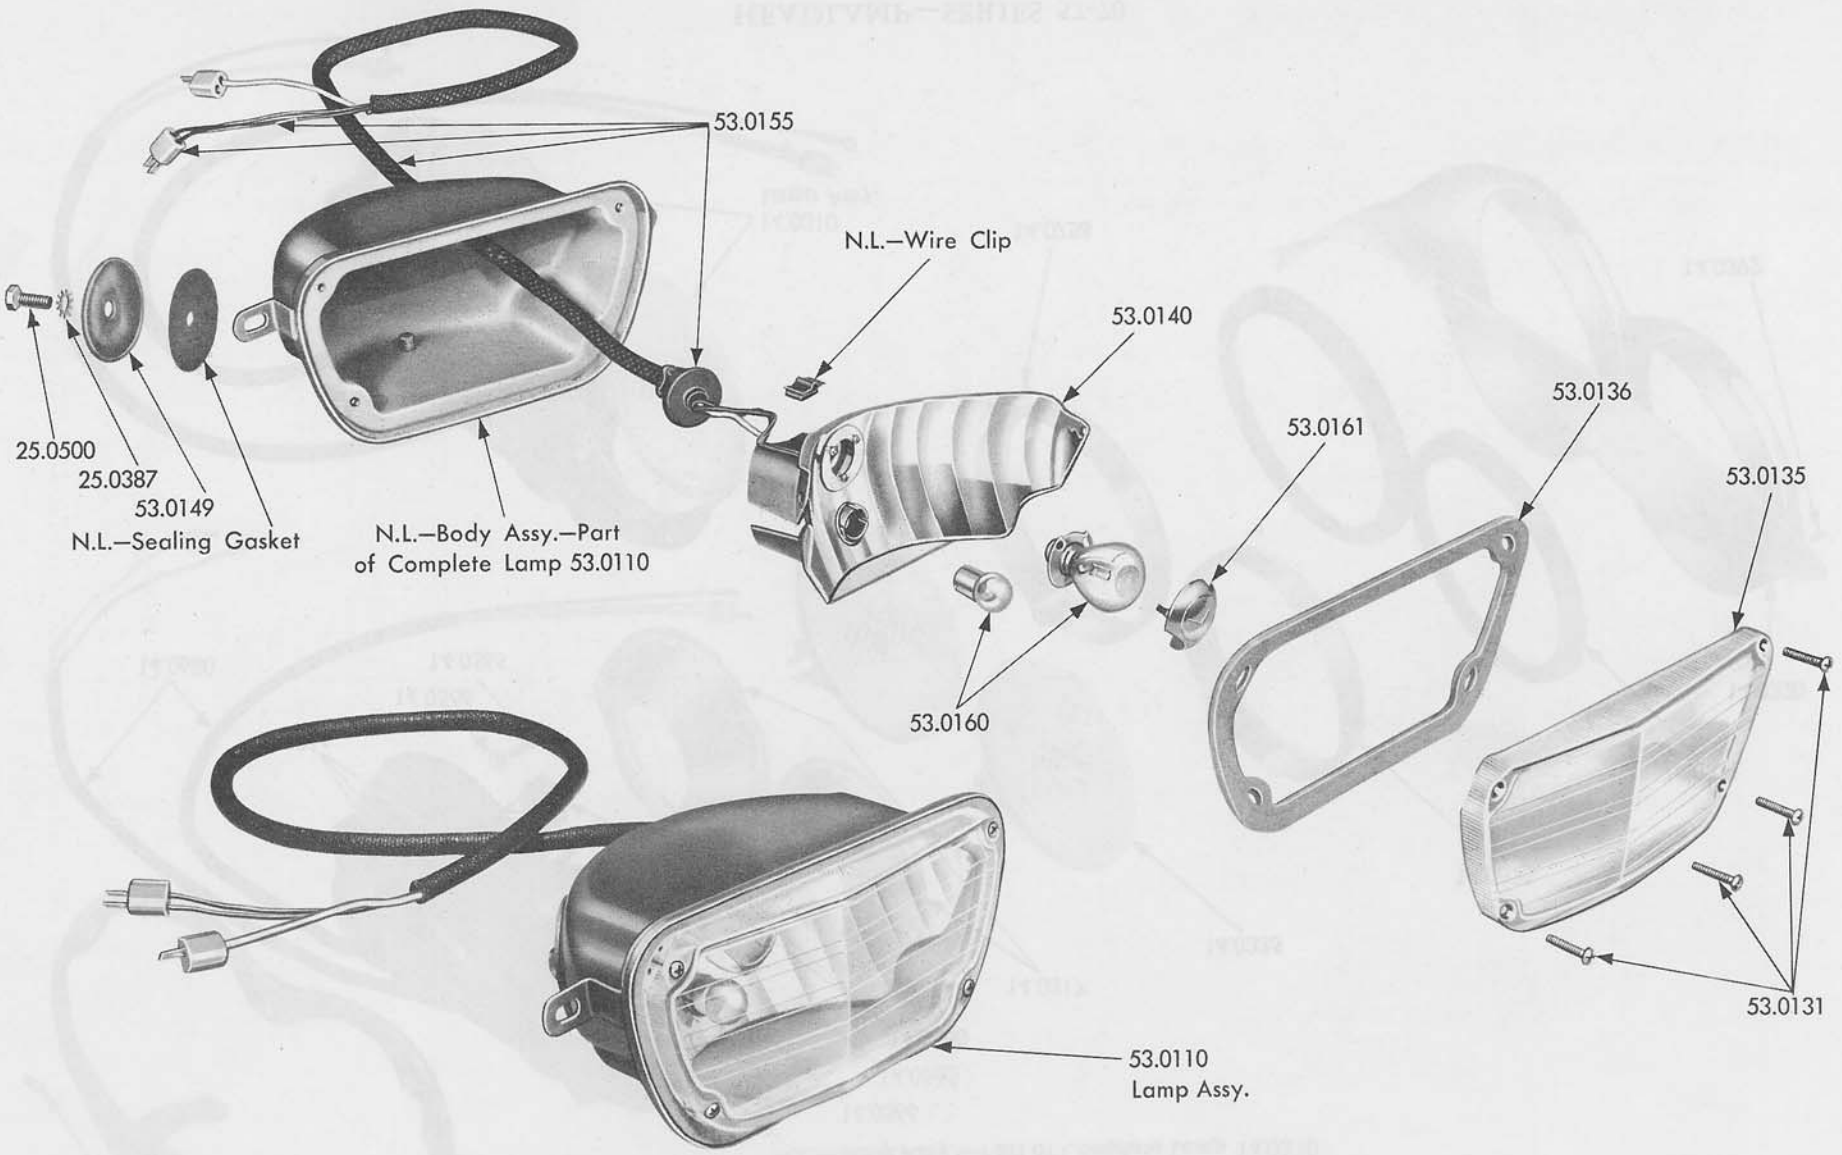


LAMP—FOG, PARK AND DIRECTIONAL SIGNAL—SERIES 57-70

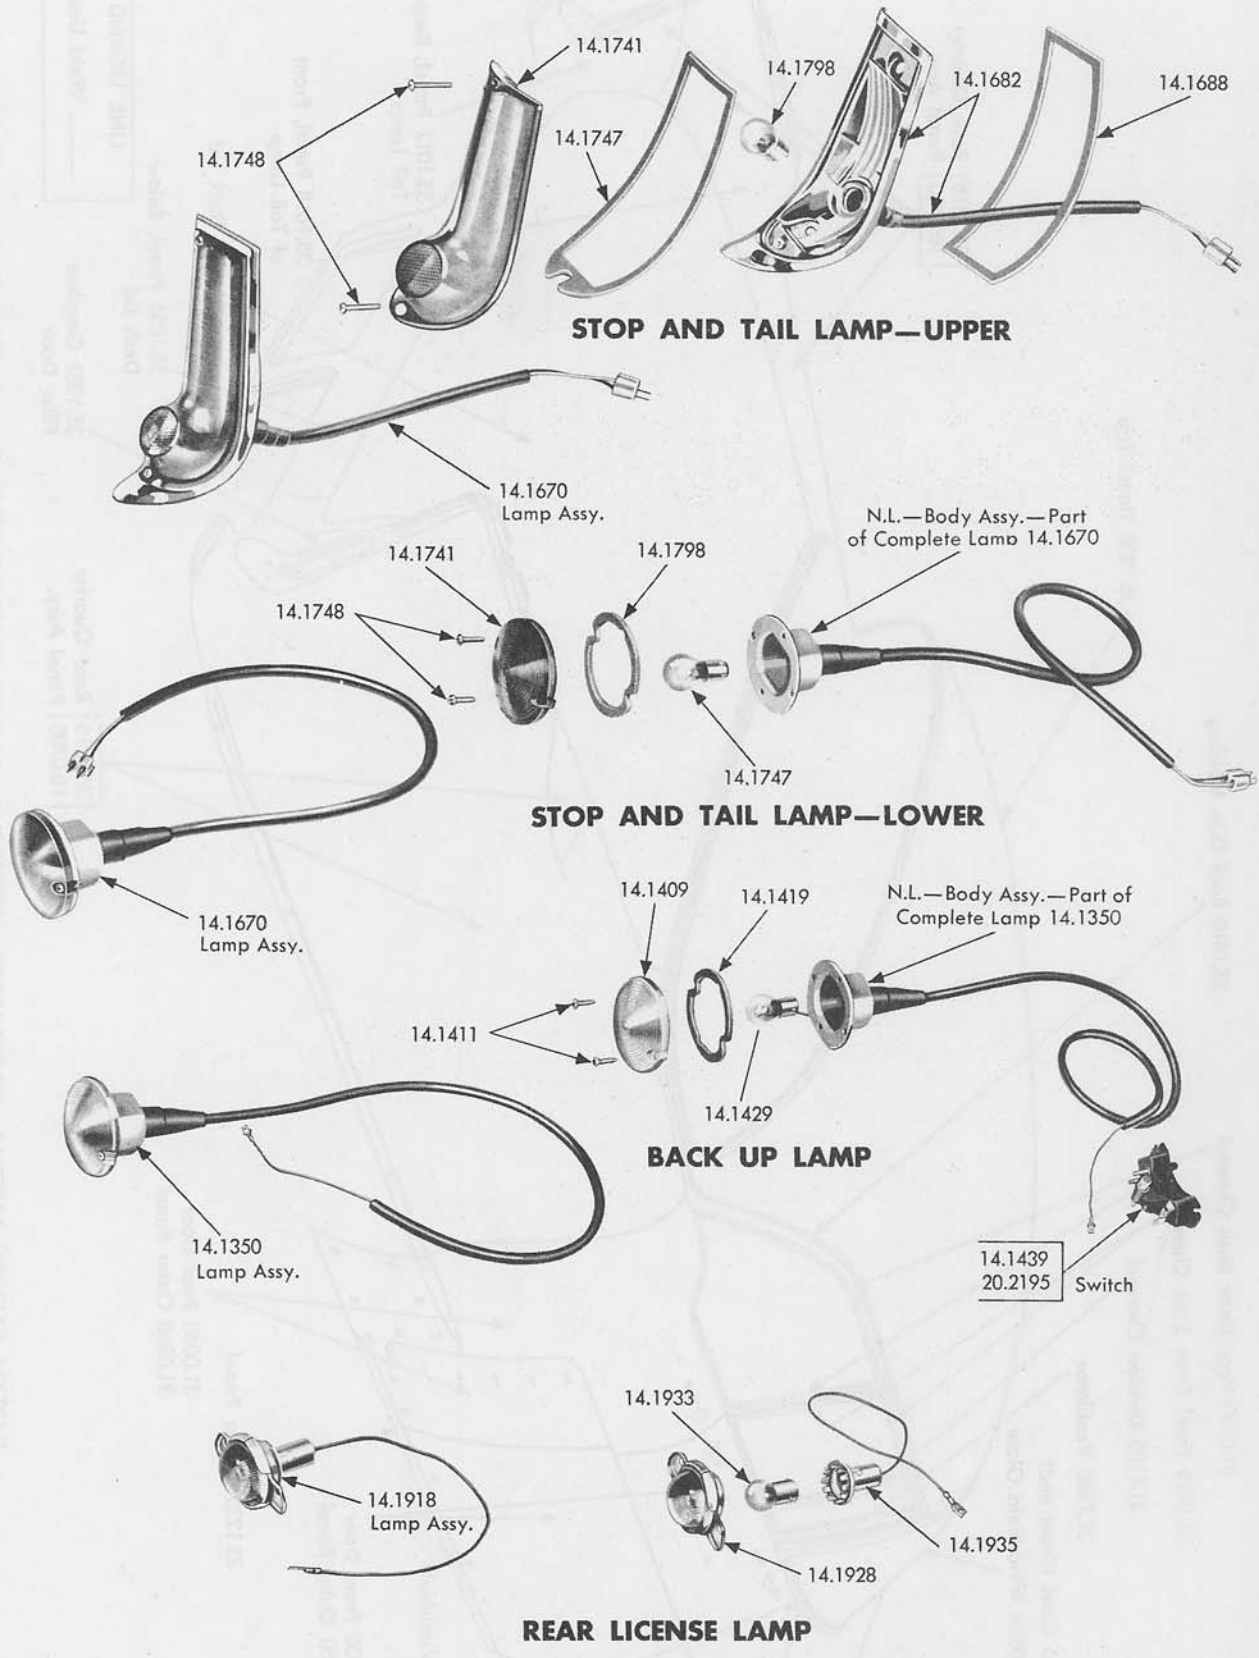


STOP, TAIL, BACK-UP AND REAR LICENSE LAMPS—SERIES 57-70

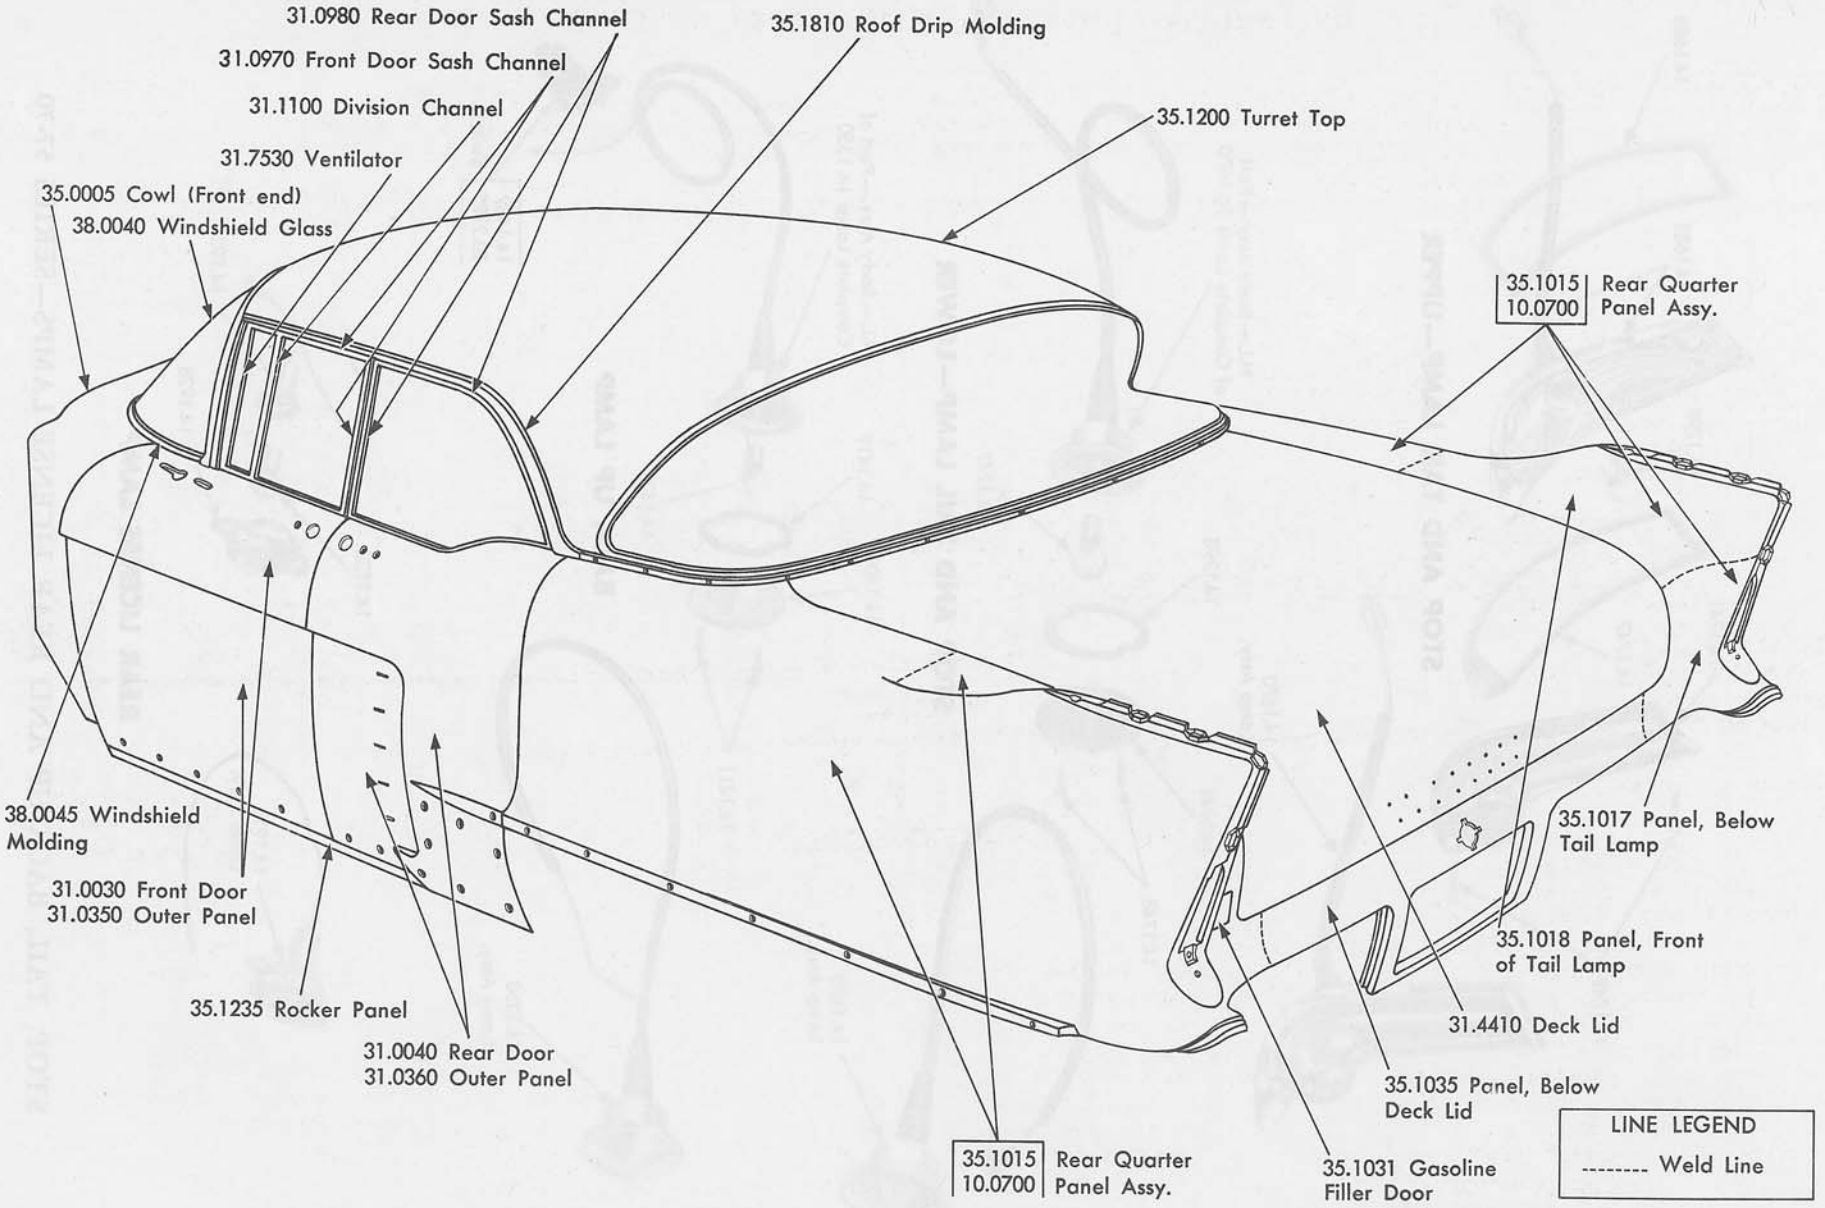


BODY SHEET METAL OUTLINES—STYLE 57-7059X—ELDORADO BROUGHAM

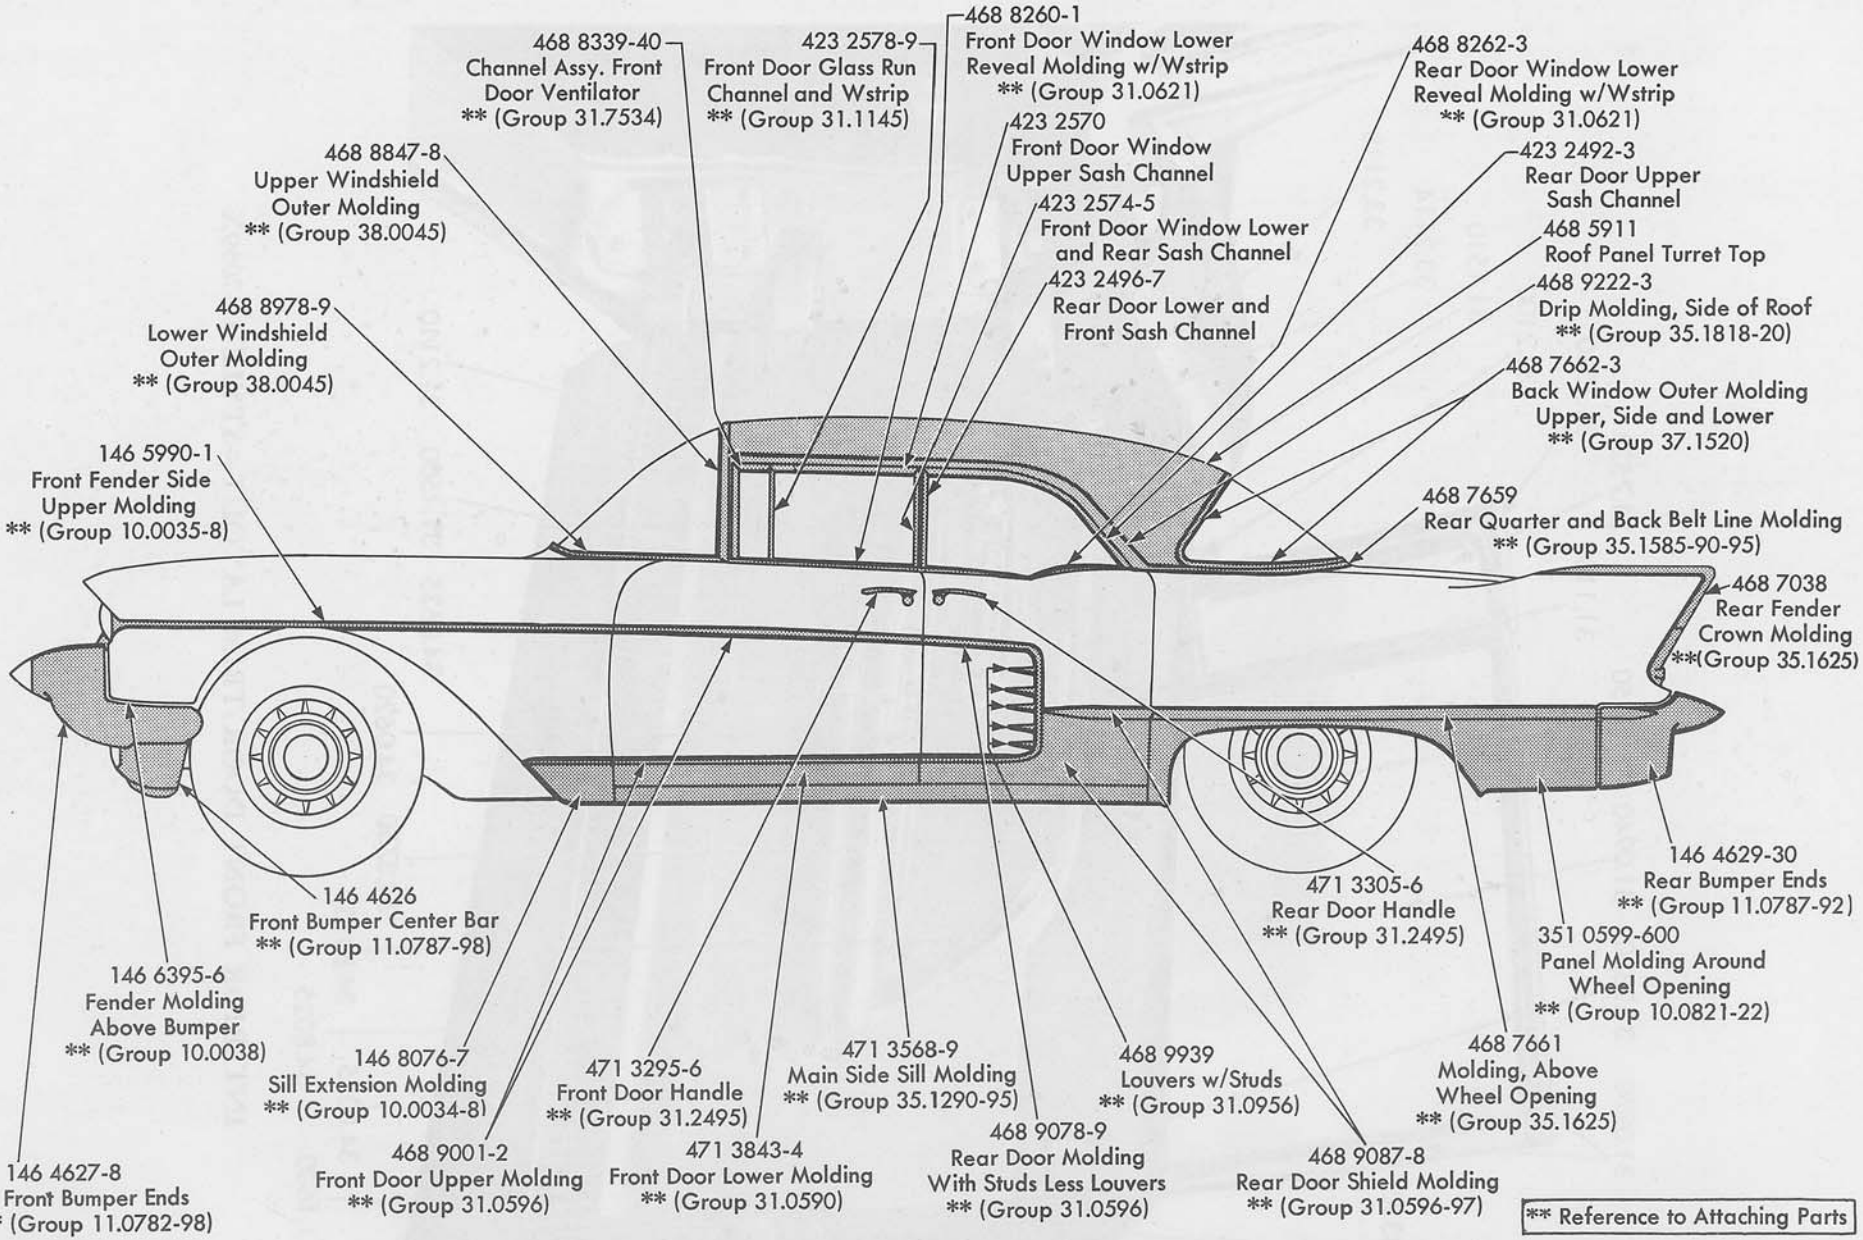


EXTERIOR TRIM MOLDING LAYOUT—SERIES 57-70...

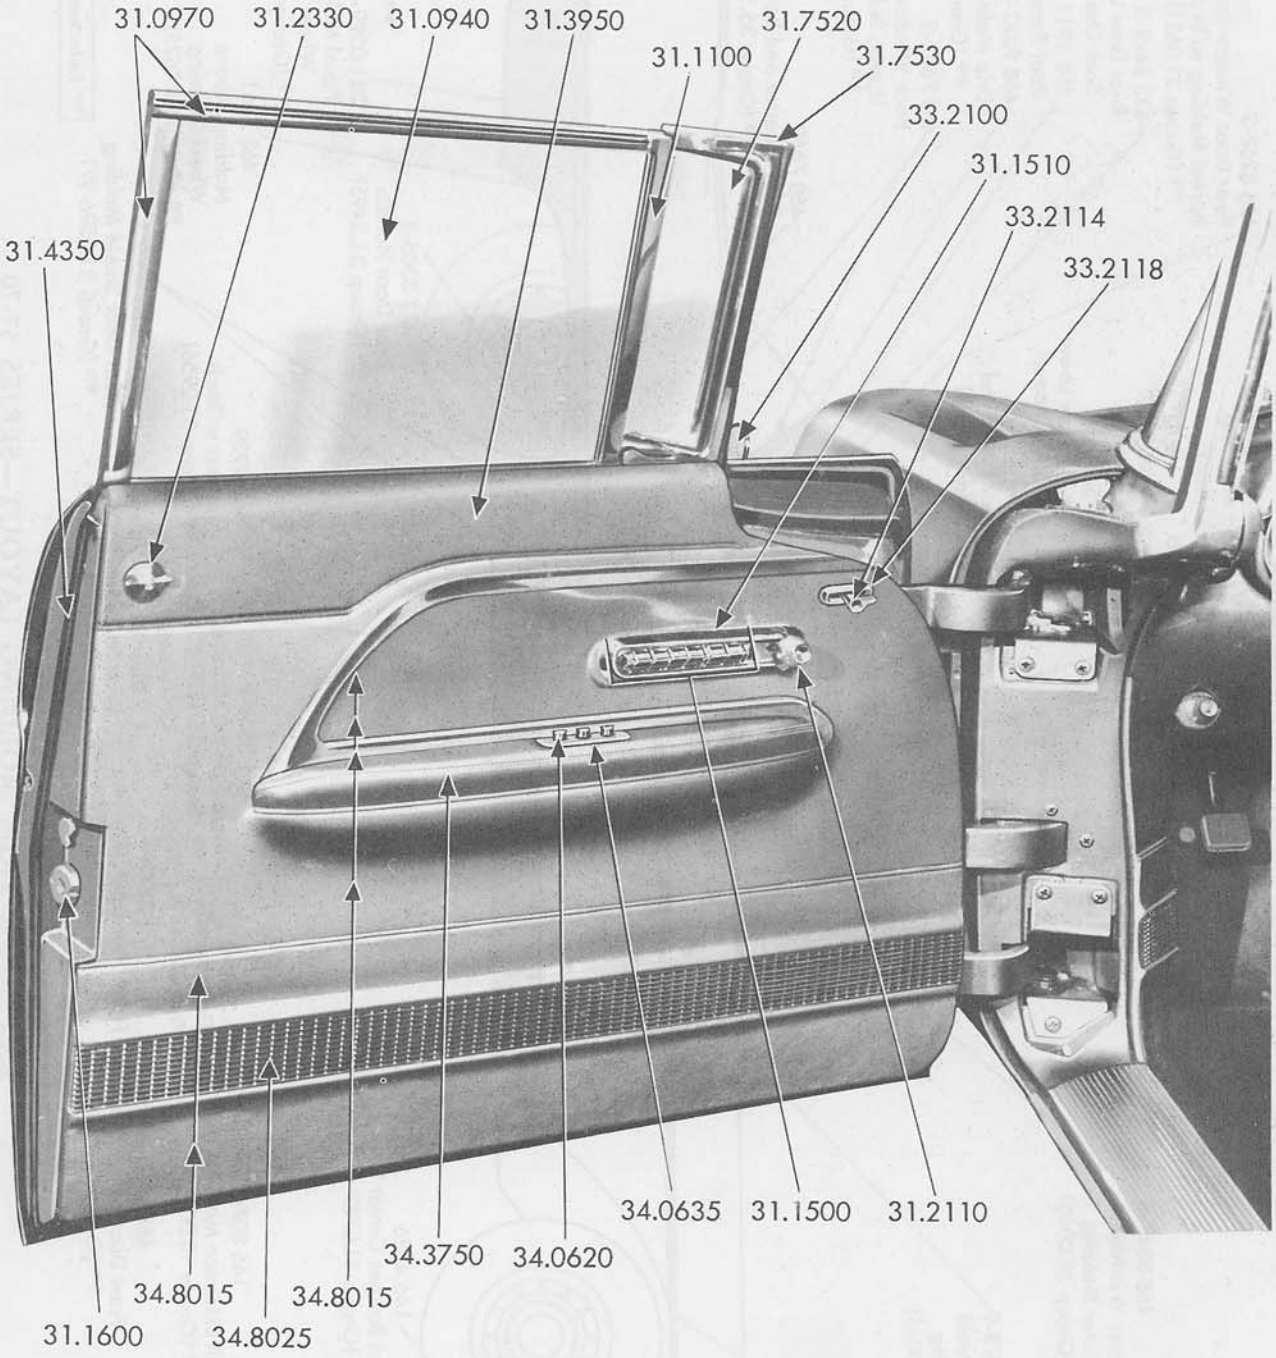


INTERIOR FRONT DOOR TRIM LAYOUT—STYLE 57-7059X

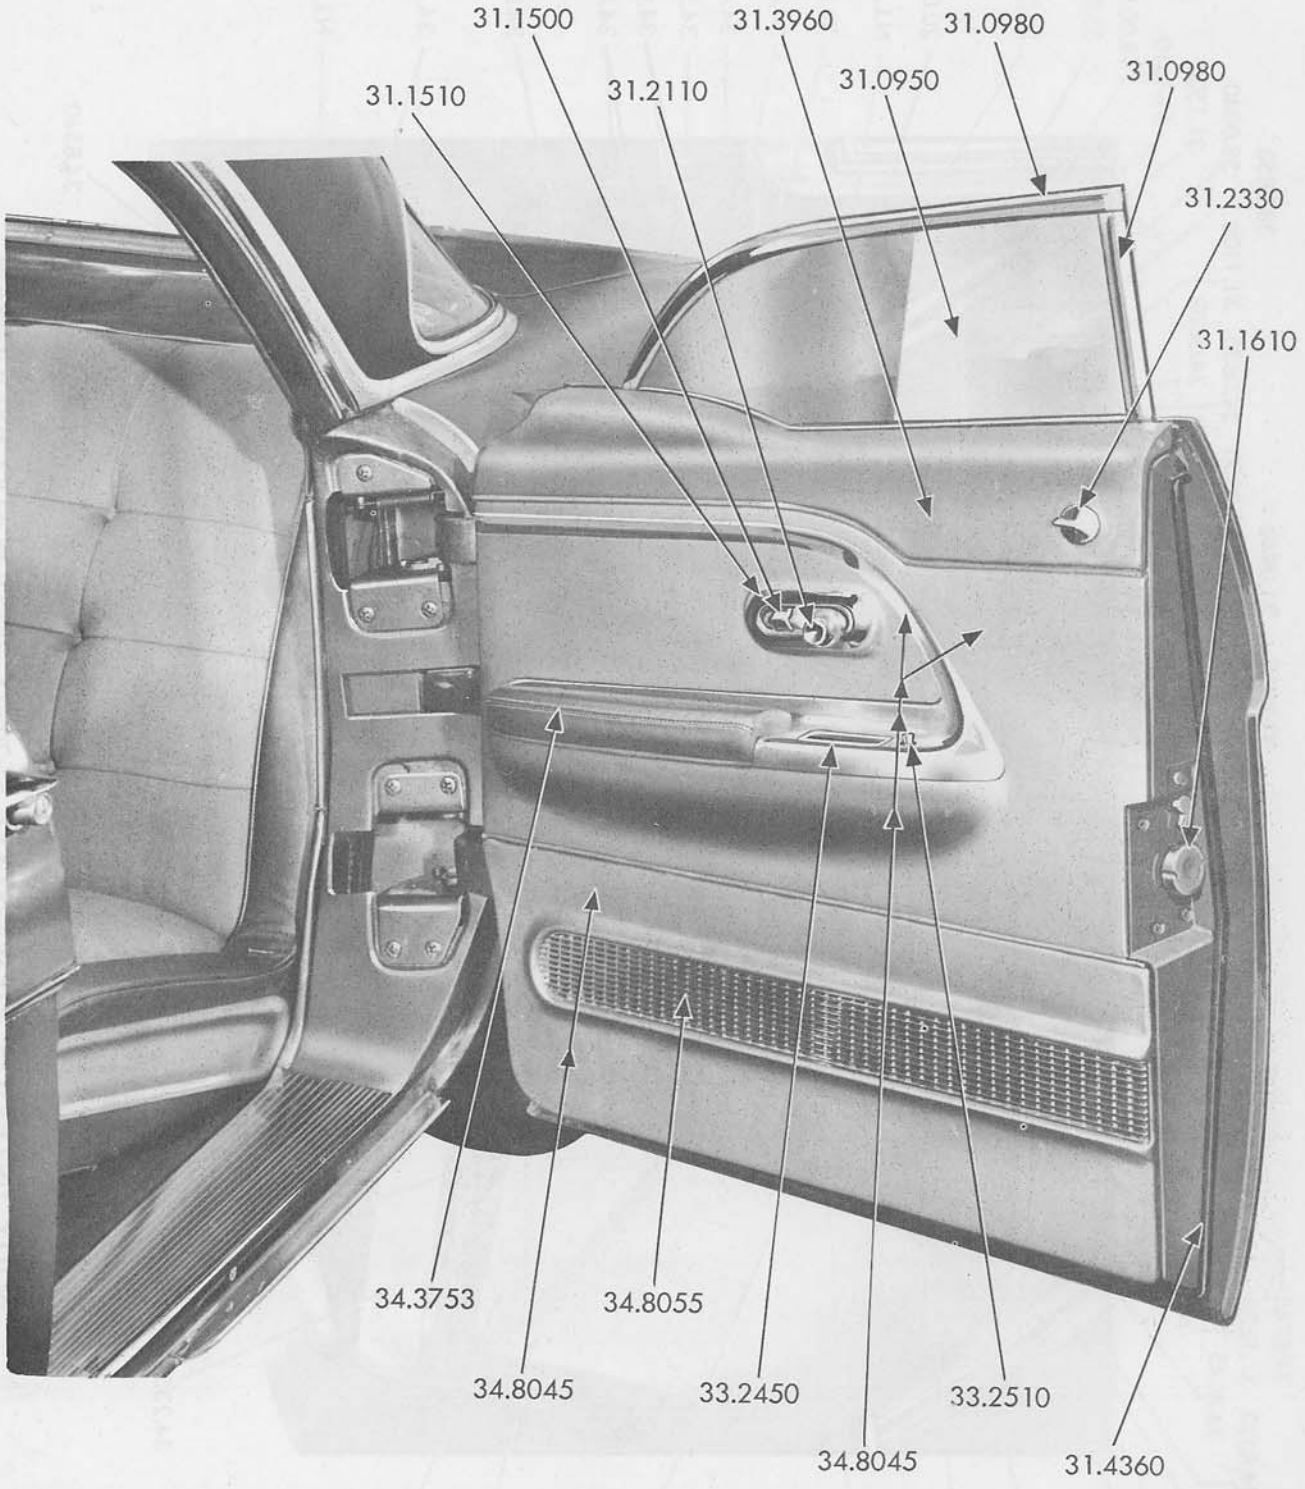

INTERIOR REAR DOOR TRIM LAYOUT—STYLE 57-7059X

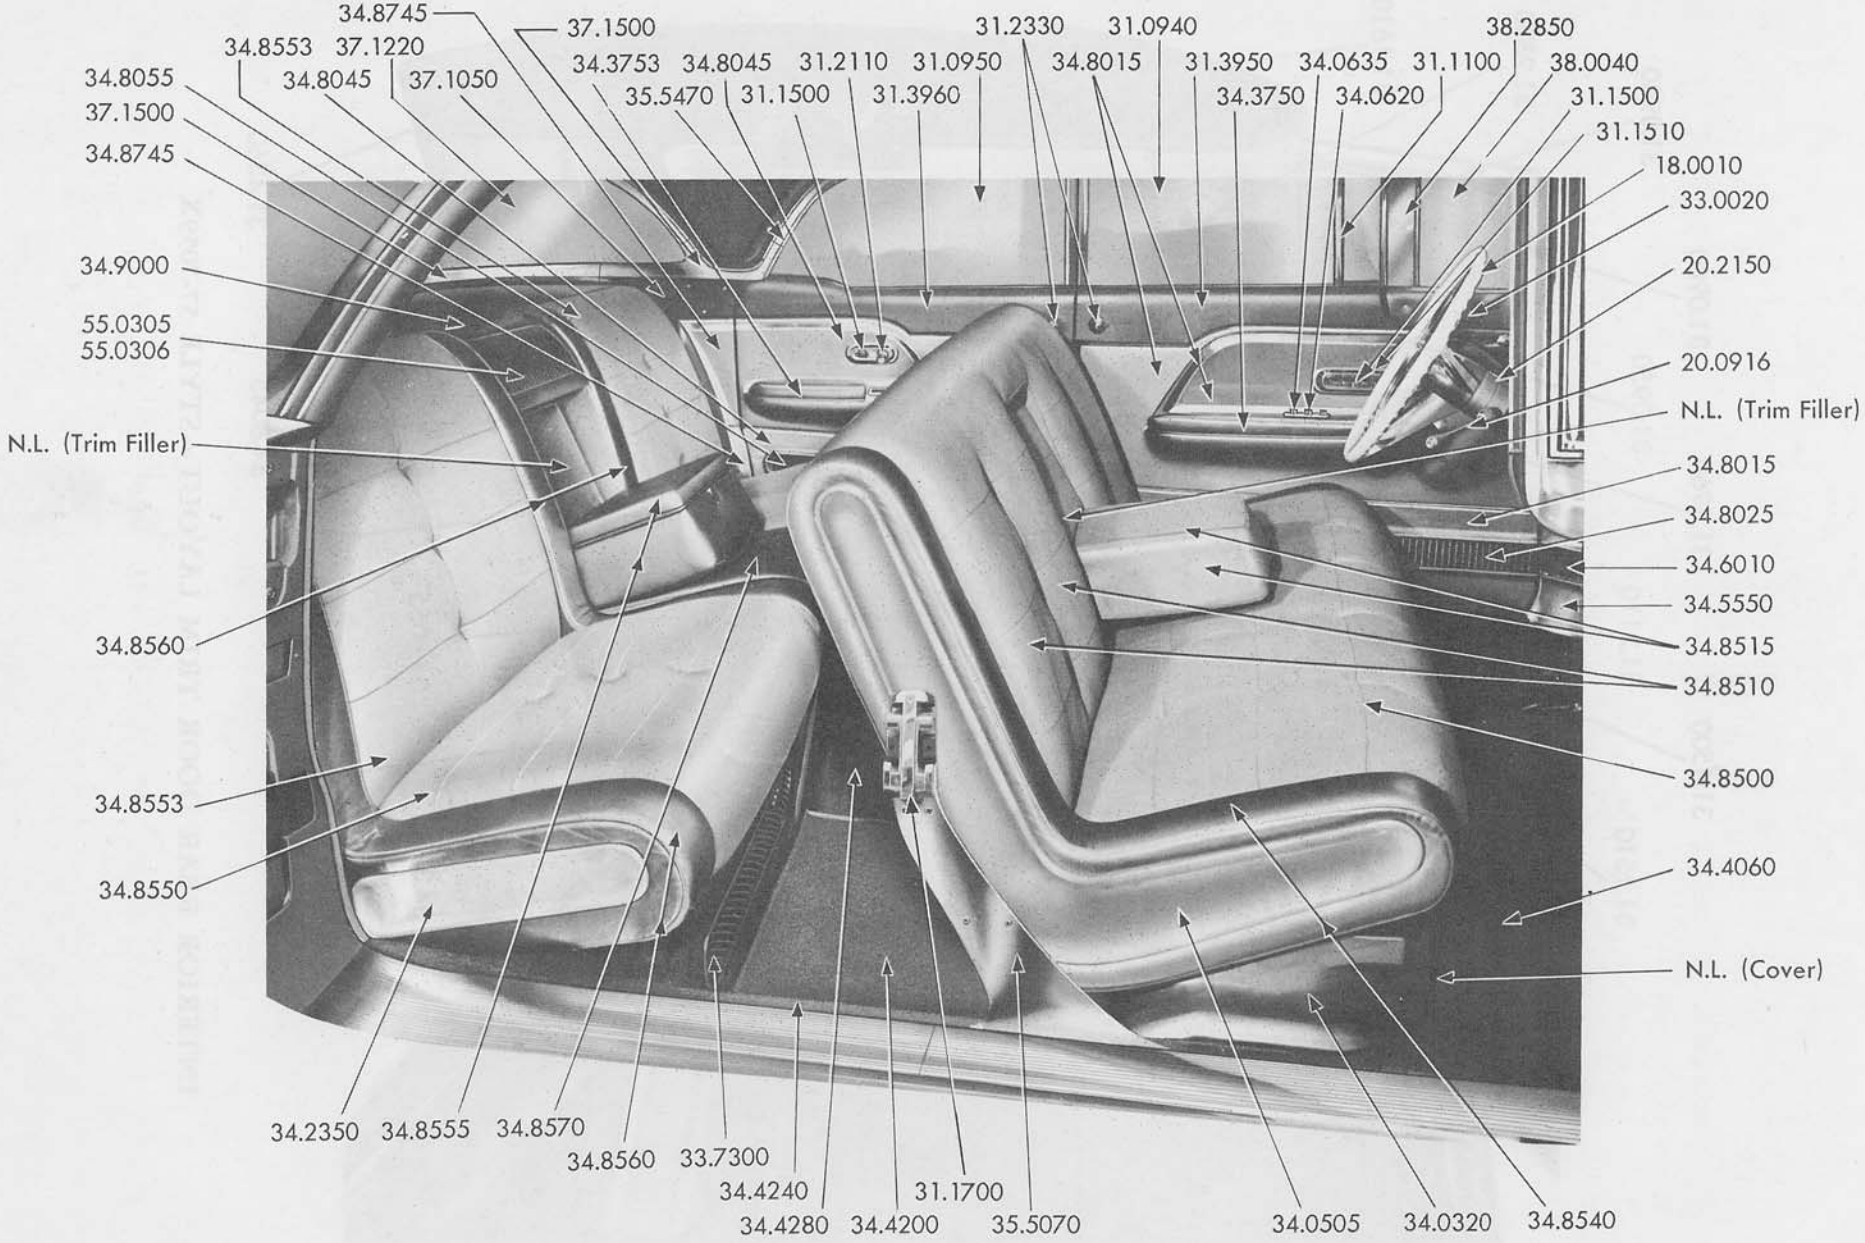

BODY INTERIOR VIEW—STYLE 57-7059X—ELDORADO BROUGHAM

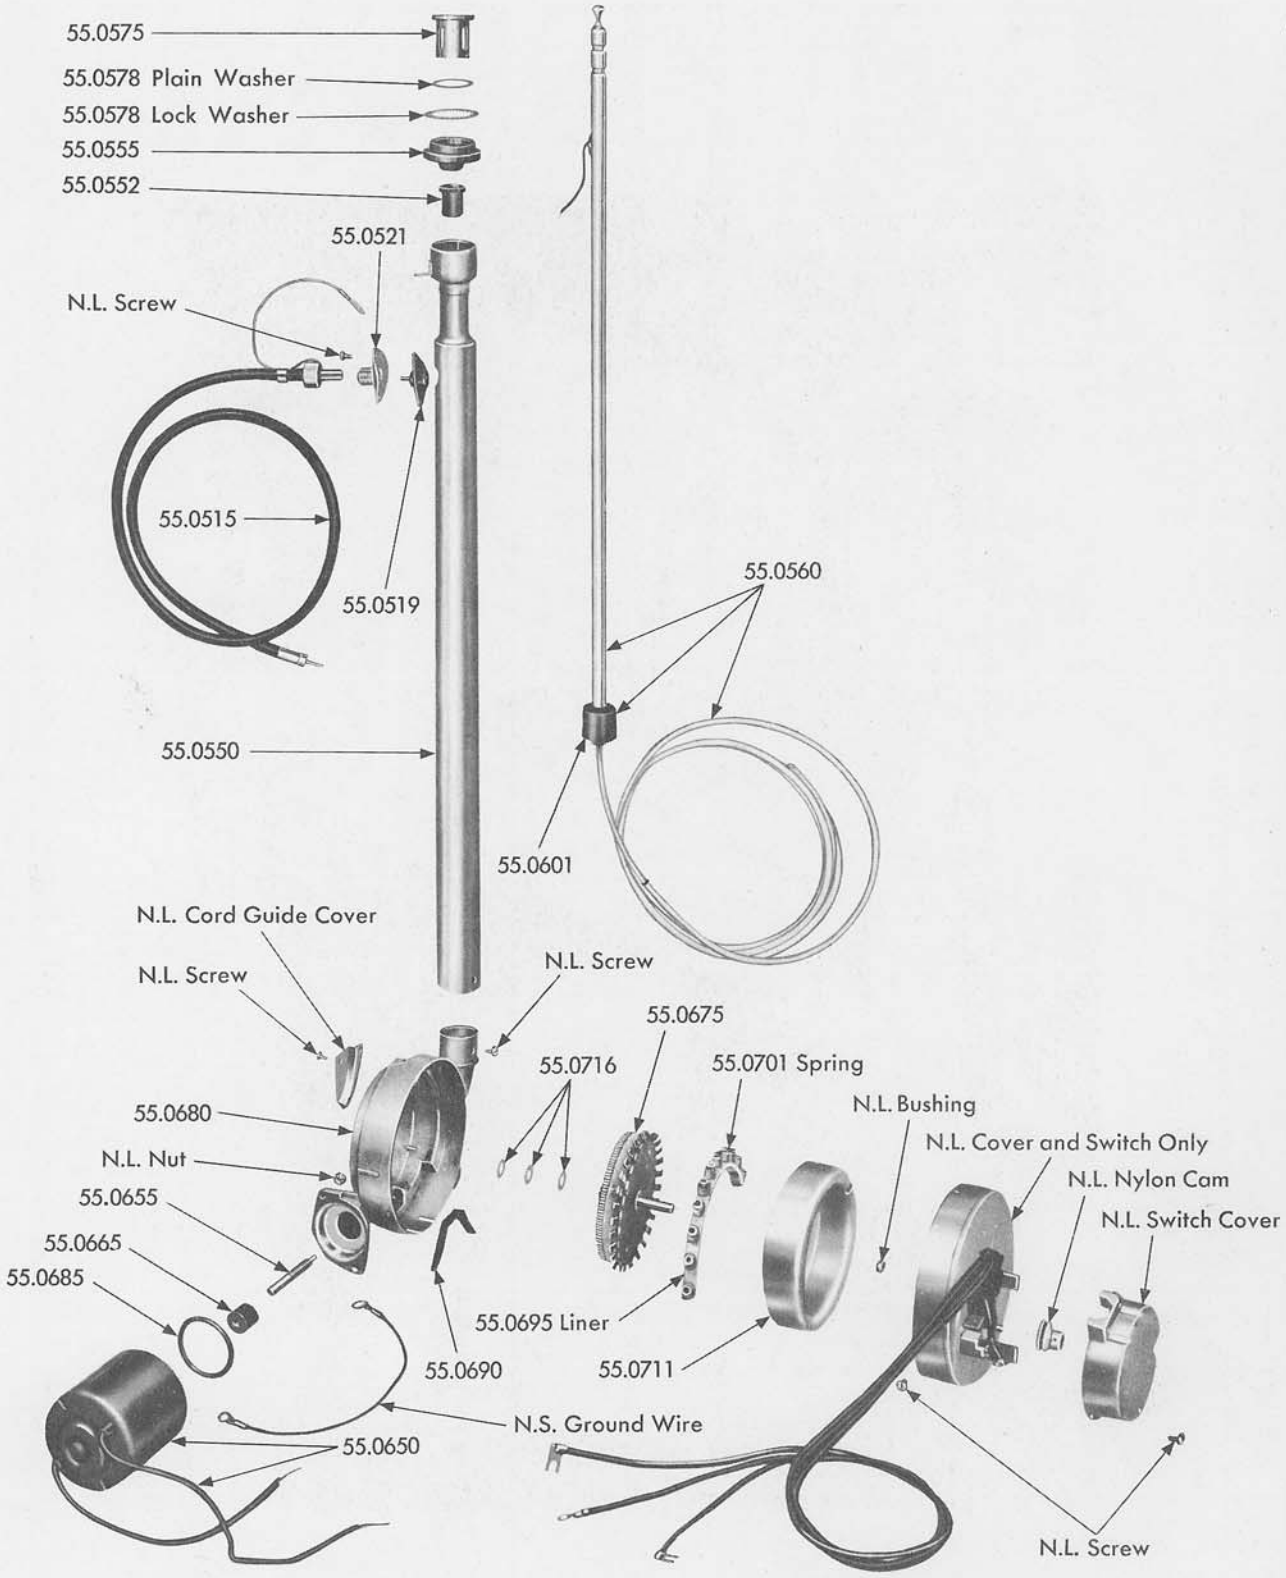

ELECTRIC ANTENNA—SERIES 57-70

SERIES	GROUP NO. & DESCRIPTION	SPECIFICATIONS	NO. USED	PART NO.
	1.0010	**ARM, FRONT WHEEL SUSPENSION**		
57-70		RH, upper w/Ball Stud Assy.	1	●363 0861
57-70		LH, upper w/Ball Stud Assy.	1	●363 0860
57-70		RH, lower w/spring Seat	1	146 5693
57-70		LH, lower w/spring Seat	1	146 5692
	1.0015	**SHAFT, SUSPENSION ARM**		
57-70		Lower	2	●143 7768
57-70		Upper	2	●146 5721
	1.0020	**SHIM, FRONT SUSPENSION ARM**		
57-70		.0149" thk., upper	AR	●146 5042
57-70		.0148" thk., upper	AR	●146 5043
57-70		.1046" thk., upper	AR	●146 5044
	1.0027	**SCREW, PIN OR SHAFT**		
57-70		7/16"-20 x 1 1/2", lower	8	●146 8512
57-70		(★25.0500) 9/16"-18 x 2 1/4", upper	4	●181 732
	1.0028	**WASHER, SHAFT SCREW**		
57-70		Spec. 29/64" x 7/64", lower	8	146 8947
	1.0029	**NUT, SHAFT SCREW**		
57-70		7/16"-20, spec.	8	●143 5440
57-70		(★25.0080) 9/16"-18	4	●124 634
	1.0035	**REPAIR KIT, LOWER SUSPENSION ARM SHAFT**		
57-70			2	●109 8637
	1.0040	**BUSHING, SUSPENSION ARM SHAFT**		
57-70		Front and rear, less fittings	4	●145 3361
	1.0045	**SEAL, DUST, LOWER SUSPENSION ARM**		
57-70		Inner	4	●146 4400
	1.0050	**BALL STUD ASSY., STEERING KNUCKLE**		
57-70		Upper, w/Screws, Nuts and Washers	2	●363 0862
57-70		Lower	2	●761 521
	1.0052	**SEAL, BALL STUD ASSY., STEERING KNUCKLE**		
57-70		Upper, front	2	●761 455
57-70		Lower, front	2	●761 023
	1.0055	**SCREW, STEERING KNUCKLE BALL STUD**		
57-70		(★25.0500) 3/8" - 24 x 1 1/8". To lower suspension arm	8	●193 223
	1.0059	**NUT, STEERING KNUCKLE BALL STUD**		
57-70		(★25.0086) 9/16"-18, upper	2	●125 258
57-70		(★25.0086) 5/8"-18, lower	2	●125 267
57-70		(★25.0080) 3/8"-24 to lower suspension arm	8	●225 854
	1.0110	**REPAIR KIT, UPPER SUSPENSION ARM PIN**		
57-70		Inner, at shaft	2	●363 0806
	1.0120	**BUSHING, UPPER SUSPENSION ARM PIN**		
57-70		Less fitting	4	●146 6367
	1.0125	**SEAL, DUST, UPPER SUSPENSION ARM**		
57-70		Inner, rubber	4	●145 6574
	1.0135	**FITTING, UPPER SUSPENSION ARM SHAFT BUSHING**		
57-70		(★25.0020) 45° 1/8" thd.	AR	●271 300

	1.0170 KNUCKLE, STEERING		
57-70	RH, w/Shaft	1	●363 0919
57-70	LH, w/Shaft	1	●363 0918
	1.0171 NUT, STEERING KNUCKLE		
57-70	RH	1	●378 137
57-70	LH	1	●410 901
	1.0173 WASHER, SAFETY, BEARING NUT		
57-70		2	●145 7981
	1.0175 STOP, STEERING KNUCKLE		
57-70		2	●146 6593
	1.0413 ARM, STEERING KNUCKLE		
57-70	RH	1	146 4981
57-70	LH	1	146 4980
	1.0415 SCREW, STEERING ARM TO KNUCKLE OR BACKING PLATE		
57-70	(★25.0500) 1/2"-20 x 2 1/2". To backing plate	4	●455 029
	1.0416 NUT, STEERING KNUCKLE TO ARM SCREW		
57-70	(★25.0080) 1/2"-20	4	●225 857
	1.0517 TIE ROD, STEERING		
57-70		2	●567 1865
	1.0520 ADJUSTER, STEERING TIE ROD		
57-70	Tube, w/Clamps	2	●566 8676
	1.0548 END, STEERING TIE ROD		
57-70	w/Pivot, Dust Cover and Nut	2	●567 1870
	1.0555 NUT, STEERING TIE ROD END PIVOT		
57-70	9/16"-18	2	●266 236
	1.0718 COVER, DUST, TIE ROD END		
57-70	Lower, rubber	2	●267 026

SERIES	GROUP NO. & DESCRIPTION	SPECIFICATIONS	NO. USED	PART NO.
	2.0010 AXLE HOUSING, REAR			
57-70			1	351 0850
	2.0041 PLUG, REAR AXLE OIL FILLER			
57-70		(★8.3147) Less gasket	1	●145 5051
	2.0045 GASKET, REAR AXLE FILLER PLUG			
57-70		(★8.3157)	1	●145 6386
	2.0235 AXLE SHAFT, REAR			
57-70		RH, 31 5/8" lg., w/Bearing, Retainer, Cover & Bolts	1	●351 0775
57-70		LH, 29" lg., w/Bearings, Retainer, Cover & Bolts	1	●351 0774
	2.0237 KEY, REAR AXLE SHAFT			
57-70		1/4" x 5/16" x 2 3/4"	2	●141 8856
	2.0238 NUT, AXLE SHAFT			
57-70		1 1/8"-12	2	●870 788
	2.0239 LOCK, AXLE SHAFT NUT			
57-70			2	●141 3990
	2.0289 DIFFERENTIAL & CARRIER ASSEMBLY W/GEAR & PINION			
57-70		3.36 to 1 ratio stamped "B6". Includes 5 pts. Cadillac spec. break-in lubricant	1	351 1383
	2.0300 LUBRICANT, HYPOID REAR AXLE BREAK-IN			
57-70		5 pt. can, spec. Cadillac	1	●109 7813
	2.0320 SCREW, CARRIER TO REAR AXLE HOUSING			
57-70		3/8"-24 x 1 1/8"	8	●348 402
57-70		3/8"-24 x 1 1/2"	6	●141 9226
	2.0325 NUT			
57-70		(★25.0080) 3/8"-24	14	●120 369
	2.0327 FLAT WASHER			
57-70		Copper	14	●145 6254
	2.0370 GASKET BETWEEN DIFFERENTIAL CARRIER AND AXLE HOUSING			
57-70			1	●146 3220
	2.0684 OIL SEAL, W/RETAINER, PINION BEARING			
57-70		For use with differential not having cup type plug in yoke end of carrier	1	●145 8709
	2.0871 PROPELLER SHAFT			
57-70		Complete w/"U" Joints and Center Bearing	1	146 6163
	2.0904 SEAL, CENTER SLIP YOKE			
57-70		On rear end of coupling	1	●567 1502
	2.0905 WASHER, CENTER SLIP YOKE SEAL			
57-70		Split type	1	●567 0757
	2.0910 BEARING ASSEMBLY, PROPELLER SHAFT, CENTER			
57-70		w/Support and Cushion	1	146 7567

	2.0933 NUT, LOCK, CENTER BEARING RETAINER			
57-70	Spec.		1	●567 0754
	2.0934 WASHER, CENTER BEARING RETAINER LOCK NUT			
57-70	Spec.		1	●567 0755
	2.0940 SHIELD, PROPELLER SHAFT CENTER BEARING			
57-70			2	●146 6852
	2.0950 SPACER, PROPELLER SHAFT CENTER BEARING			
57-70			1	●567 1164
	2.0960 BRACKET ASSY., PROPELLER SHAFT CENTER BEARING SUPPORT			
57-70			1	351 0819
	2.0970 BUSHING, PROPELLER SHAFT CENTER BEARING SUPPORT			
57-70	Outer		4	●146 6147
57-70	Inner		2	●146 6149
	2.0975 SCREW, PROPELLER SHAFT CENTER BEARING SUPPORT			
57-70	Spec. 5/16"-24 x 3 1/16"		2	●146 6151
	2.0980 NUT, PROPELLER SHAFT CENTER BEARING SUPPORT			
57-70	(★25.0080) 5/16"-24		2	●120 368
	2.0985 WASHER, PROPELLER SHAFT CENTER BEARING SUPPORT			
57-70	(★54.1070) Plain-13/32" x 1 1/4" x 1/8", front		2	●143 7694
57-70	(★25.0380) Lock-5/16" x 1/16", center		2	●187 119
57-70	Plain-5/16" x 1 1/4" x 5/64", rear		2	●146 6148
	2.1383 YOKE, UNIVERSAL JOINT			
57-70	Slip yoke, on end of trans. main shaft		1	●567 1013
57-70	On axle pinion shaft		1	●351 0822
57-70	Slip yoke, center, on rear end of front propeller shaft		1	●567 0762
	2.1385 NUT, PROPELLER SHAFT			
57-70	(★25.0088) 7/8"-14, pinion shaft yoke		1	●131 250
57-70	(★25.0080) Hex., 5/16"-24, pinion shaft yoke "U" bolt		4	●120 368
	2.1386 "U" BOLT, UNIVERSAL JOINT TO REAR AXLE PINION SHAFT YOKE			
57-70			2	●522 380
	2.1437 CROSS, UNIVERSAL JOINT			
57-70	Front, center and rear, w/Bearings, Retainers & Packing		3	●146 3548
	2.1440 LOCK PLATE OR RING			
57-70	Lock ring for bearings		12	●145 6507
57-70	Lock plate for screws		2	●567 1530
	2.1454 PACKING, UNIVERSAL JOINT ROLLERS			
57-70	Front, center and rear, 21/32" I.D.		12	●902 2809
	2.1455 RETAINER, PACKING			
57-70	Plain type 11/16" I.D.		12	●145 3544
	2.1457 DUST SHIELD ON CROSS, FOR PACKING			
57-70	For front, center & rear "U" joints		12	●059 050

SERIES	GROUP NO. & DESCRIPTION	SPECIFICATIONS	NO. USED	PART NO.
	3.0015 SHIM, BODY BRACKETS			
57-70		Steel, sq., 2" x 2 1/2" x 1/16" w/1/2" slot	AR	●143 8179
	3.0033 CUSHION, BODY BOLTS (RUBBER)			
57-70		1" I.D. x 1 7/8" O.D. x 9/16"	16	●146 1766
57-70		11/16" I.D. x 1 7/8" O.D. x 9/16"	2	146 1987
	3.0074 PAD, BODY BRACKETS			
57-70		2 13/64" x 2 13/64" x 1/2" w/Shoulder, steel Tube and Washer	16	●146 1768
57-70		2 13/64" x 2 13/64" x 1/2" w/Shoulder	2	●146 1991
	3.0235 HOLDER, OWNER IDENTIFICATION CARD			
57-70			1	●145 7277
	3.0240 RETAINER, OWNERS IDENTIFICATION CARD HOLDER			
57-70			1	146 7602
	3.0250 PLATE, LUBRICATION AND IDENTIFICATION			
57-70			1	●146 0872
	3.0253 SCREW, LUBRICATION AND IDENTIFICATION PLATE			
57-70		(★25.0560)	2	●178 812
	3.0488 AUTO JACK			
57-70		Bumper Jack w/Base, less Handle	1	146 6886
	3.0489 HANDLE, AUTO JACK			
57-70		w/Sleeve. For bumper jack	1	●350 9170
	3.0525 SPRING, AUTO JACK RETAINER			
57-70			1	●146 6884
	3.0545 SADDLE, AUTO JACK BODY			
57-70			1	●146 6876
	3.0730 WRENCH, WHEEL MOUNTING			
57-70		(★3.0489) w/Sleeve	1	●350 9170
	3.1355 CLOCK, INSTRUMENT PANEL			
57-70		Westclox	1	146 6215
	3.1395 KNOB OR EXTENSION, SPEEDOMETER RESET			
57-70		Extension	1	●158 4999
57-70		Knob	1	●156 6631
	3.1398 NUT, SPEEDOMETER RESET RETAINING			
57-70			1	●156 4075
	3.1448 LENS OR WINDOWS, OUTER, INSTRUMENT CLUSTER			
57-70		Window, shift indicator	1	●158 4541
57-70		w/speedometer mile Numbers	1	●158 4482
57-70		Window, tell tale, brake	1	●158 4473
57-70		Window, tell tale, trunk	1	●158 4474
57-70		RH, turn signal indicator, w/Tube	1	158 4631
57-70		LH, turn signal indicator, w/Tube	1	158 4634

3.1449 RETAINER, OUTER LENS OR WINDOW

57-70	For speedometer lens	1	●158 4481

3.1450 GASKET

57-70	Shift indicator windows	2	●156 4799

3.1460 BODY, GAUGES AND SPEEDOMETER

57-70		1	158 4584

3.1463 BODY AND STUD ASSY., INSTRUMENT GAUGES

57-70	Oil and thermo. gauge	1	158 4642
57-70	Ammeter and fuel gauge	1	158 4643

3.1490 SCREW, INSTRUMENT CLUSTER RETAINING

57-70	(★25.0560) Upper, oval, cross recess hd. No. 12-11 x 1"	2	●162 510
57-70	Pan cross recess hd., lower, No. 12-11 x 1"	2	●146 2425

3.1495 NUT, INSTRUMENT CLUSTER RETAINING

57-70	Upper, clip "J" type No. 12	2	●146 2424
57-70	Lower	2	●146 7784

3.1810 DIAL, SHIFT INDICATOR

57-70	In instrument cluster	1	●158 4542

3.1815 DIAL, INSTRUMENT CLUSTER GAUGES

57-70	Ammeter and fuel gauge	1	158 4622
57-70	Oil and thermo. gauge	1	158 4628

3.1820 GUIDE, SHIFT INDICATOR

57-70	In instrument cluster	1	●158 4544

3.1835 BUMPER, SPEEDOMETER DIAL

57-70		2	●158 4639

3.1840 INSULATOR, INSTRUMENT CLUSTER GAUGES

57-70	Ammeter	1	150 1818
57-70	Fuel gauge	1	151 8654
57-70	Oil gauge	1	150 8606

SERIES	GROUP NO. & DESCRIPTION	SPECIFICATIONS	NO. USED	PART NO.
	4.0010 PLATE, BRAKE BACKING			
57-70		Front	2	●545 6080
57-70		RH, rear	1	●545 5676
57-70		LH, rear	1	●545 5675
	4.0011 SCREW, BRAKE BACKING PLATE			
57-70		3/8"-24 x 1 1/8", spec. head	8	●142 8324
	4.0012 NUT, BACKING PLATE SCREW			
57-70		(★25.0080) 3/8"-24	8	●125 913
	4.0017 GASKET, FRONT BRAKE BACKING PLATE TO STEERING KNUCKLE			
57-70			2	●146 6196
	4.0018 GASKET, REAR BRAKE BACKING PLATE			
57-70			2	●146 5632
	4.0132 DRAIN SHIELD, OIL, REAR BRAKE			
57-70		Cover, w/static Collector	2	●351 0732
	4.3119 LEVER RELAY, PARKING BRAKE CABLE TO REAR BRAKE CABLE			
57-70			1	●146 6194
	4.3120 EQUALIZER, REAR PARKING BRAKE CABLE			
57-70		To rear brake	1	●146 6180
	4.3122 SPRING, RELAY LEVER RETRACTING			
57-70			1	●146 7913
	4.3123 SHOE, PARKING BRAKE EQUALIZER			
57-70			1	●146 6178
	4.3125 CABLE, REAR WHEEL HAND BRAKE			
	NOTE: For Cable, Hand Brake Lever Relay to Equalizer, see Group 4.4030			
57-70		78 11/16" lg.	2	146 6341
	4.3133 ROD, PARKING BRAKE RELAY TO EQUALIZER			
57-70			1	●146 0860
	4.3137 GROMMET, REAR PARKING BRAKE CABLE			
57-70			2	●146 6664
	4.3140 FELT, PARKING BRAKE CABLE CAP			
57-70		To backing plate	2	●496 342
	4.3690 BRAKE SHOE KITS (2 WHEELS) (STD. SIZE LINING)			
57-70		(12" x 2 1/2") Front and rear, riveted	2	●545 6091
	4.3702 LEVER, OPERATING, REAR PARKING BRAKE SECONDARY SHOE			
57-70		RH	1	●133 3290
57-70		LH	1	●133 3291
	4.3704 PIN, THREADED, LEVER TO SECONDARY SHOE			
57-70			2	●502 305
	4.3707 STRUT ROD, REAR PRIMARY SHOE TO LEVER			
57-70		RH	1	●545 4240
57-70		LH	1	●545 4239

4.3708 SPRING, STRUT ROD ANTI-RATTLE

57-70	Conical. Between washer and web of primary shoe	2	●545 4352

4.3786 PIN, ANCHOR, BRAKE SHOE GUIDE

57-70	Front w/Studs	2	●545 5728
57-70	Rear	2	●369 3513

4.3788 NUT, ANCHOR PIN

57-70	Rear (★25.0080) 5/8"-18	2	●121 358
57-70	Front (★25.0080) 1/2"-20	2	●120 371

4.3789 WASHER, ANCHOR PIN

57-70	Lock, rear	2	●494 177
57-70	Rear	2	●231 579
57-70	Lock, front	2	●131 101

4.3798 COVER, ADJUSTING SCREW

57-70		4	●145 5658

4.3799 KIT, BRAKE SHOE ADJUSTING SCREW

57-70	Front and rear. Consists of screw and nut assy., socket and plug	4	●545 6105

4.3800 SPRING, BRAKE SHOE RETRACTING

57-70	Front and rear. 3 29/32". Primary shoe to secondary shoe at adjusting screw	4	●545 0534
57-70	Front and rear. 4 7/8". Primary and secondary shoe to anchor pin	8	●497 834

4.3815 SPRING, BRAKE SHOE GUIDE

57-70	Front and rear. 1 1/16" (Blue)	8	●231 186

4.3820 RETAINER, GUIDE SPRING

57-70	Inner, on web of shoe. Outer, on locking pin	16	●493 997

4.3825 PIN, GUIDE SPRING

57-70	Front and rear	8	●530 0962

4.3850 BRAKE LINING SET W/RIVETS (2 WHEELS) (STD. SIZE)

57-70	Front and rear (12" x 2 1/2")	2	●545 6142

4.3860 RIVET, BRAKE LINING

57-70	(★25.0320) 9/64" x 1/4"		●230 856

4.3870 BRAKE DRUM AND HUB ASSEMBLY

57-70	RH, front, w/RH thd. Bolts and bearing Cups	1	●146 5696
57-70	LH, front, w/LH thd. Bolts and bearing Cups	1	●146 5695
57-70	Rear, less hub	2	●145 8857

4.3873 SPRING, BRAKE DRUM SILENCER

57-70	Front and rear	4	●142 1126

4.3875 SCREW, BRAKE DRUM TO AXLE SHAFT

57-70	5/16"-24 x 1/2"	4	●145 4402

4.3975 PEDAL AND LOCK ASSY., PARKING BRAKE

57-70		1	●146 6429

4.3980 PAD, PARKING BRAKE PEDAL

57-70	Locking pedal	1	●146 6241
57-70	Release pedal	1	●146 6654

4.3985 CABLE ASSY., PEDAL AND LOCK ASSY. TO BELL CRANK

57-70		1	●146 7795

	4.4005 BRACKET, PARKING BRAKE BELL CRANK			
57-70			1	146 6183
57-70	Support w/Shaft		1	351 0680
	4.4010 BELL CRANK, PARKING CABLE			
57-70			1	•146 6182
	4.4030 CABLE, BELL CRANK TO RELAY			
57-70	29 5/32"		1	146 6259
	4.4033 CLEVIS, PARKING BRAKE			
57-70	Relay lever to front cable		1	•146 5247
57-70	Cable to relay		1	•146 7046
	4.4034 CLEVIS PIN			
57-70	(★25.0120) 3/8" x 15/16"		2	•121 741
	4.4045 RETAINER, PARKING BRAKE CABLE			
57-70	"U" type, rear		2	•568 794
	4.4080 BRAKE PEDAL			
57-70	w/stop light Cam		1	•351 0797
	4.4086 RETAINER, BRAKE ROD			
57-70			1	•146 6077
	4.4088 SUPPORT, BRAKE PEDAL MOUNTING			
57-70	w/Bracket		1	•351 0796
	4.4089 BUSHING, BRAKE PEDAL MOUNTING SUPPORT			
57-70			2	•146 3912
	4.4090 ROD, BRAKE PEDAL			
57-70	To master cylinder actuating lever		1	146 7732
	4.4095 LEVER, ACTUATING, MASTER CYLINDER			
57-70	(★4.5645)		1	•351 0800
	4.4206 PAD, BRAKE PEDAL			
57-70			1	•146 6200
	4.4211 BEZEL, BRAKE PEDAL			
57-70			1	•146 6201
	4.4248 SHAFT, BRAKE PEDAL			
57-70	HYD.		1	•146 5959
	4.4250 SPRING, ANTI-RATTLE, BRAKE PEDAL SHAFT			
57-70	Between shaft and bracket		1	•146 7845
	4.5005 CYLINDER, POWER BRAKE ASSISTOR			
57-70	Power brake		1	146 6332
	4.5008 COVER, POWER BRAKE CYLINDER			
57-70	w/Tube and Stud		1	•146 7633
	4.5010 GASKET OR SEAL, CYLINDER COVER TO BODY			
57-70	Seal. Power brake		1	•384 7006
	4.5015 BOLT, CYLINDER COVER TO BODY			
57-70	Hook type, 5/16"-24 (long)		2	146 7636
57-70	Hook type, 5/16"-24 (short)		2	146 7638
	4.5020 NUT, CYLINDER COVER TO BODY BOLT			
57-70	(*25.0080) hex, hd. 5/16"-24. Power brake		4	•120 368
	4.5025 PLATE, END, POWER BRAKE CYLINDER			
57-70	w/piston rod Seal. Power brake		1	•146 7617

4.5027 SEAL, PISTON ROD

57-70 . . . . . In body at vacuum chamber. Power brake . . . 1 ●215 8837

4.5030 CYLINDER, HYDROVAC

57-70 . . . . . Less lock nut and head. Power brake . . . . 1 ●369 0975

4.5032 SEAL, HYDROVAC CYLINDER

57-70 . . . . . To body. Power brake . . . . . 1 ●609 788
57-70 . . . . . At lock nut. Power brake 1 224 8162

4.5035 NUT, LOCK, HYDROVAC CYLINDER

57-70 . . . . . Power brake . . . . . 1 ●224 8161

4.5040 HEAD, HYDROVAC CYLINDER

57-70 . . . . . Less bleeder screw, fitting & valve power brake 1 146 7629

4.5041 VALVE ASSY., RESIDUAL CHECK

57-70 . . . . . In hydrovac cylinder head. Power brake . . 1 ●146 3849

4.5042 RING, RESIDUAL CHECK VALVE RETAINING

57-70 . . . . . In hydrovac cylinder head. Power brake . . 1 ●221 7000

4.5043 WASHER, RESIDUAL CHECK VALVE

57-70 . . . . . In hydrovac cylinder head. Power brake . . 1 ●220 8741

4.5044 SPRING, RESIDUAL CHECK VALVE

57-70 . . . . . In hydrovac cylinder head. Power brake . . . 1 ●220 8740

4.5045 GASKET, HYDROVAC CYLINDER HEAD

57-70 . . . . . To hydrovac cylinder. Power brake . . . . . 1 ●609 790

4.5050 BLEEDER SCREW, HYDROVAC CYLINDER HEAD

57-70 . . . . . Power brake . . . . . 1 ●226 1467

4.5055 PISTON ASSEMBLY, HYDROVAC CYLINDER

57-70 . . . . . Consists of Yoke, Piston, Plug, Retainer, Ball, Springs, Cup and Snap Ring. Power brake . . 1 ●372 2639

4.5060 RING, SNAP, HYDROVAC PISTON BALL RETAINER

57-70 . . . . . Power brake . . . . . 1 ●146 3134

4.5065 RETAINER, HYDROVAC PISTON BALL

57-70 . . . . . Power brake . . . . . 1 ●146 3133

4.5070 SPRING, HYDROVAC PISTON BALL

57-70 . . . . . Power brake . . . . . 1 ●220 8746

4.5075 BALL, HYDROVAC PISTON

57-70 . . . . . Power brake . . . . . 1 ●114 861

4.5080 CUP, HYDROVAC PISTON

57-70 . . . . . Power brake . . . . . 1 ●609 783

4.5084 SLEEVE, HYDROVAC PISTON CUP RETAINING

57-70 . . . . . Power brake . . . . . 1 ●373 8727

4.5085 SPRING, HYDROVAC PISTON CUP RETAINING

57-70 . . . . . Power brake . . . . . 1 ●373 8725

4.5090 RING, SNAP, VACUUM PISTON ROD STOP WASHER

57-70 . . . . . Power brake . . . . . 1 ●146 3294

4.5095 WASHER, VACUUM PISTON ROD STOP

57-70 . . . . . Power brake . . . . . 1 ●146 3128

4.5100 RETAINER, VACUUM PISTON ROD SEAL OR CUP

57-70 . . . . . Power brake . . . . . 1 ●373 8726

4.5105 SEAL OR CUP, VACUUM PISTON ROD

57-70	Seal, rubber. In body at hydrovac cylinder. Power brake	1	●226 6042

4.5110 WASHER, VACUUM PISTON ROD

57-70	In body at hydrovac cylinder. Power brake	1	●220 8718

4.5115 ROD, VACUUM PISTON

57-70	w/end Screw. Power brake	1	●146 7625

4.5117 CUSHION, VACUUM PISTON ROD

57-70	Power brake	1	●372 2640

4.5120 WASHER, VACUUM PISTON

57-70	Steel. Power brake	1	●220 8798

4.5125 PLATE, VACUUM PISTON

57-70	6 11/16" dia. Power brake	1	●221 8830
57-70	6 33/64" dia. Power brake	1	●221 8829

4.5130 SEAL, VACUUM PISTON PLATES

57-70	Power brake	1	●220 8751

4.5135 PACKING, VACUUM PISTON

57-70	Felt. Power brake	1	●384 7672
57-70	Leather. Power brake	1	●606 276

4.5140 RING, VACUUM PISTON PACKING

57-70	Spring steel strip. Power brake	1	●606 277

4.5145 RETAINER, VACUUM PISTON FELT PACKING

57-70	Power brake	1	●220 8799

4.5150 NUT, VACUUM PISTON ROD

57-70	Power brake	1	●220 8753

4.5152 PIN, VACUUM PISTON ROD

57-70	To hydrovac piston. Power brake	1	●220 8712

4.5155 BODY ASSY., AIR INTAKE AND OUTLET

57-70	w/air Valve (less fitting), Tube, Screen, Snap Ring, Retainer, air Filter and Spring. Power brake	1	●146 1643

4.5160 RING, SNAP, AIR INTAKE SCREEN

57-70	Power brake	2	●220 8732

4.5165 SCREEN, AIR INTAKE

57-70	Power brake	1	●146 1642

4.5170 FILTER, AIR INTAKE

57-70	Hair. Power brake	1	●218 5938

4.5175 RETAINER, AIR INTAKE FILTER

57-70	Power brake	1	●146 1641

4.5180 SPRING, POPPET AIR VALVE

57-70	Power brake	1	●220 8796

4.5182 KIT, POPPET VALVE REPAIR

57-70	Consists of Valve Seal, Adapter Seal Assy., Screw and Washer	1	●146 3163

4.5185 FITTING, AIR BODY TO CYLINDER COVER

57-70	90° elbow w/tube. Power brake	1	●146 1638

4.5190 GASKET, AIR INTAKE BODY

57-70	Between diaphragm and cylinder body. Power brake	1	●220 8710

	4.5195 SCREW, AIR INTAKE BODY		
57-70	To cylinder body. Power brake	5	●455 825
	4.5200 DIAPHRAGM, AIR VALVE ACTUATING		
57-70	w/Plates and Stop. Power brake	1	●146 7630
	4.5203 SPRING, DIAPHRAGM RETURN		
57-70	Power brake	1	●146 7637
	4.5205 CYLINDER ASSY., HYDROVAC AIR VALVE ACTUATING DIAPHRAGM		
57-70	Power brake	1	●146 7620
	4.5210 RING, SNAP, HYDROVAC PISTON STOP WASHER		
57-70	At air valve actuating diaphragm. Power brake	1	●220 8727
57-70	At rear of cylinder. Power brake	1	●146 7610
	4.5215 WASHER, HYDROVAC PISTON STOP		
57-70	Power brake	1	●220 8726
	4.5220 SEAL, HYDROVAC CYLINDER		
57-70	Air valve actuating diaphragm. Power brake	1	●223 8386
	4.5221 WASHER, VALVE PISTON		
57-70	Spring retaining. Power brake	1	●146 7615
57-70	Cup retaining. Power brake	1	●224 2592
	4.5222 SPRING, VALVE PISTON		
57-70	Power brake	1	●146 7612
	4.5223 STEM, RELAY VALVE		
57-70	Power brake	1	●146 7613
	4.5224 CUP, VALVE PISTON		
57-70	For 3/8" dia. relay valve (5/32" thk.)	2	●220 8792
57-70	For 9/16" dia. valve piston (5/64" thk.)	1	●146 7616
57-70	For 9/16" dia. valve piston (5/32" thk.)	1	●225 5153
	4.5225 PISTON, HYDROVAC AIR VALVE ACTUATING DIAPHRAGM		
57-70	3/8" dia. relay valve	1	●146 7614
57-70	9/16" dia. valve	1	●146 7611
	4.5240 HOSE, AIR TUBE		
57-70	Power brake	1	●146 1614
	4.5245 PLUG, PIPE, CYLINDER COVER		
57-70	(★25.0200) sq. hd. 1/8". Power brake	2	●103 877
	4.5255 CONNECTOR, VACUUM CONNECTION		
57-70	Power brake	1	115 149
	4.5260 FITTING, HYDROVAC FLUID LINE OR INLET		
57-70	Line. Power brake	1	●368 6664
	4.5265 GASKET, HYDROVAC FLUID INLET FITTING		
57-70	(★4.5615) Power brake	1	●799 303
	4.5290 KIT, REPAIR, BRAKE ASSISTOR CYLINDER		
57-70	Less piston packing kit. w/Seals, Cups, Gaskets and Rings	1	●146 7730
	4.5295 KIT, REPAIR, PISTON PACKING		
57-70	Vacuum piston. Power brake	1	●146 9156
	4.5298 PIPE, INTAKE MANIFOLD ELBOW TO HOSE PIPE		
57-70	Cars w/dual carbs. To hose. Power brake	1	●146 7041

	4.5300 HOSE, VACUUM		
57-70	Intake manifold to power brake booster line	1	●146 4386
57-70	Cars w/dual carbs. Check valve to power brake booster	1	●146 6236
	4.5305 CLAMP, VACUUM HOSE		
57-70	Cars w/dual carbs. Power brake	4	●111 603
	4.5320 NIPPLE, INTAKE MANIFOLD TO HOSE PIPE OR PIPE COUPLING		
57-70	(★25.0210) 3/8" inverted flared tube. To hose pipe. Power brake	1	●137 407
	4.5325 VALVE, VACUUM CHECK		
57-70	Cars w/dual carbs. Between intake pipe hose and booster hose. Power brake	1	●146 7494
	4.5360 BOLT, POWER BRAKE CYLINDER TO MOUNTING BRACKET OR DUST SHIELD		
57-70	(★25.0560) hex. hd. tapping 3/8"-24 x 3/4". Mounting bracket to body. Power brake	4	●172 493
	4.5450 BODY, BRAKE FLUID AUXILIARY RESERVOIR		
57-70	Less filler cap	1	146 6775
	4.5455 CAP, BRAKE FLUID AUXILIARY RESERVOIR		
57-70	(★4.5525)	1	●116 9568
	4.5460 GASKET, BRAKE FLUID AUXILIARY RESERVOIR CAP		
57-70	(★4.5530)	1	●116 9569
	4.5465 SCREW, BRAKE FLUID AUXILIARY RESERVOIR		
57-70	(★25.0500) 5/16"-24 x 3/4"	1	●120 741
	4.5470 PIPE, AXULIARY RESERVOIR TO MASTER CYLINDER		
57-70	w/Nut	1	●146 8520
	4.5480 NUT, AUXILIARY RESERVOIR PIPE		
57-70	(★25.0205)	1	●137 399
	4.5483 HOSE, MASTER CYLINDER TO AUXILIARY RESERVOIR		
57-70	(★4.5300) Cut to length required	1	●146 3416
	4.5485 CLAMP, HOSE, AUXILIARY RESERVOIR		
57-70	(★4.5305)	2	●111 603
	4.5500 MASTER CYLINDER, HYDRAULIC BRAKE		
57-70	Power brake	1	●545 5677
	4.5510 SCREW, MASTER CYLINDER TO FRAME		
57-70	(★25.0500) 3/8"-24 x 2 3/4"	3	●120 669
	4.5517 BRACKET, MASTER CYLINDER SUPPORT		
57-70		1	146 6365
	4.5518 GUARD, MASTER CYLINDER		
57-70	Power brake	1	●146 6359
	4.5520 REPAIR KIT, MASTER CYLINDER		
57-70	Power brake	1	●545 608
	4.5525 FILLER CAP, MASTER CYLINDER		
57-70	Adapter w/Insert. Power brake	1	●545 6110
	4.5530 GASKET FILLER CAP		
57-70	Cylinder to filler cap	1	●545 5697
	4.5540 HEAD, MASTER CYLINDER		
57-70	Power steering. w/Check valve seat	1	●545 5718

4.5545 GASKET, MASTER CYLINDER HEAD

57-70			1	●545 0212

4.5555 PISTON, MASTER CYLINDER, W/SECONDARY CUP

57-70			1	●530 0851

4.5560 CUP, MASTER CYLINDER PISTON

57-70		Primary	1	●545 0617
57-70		Secondary	1	●231 432

4.5565 SPRING AND RETAINER, PISTON RETURN

57-70		Power brake	1	●545 6102

4.5605 FITTING, OUTLET, MASTER CYLINDER

57-70		Power brake. Distributor w/Strap	1	●145 8795

4.5615 GASKET, OUTLET FITTING

57-70		1/2" I.D. Between fitting and cylinder	1	●799 303

4.5635 PUSH ROD ASSY., MASTER CYLINDER

57-70			1	●545 6154

4.5640 BOOT, MASTER CYLINDER

57-70			1	●545 4594

4.5645 LEVER, ACTUATING, MASTER CYLINDER

57-70			1	●351 0800

4.5647 SEAT, BRAKE PEDAL ROD

57-70		On actuating lever	1	●146 8260

4.5650 SHAFT, MASTER CYLINDER ACTUATING LEVER

57-70			1	●146 5966

4.5655 TRUNNION, MASTER CYLINDER CONNECTING LINK

57-70		At actuating lever	1	●146 5964

4.5660 SPACER, LOCATING, MASTER CYLINDER PUSH ROD

57-70		At actuating lever	1	●146 8211

4.5675 BUSHING, MASTER CYLINDER AT ACTUATING LEVER

57-70			1	●545 5694

4.5725 WHEEL CYLINDER, COMPLETE

57-70		Rear. 1" diam. pistons	2	●545 4729
57-70		Front. 1 1/8" diam. pistons	2	●545 5663

4.5735 SCREW, WHEEL CYLINDER

57-70		Rear (★25.0500) 5/16"-18 x 1/2"	4	●120 834
57-70		Front (★25.0500) 3/8"-16 x 3/4"	2	●122 119

4.5750 REPAIR KIT, WHEEL CYLINDER

57-70		Front	2	●545 5856
57-70		Rear	2	●545 5855

4.5755 BLEEDER SCREW, WHEEL CYLINDER

57-70		(★4.5050) Valve type	4	●226 1467

4.5780 PISTON, WHEEL CYLINDER

57-70		Rear. 1" diam.	4	●231 334
57-70		Front. 1 1/8" diam.	4	●545 0648

4.5785 CUP, WHEEL CYLINDER PISTON

57-70		Front. For 1 1/8" diam. pistons	4	●545 5298
57-70		Rear. For 1" diam. pistons	4	●545 5299

4.5795 EXPANDER AND SPRING ASSY., PISTON CUP

57-70		Front. For 1 1/8" diam. pistons	2	●545 6326
57-70		Rear. For 1" diam. pistons	2	●545 6327

4.5820 LINK, CONNECTING, WHEEL CYLINDER

57-70	Front and rear	8	●509 233

4.5825 BOOT, WHEEL CYLINDER

57-70	Rear	4	●231 335
57-70	Front	4	●545 0031

4.5875 HYDRAULIC BRAKE FLUID SUPER #11

1 pt. can			●545 3723
1 gal. can			●545 1232
5 gal. can			●545 1233
54 gal. drum			●545 1230

4.5880 HOSE, FRONT AND REAR BRAKES

57-70	LH, front	1	●761 913
57-70	RH, front	1	●762 210
57-70	Rear	1	761 913

4.5884 PIPE, POWER BRAKE TO MASTER CYLINDER OR TO DISTRIBUTOR OR HOSE

57-70	To distributor	1	146 6301
57-70	To master cylinder	1	146 6303
57-70	To hose	1	146 7496

4.5887 PIPE, DISTRIBUTOR TO REAR BRAKE HOSE

57-70		1	146 6304

4.5890 PIPE, REAR AXLE TEE TO REAR BRAKE

57-70	RH	1	146 6312
57-70	LH	1	146 6311

4.5895 CLIP, HYDRAULIC BRAKE PIPE

57-70		3	●173 171

4.5897 WASHER, PIPE AND HOSE CONNECTION

57-70	(★4.5810) Copper	2	●231 343

4.5900 TEE, PIPE CONNECTION

57-70	Rear	1	146 8496

4.5905 RETAINER, SPRING, PIPE TEE AND HOSE

57-70		4	●146 6932

No Page Number 16

GROUP 5 CLUTCH

NO LISTINGS

No Page Number 18

SERIES	GROUP NO. & DESCRIPTION	SPECIFICATIONS	NO. USED	PART NO.
	6.0010 FAN BLADE ASSEMBLY			
57-70		6 blade type	1	146 8887
	6.0011 SCREW, FAN BLADE			
57-70		(★25.0500) 5/16"-24 x 2 3/4", to hub	4	●124 100
	6.0245 PULLEY, FAN DRIVEN			
57-70		Quadruple, air cond. & water pump	1	●351 1147
	6.0337 BELT, FAN DRIVE			
57-70		Air cond.; drives fan, water pump & compressor; matched set-consists of 2 belts	1	●146 6656
57-70		Drives fan, water pump & power steering	1	●146 5976
57-70		Drives fan, water pump & generator	1	146 6864
	6.0400 SHROUD, FAN			
57-70		Air cond.	2	●146 8093
	6.0405 SCREW, FAN SHROUD			
57-70		1/4"-20 x 1 1/8", cars w/air cond. (★25.0500)	4	●121 906
57-70		1/4"-20 x 1", cars w/air cond. (★25.0500)	2	●121 900
	6.0410 NUT, FAN SHROUD			
57-70		1/4"-20 hex., cars w/air cond. (★25.0080)	2	●120 375
	6.0421 PLATE, FAN SHROUD			
57-70		Shroud to radiator flange bolt. Cars w/air cond.	1	●146 8426
	6.0736 CORE, RADIATOR, WITH TANKS			
57-70			1	313 6992
	6.0746 CORE, RADIATOR, LESS TANKS			
57-70			1	●312 6891
	6.0750 SHIM OR WASHER, RADIATOR SUPPORT			
57-70		Plain washer. 21/32" x 2 1/2" x 1/8" sltd.	AR	●142 0224
	6.0754 PAD, RADIATOR SUPPORT TO FRAME			
57-70		Rubber	1	146 5142
	6.0759 SUPPORT, RADIATOR			
57-70		w/Baffles, Tie Bar & Support Bolt	1	351 0598
	6.0760 BOLT, RADIATOR SUPPORT TO FRAME			
57-70		5/8"-18 x 3 1/2" carriage bolt	1	●146 6119
	6.0761 NUT, RADIATOR SUPPORT TO FRAME			
57-70		(★25.0080) hex., 5/8"-18	1	●121 358
	6.0762 SCREW, RADIATOR CORE			
57-70		(★25.0500) 5/16"-18 x 3/4", to support	6	●122 007
	6.0826 CAP, RADIATOR FILLER			
57-70		12 to 15 lbs. pressure	1	●850 800
	6.1253 GRILLE, RADIATOR			
57-70		Satin finished aluminum. w/Fins & Retainers	1	351 0807
	6.1256 NUT, RADIATOR GRILLE SCREW			
57-70		(★25.0080) No. 10-24 clip to bumper bar	6	●120 361
	6.1263 SUPPORT, GRILLE TO FRONT BUMPER			
57-70		RH. Upper. Bracket, w/Nut	1	351 0922

57-70	LH. Upper. Bracket, w/Nut	1	351 0921
57-70	RH. Lower. Bracket, w/Nut	1	351 0912
57-70	LH. Lower. Bracket, w/Nut	1	351 0911

6.1318 FIN, RADIATOR GRILLE

57-70	w/Clips, retainer, top horizontal, in primer	1	351 0913
57-70	No. 1, 2, horizontal, satin finished aluminum	2	146 6012
57-70	No. 3, horizontal, satin finished aluminum	1	146 6761
57-70	No. 4, horizontal, satin finished aluminum	1	146 6013
57-70	No. 5, w/Clips, horizontal, satin fin. alum.	1	351 0915
57-70	No. 6, horizontal, satin finished aluminum	1	146 6014
57-70	No. 7, horizontal, satin finished aluminum	1	146 6015
57-70	No. 8, horizontal, satin finished aluminum	1	146 6016
57-70	No. 9, horizontal, satin finished aluminum	1	146 6017
57-70	No. 10, w/Clips, horizontal satin fin. alum.	1	351 0914
57-70	Center & No. 2, 4, 6, vertical RH & LH satin finished aluminum	7	146 6007
57-70	No. 1, 3, 5, vertical RH & LH satin fin. alum.	6	146 6008
57-70	RH, No. 7, w/Clips, vertical, satin fin. alum.	1	351 0916
57-70	LH, No. 7, w/Clips, vertical, satin fin. alum.	1	351 1335
57-70	No. 8, vertical RH & LH satin fin. alum.	2	146 6010
57-70	No. 9, vertical RH & LH satin finished alum.	2	146 6011

6.1320 CLIP OR PLATE, GRILLE FINS

57-70	Clip, grille to lower bumper bar	6	146 6758

6.1325 SCREW, FINS AND RETAINERS

57-70	Horiz. to vert. fins. (★25.0560) truss hd., No. 10-12x 1/2"	4	●455 524
57-70	Grill to bumper tie bar. (★25.0650) truss hd., No. 10-12 x 1/2"	10	●455 524
57-70	(★25.0560) Truss hd. No. 10-12 x 1/2". Retainer & horz. to vert. fins	8	●455 524
57-70	(★25.0512) Flat hd. 1/4"-20 x 3/4". Grille to bumper outer bar	4	●179 346
57-70	(★18.0176) No. 10-24 x 5/8", truss hd., chromium, grille to bumper	6	●456 960
57-70	(★25.0562) Pan hd., 1/4"-20 x 5/8", grille to bumper	10	●160 536

6.1326 NUT

57-70	Clip, grille retainer to vertical fins	6	●146 4596
57-70	(★10.0708) 1/4"-20 J type, grille to bumper brackets	10	●146 7045

6.1498 GAUGE, TEMPERATURE, INSTRUMENT PANEL

57-70	12 volt	1	151 3301

6.1560 GAUGE, TEMPERATURE, ENGINE UNIT

57-70	12 volt	1	151 3402

6.1565 ADAPTER, TEMPERATURE GAUGE TO ENGINE UNIT

57-70		1	859 151

6.1612 THERMOSTAT, RADIATOR

57-70	Standard	1	●146 4794
57-70	High opening	1	●146 4795

6.1700 HOUSING, THERMOSTAT AND WATER INLET

57-70	On water pump	1	●146 6299

6.1701 SCREW, HOUSING TO WATER PUMP BODY

57-70	(★25.0500) 5/16"-18 x 7/8"	AR	●120 229
57-70	(★25.0500) 5/16"-18 x 1 1/8"	AR	●142 2921

6.1712 GASKET, THERMOSTAT HOUSING

57-70		1	●145 1884

6.1945 HOSE, RADIATOR TO WATER PUMP

57-70		1	●146 5546

6.1975 HOSE, THERMOSTAT HOUSING TO RADIATOR

57-70		1	●146 5547

6.1995 CLAMP, HOSE

57-70	Thermostat housing to hose	2	●455 955
57-70	Water pump to radiator hose	2	●455 955

6.2050 WATER PUMP, COMPLETE

57-70	w/Air cond. Less pulley, w/mtg. Gaskets	1	●363 0893

6.2095 SCREW, WATER PUMP TO ENGINE

57-70	Air cond. hex. hd. 3/8"-16 x 2 1/8"	2	●126 051
57-70	(★25.0500) Air cond. hex. hd 3/8"-16 x2 3/4"	2	●122 201
57-70	Air cond. (★25.0500) hex hd. 3/8"-16x3 1/4"	4	●186 282

6.2184 COVER, WATER PUMP, REAR

57-70		1	●143 3791

6.2186 SCREW, REAR COVER

57-70	1/4"-20 x 1/2"	5	●179 791

6.2188 WASHER, COVER TO BODY SCREW

57-70	Copper	5	●141 3818

6.2245 GASKET, WATER PUMP COVER AND BODY

57-70	Rear cover	1	●143 3792
57-70	Body to cyl. heads	2	●146 2542
57-70	Body to cyl. blocks	2	●146 2543

6.2265 IMPELLER, WATER PUMP

57-70		1	●146 2530

6.2500 KIT, WATER PUMP OVERHAUL PARTS

57-70	Air cond.	1	●363 0894

6.2513 PACKING, IMPELLER SHAFT

57-70	Seal assy., w/Spring & Washer	1	●145 1886
57-70	Kit of packing and parts to install	1	●363 0588

6.2530 WASHER, WATER PUMP SEAL

57-70	Thrust	1	●145 1887

6.2543 DRAIN, WATER

57-70	In radiator. Cock, 1/4" pipe thd.	1	●188 411
57-70	In cylinder block. Plug, 1/8" pipe thd.	2	●127 950
57-70	(★25.0200) In water pump, 3/8" pipe thd.	AR	●103 879
57-70	(★12.4160) In cylinder block. Elbow	1	●444 052

6.2563 HOSE, RADIATOR DRAIN

57-70		1	●142 6021

No Page Number 22

SERIES	GROUP NO. & DESCRIPTION	SPECIFICATIONS	NO. USED	PART NO.
	7.0012 GENERATOR			
57-70		With pulley and fan (12 volt - 55 amp.)	1	110 6989
	7.0013 BRACKET, GENERATOR MOUNTING			
57-70			1	146 6850
	7.0014 STUD, GENERATOR MOUNTING BRACKET			
57-70		(★8.3674) 3/8"-16 (9/16") x 17/16" x 3/8"-24 (5/8"). To exhaust manifold	2	●103 195
	7.0015 NUT			
57-70		(★8.4476) 3/8"-24	2	●367 9216
	7.0016 LINK, ADJUSTING, GENERATOR			
57-70			1	146 6849
	7.0023 PULLEY, GENERATOR			
57-70		Less fan, air cond.	1	193 7183
	7.0038 FAN, GENERATOR			
57-70			1	191 0036
	7.0043 BAND, COVERING GEN. BRUSHES			
57-70			1	191 0011
	7.0054 END FRAME, GENERATOR			
57-70		Front	1	193 7468
57-70		Rear. Oiler and wick	1	191 4501
	7.0068 BEARING, GENERATOR ARMATURE SHAFT			
57-70		Front end	1	908 605
57-70		Rear end	1	954 685
	7.0080 NUT, GENERATOR ARMATURE SHAFT			
57-70		Front end	1	443 344
	7.0082 LOCK WASHER			
57-70			1	187 2618
	7.0084 KEY IN ARMATURE SHAFT FOR PULLEY			
57-70			1	124 548
	7.0090 COLLAR, GENERATOR ARMATURE SHAFT FOR BEARING			
57-70		Front	1	191 0035
	7.0118 GASKET, GENERATOR END COVER			
57-70		Front, inner	1	191 0014
57-70		Rear	1	193 5457
	7.0160 OILER, GENERATOR			
57-70		Front and rear end	2	●188 0635
	7.0172 ARMATURE, GENERATOR			
57-70			1	193 6778
	7.0206 FIELD COIL, GENERATOR			
57-70		RH	1	193 5137
57-70		LH	1	193 5138
	7.0226 BUSHING, INSULATING, TERMINAL STUD			
57-70			2	190 9995

	7.0241 BRUSH, GENERATOR			
57-70			2	190 6911
	7.0264 SPRING, GENERATOR BRUSH			
57-70			2	191 0033
	7.0355 HOLDER, GENERATOR BRUSH			
57-70		Insulated	1	190 9989
57-70		Ground	1	190 9993
	7.0375 CONDENSER, RADIO, ON GENERATOR			
57-70			1	192 4466
	7.0460 REGULATOR, GENERATOR, CURRENT AND VOLTAGE			
57-70		55 Amp. w/Cover	1	111 9175
	7.0472 RELAY, GENERATOR CHARGE INDICATOR TELL TALE			
57-70			1	111 6924
	7.0482 RELAY, TELL TALE CHECKING			
57-70			2	111 6918
	7.0580 DISTRIBUTOR, IGNITION			
57-70		Dual carbs.	1	●111 0898
	7.0585 CLAMP, DISTRIBUTOR TO CRANKCASE			
57-70			1	●145 5533
	7.0782 SPRING, DISTRIBUTOR GOVERNOR WEIGHT			
57-70			2	●193 8487
	7.0812 OILER, DISTRIBUTOR			
57-70		w/Wick	1	●193 1982
	7.0912 CAM, DISTRIBUTOR			
57-70		w/weight Base	1	●193 8163
	7.0925 CAP, DISTRIBUTOR			
57-70		w/Latch	1	●193 2018
	7.1002 ROTOR, DISTRIBUTOR			
57-70			1	●193 2135
	7.1005 SCREW, ROTOR ATTACHING			
57-70		(★25.0530) rd. hd. No. 10-32 x 5/8''	2	●141 543
	7.1035 CONTACT POINT SET, DISTRIBUTOR			
57-70		Contact assy., w/Clip, Insulator, Spring & Screws	1	●193 1988
	7.1041 SCREW, CONTACT ATTACHING			
57-70		w/lock Washer	2	●445 651
	7.1107 PLATE, BREAKER, DISTRIBUTOR			
57-70			1	●193 5622
	7.1111 SPRING, BREAKER PLATE RETAINER			
57-70			1	●193 2024
	7.1115 WASHER, BREAKER PLATE			
57-70		Felt	1	●193 2418
	7.1120 LEAD, GROUND, BREAKER PLATE			
57-70			1	●193 2002

	7.1125 LEAD, PRIMARY, DISTRIBUTOR		
57-70		1	●193 8055
	7.1129 GROMMET, DISTRIBUTOR PRIMARY LEAD		
57-70		1	●193 2023
	7.1195 CONDENSER, DISTRIBUTOR		
57-70		1	●193 2004
	7.1242 GEAR, DISTRIBUTOR AND OIL PUMP DRIVE		
57-70		1	●192 6995
	7.1245 PIN, GEAR TO DISTRIBUTOR SHAFT		
57-70	(★7.0696)	1	●829 421
	7.1253 SHAFT, DISTRIBUTOR AND OIL PUMP DRIVE		
57-70		1	●146 3387
	7.1285 GASKET, DISTRIBUTOR TO CRANKCASE		
57-70	Seal, "O" ring	1	●192 7131
	7.1305 VACUUM CONTROL ON DISTRIBUTOR		
57-70		1	●111 6124
	7.1330 PIPE, DISTRIBUTOR VACUUM CONTROL TO CARBURETOR		
57-70		1	●146 7670
	7.1332 CONNECTOR, VACUUM CONTROL TO CARBURETOR PIPE		
57-70	(★25.0210)	1	●137 404
	7.1335 IGNITION COIL		
57-70	(12 volt) w/mounting Bracket	1	●111 5082
	7.1340 CONDENSER, RADIO, ON COIL		
57-70		1	●191 2757
	7.1360 RESISTOR ASSEMBLY, IGNITION COIL		
57-70		1	●192 7809
	7.1370 BRACKET, IGNITION COIL MOUNTING		
57-70		1	351 0681
	7.1412 WIRE SET, IGNITION		
57-70		1	●363 0803
	7.1415 WIRE, IGNITION		
57-70	Coil to distributor. Secondary, 8 1/2" lg., w/Nipples and Terminals	1	●529 4568
	7.1507 NIPPLE, WIRE, IGNITION COIL AND DISTRIBUTOR		
57-70	At distributor	9	●145 7168
57-70	At coil. Omitted when radio is used	1	●190 6803
	7.1585 GROMMET IN BRACKET, SPARK PLUG WIRES		
57-70	Rubber	2	●145 8862
	7.1600 BOOT, SPARK PLUG INSULATOR		
57-70	Rubber	8	●296 2674
	7.1875 SWITCH, IGNITION AND STARTER		
57-70	Less lock and retaining collar	1	●111 6536
	7.1878 COLLAR, IGNITION SWITCH TO INSTRUMENT PANEL		
57-70		1	●193 2586
	7.1881 GASKET, IGNITION SWITCH COLLAR		
57-70		1	●145 8216

	7.1885	LOCK, IGNITION SWITCH		
57-70		Coded to a specified key No., less keys	1	●363 0885
57-70		Uncoded. Cylinder less tumblers & springs	1	●146 8116
	7.1886	KEY, IGNITION SWITCH (Specify lock number)		
57-70		(★25.0057) Hex. hd.	2	●700 2202
	7.1920	HOUSING, IGNITION SWITCH LIGHT		
57-70			1	●146 7160
	7.1964	HOSE, AUTO STARTING RELAY TO CROSS CONNECTION		
57-70		(★38.6350) 7/32" I.D. Specify length required	1	109 8356
	7.2050	STARTER		
57-70			1	110 7668
	7.2063	ARMATURE, STARTER		
57-70			1	●193 2185
	7.2090	WASHER, ARMATURE SHAFT		
57-70		Leather washer	1	●818 265
	7.2110	BRUSH, STARTER		
57-70			4	●190 6945
	7.2115	SCREW, STARTER BRUSH ATTACHING		
57-70			4	●192 6648
	7.2122	HOLDER, BRUSH, STARTER		
57-70		Ground	2	●192 6617
57-70		Insulated	2	●192 6618
	7.2132	KIT, SUPPORT, BRUSH HOLDER		
57-70		w/attaching Screws, Nuts, lock Washers and brush ground Leads	2	●192 8015
	7.2143	SPRING, STARTER BRUSH		
57-70			2	●192 6622
	7.2190	CLUTCH, STARTER		
57-70			1	●193 2188
	7.2210	LEVER, SHIFT, STARTER CLUTCH		
57-70			1	●193 2205
	7.2213	BOOT, STARTER SHIFT LEVER		
57-70			1	193 6818
	7.2215	PIN, SHIFT LEVER AND PLUNGER LINK		
57-70			1	●193 2204
	7.2218	SCREW, STARTER SHIFT LEVER		
57-70			1	●193 2197
	7.2219	NUT, STARTER SHIFT LEVER		
57-70			1	●192 6640
	7.2222	SPRING, SHIFT LEVER ASSIST		
57-70			1	●193 2209
	7.2230	COLLAR, THRUST, STARTER CLUTCH PINION		
57-70			1	●192 7850

	7.2235 COLLAR, STARTER CLUTCH PINION STOP			
57-70			1	●192 7849
	7.2240 RING, PINION STOP COLLAR			
57-70			1	●192 7848
	7.2290 HOUSING WITH BUSHING, STARTER CLUTCH			
57-70			1	193 6819
	7.2300 BUSHING, STARTER CLUTCH			
57-70		In clutch housing	1	●192 3907
	7.2410 FIELD COIL, STARTER			
57-70		(3 Coils)	1	●193 5128
57-70		Shunt	1	●193 5131
	7.2420 INSULATOR, SHUNT FIELD COIL			
57-70			1	●192 7853
	7.2430 GROMMET IN FIELD FRAME			
57-70			1	●193 5168
	7.2455 END FRAME, STARTER			
57-70		w/Bushing	1	●192 8966
	7.2756 SOLENOID UNIT ON STARTER			
57-70			1	●111 9910
	7.2764 COVER, SOLENOID RELAY AND SWITCH			
57-70			1	●193 5167
	7.2765 GASKET, SOLENOID RELAY SWITCH COVER			
57-70			1	●193 2224
	7.2770 CONTACT AND PUSH ROD, SOLENOID SWITCH			
57-70			1	●193 2243
	7.2775 PLUNGER, SOLENOID UNIT			
57-70			1	193 6810
	7.2778 SPRING, SOLENOID UNIT PLUNGER RETURN			
57-70			1	●193 2208
	7.2780 BOOT, SOLENOID			
57-70			1	193 6817
	7.2790 STUD, TERMINAL, SOLENOID			
57-70		3/8"-16	1	●192 7344
	7.2804 CABLE, BATTERY TO TERMINAL BLOCK			
57-70		(Pos. 221 3/4" lg.)	1	296 6630
	7.2808 CABLE, TERMINAL BLOCK TO STARTER			
57-70		(25 1/4" lg.)	1	296 6632
	7.2813 SLEEVE, BATTERY CABLE PROTECTING			
57-70		(Rubber)	3	146 7489
	7.2814 CLAMP, STARTER CABLE RETAINING			
57-70			1	146 7786
	7.2820 STRAP, ENGINE GROUND			
57-70		To frame (9" lg.)	1	296 6633
57-70		To air duct cover	1	●528 9475
57-70		To dash	1	●296 8743

	7.2822 SCREW, GROUND STRAP TO DASH			
57-70	(★25.0560) Tapping pan cross recess hd., 1/4"-14 x 1/2"		1	●163 303
57-70	(★25.0560) Tapping, pan hd. No. 8-15 x 1/2"		1	●161 860
	7.2830 CLIP, BATTERY CABLE			
57-70	(5/8" open clip) To rear comp't.		7	146 7485
57-70	(5/8" closed clip) To rear comp't.		1	146 7487
	7.2831 SCREW, BATTERY CLIP			
57-70	(★25.0560) Pan cross recess hd., 1/4"-14 x 1/2"		4	●163 303
	7.2833 WASHER, BATTERY CLIP SCREW			
57-70	(★31.5413) Rubber		2	●145 1083
	7.2910 STRAP, GROUND, BATTERY			
57-70	21" lg.		1	296 6631
	7.2920 BLOCK, JUNCTION, BATTERY CABLES			
57-70			1	199 8817
	7.2924 SHIELD, JUNCTION BLOCK			
57-70			1	146 7330
	7.2930 SHIELD, BATTERY CABLE			
57-70			1	146 8670
	7.2944 BOLT AND NUT, BATTERY CABLE AND GROUND STRAP TERMINAL			
57-70			2	●184 6534
	7.2955 COVER OR FRAME, BATTERY RETAINING			
57-70	Cover		1	146 6297
57-70	Frame		1	351 0940
	7.2957 NUT, BATTERY COVER BOLT			
57-70	Wing nut 5/16"-18		2	●142 745
	7.2959 GROMMET, BATTERY RETAINING FRAME			
57-70			2	●146 7091
	7.2960 CLAMP ASSY., BATTERY COVER			
57-70			2	146 6293
	7.2961 SCREW, BATTERY COVER CLAMP			
57-70	(★25.0562) Pan cross recess hd., w/ext. tooth lock washer No. 10 - 24 x 1/2"		4	456 334
	7.2965 GASKET, BATTERY COVER			
57-70			1	146 6295
	7.2968 WASHER, BATTERY TERMINAL POST			
57-70	Felt		2	●392 454
	7.2981 RELAY, ACCESSORIES DISCONNECT			
57-70			1	111 6927
	7.2986 RELAY, AIR COMPRESSOR PROTECTION			
57-70			1	111 6938
	7.3050 AMMETER			
57-70			1	150 1811
	7.3163 KNOB, CIGAR LIGHTER			
57-70	w/Stud and Cup		2	146 6059
	7.3185 TIP, IGNITING, CIGAR LIGHTER			
57-70	(12 volt)		2	●146 7036

	7.3195 BASE, SWITCH, CIGAR LIGHTER			
57-70	Less clamp		2	●146 8786
	7.3197 CLAMP, CIGAR LIGHTER			
57-70			2	●146 6057
	7.3201 INSULATOR, CIGAR LIGHTER BASE AND CLAMP			
57-70	Asbestos		2	●146 8932
	7.3207 LENS, INSTRUMENT PANEL CIGAR LIGHTER INDICATOR			
57-70			3	●469 6483
	7.3265 HORNS			
57-70	"G" note		1	●900 0304
57-70	"B Flat" note		1	●900 0407
57-70	"C" note		1	199 9589
57-70	"E" note		1	900 0329
	7.3277 SUPPORT, HORN			
57-70	w/Bracket and Lamination		1	351 0962
	7.3295 GRILLE ASSY., HORN, IN FRONT FENDER			
57-70	(★10.0033)		2	351 0817
	7.3333 RELAY, HORN, WITH COVER			
57-70	(12 volt)		1	●111 6920
	7.3792 INSULATOR, HORN BUTTON CONTACT SPRING			
57-70			1	●146 6453
	7.3796 SPRING, HORN RING CONTACT			
57-70			1	●145 7762
	7.3820 TERMINAL, HORN CABLE			
57-70			1	●568 4071
	7.3823 CONTACT, HORN WIRE JUNCTION ON STEERING TUBE			
57-70	w/horn Wire. Cut to length as required		1	●566 4917
	7.3826 INSULATOR, HORN BUTTON WIRE TERMINAL			
57-70	Fibre		1	●265 136
	7.3880 RING, HORN OPERATING			

NOTE: See Color chart on page G-4 for paint specifications.

57-70	Paint spokes with lacquer to match when required		1	146 6364
	7.3883 RETAINER, HORN RING			
57-70			1	●146 6455
	7.3884 SCREW, RETAINER TO RING			
57-70	(★25.0560) Tapping pan cross recess hd., No. 8-32 x 5/16"		2	●167 028
	7.3886 CUSHION, HORN RING RETAINER			
57-70			1	●146 3990
	7.3897 EMBLEM, HORN RING			
57-70			1	146 6690
	7.3898 SCREW, HORN RING EMBLEM			
57-70	(★25.0560) Tapping pan cross recess hd., No. 6-32 x 3/4"		2	167 008
	7.3902 SPACER, HORN RING AND STEERING WHEEL			
57-70	Also used as cam for steering wheel		1	●146 5835
	7.3930 COLLAR, HORN RING			
57-70			1	●146 6456

7.3931 SCREW, HORN RING COLLAR

57-70	Set screw	2	●140 849

7.3940 INSULATOR, HORN RING

57-70		1	●146 6454

7.3950 RETAINER, HORN RING SPRING

57-70		1	●146 4395

7.5410 GROMMET, DASH WIRES

57-70	For dash harness	1	146 7144

7.5420 RETAINER, DASH WIRES GROMMET

57-70		2	●146 1215

7.5430 GROMMET, CHASSIS HARNESS

57-70		1	●146 2252

7.5558 TERMINAL

57-70	On wire for spark plug	8	●529 7429

7.5630 BLOCK, FUSE

57-70	w/Clips	1	146 8314

7.5730 HARNESS, DASH WIRING

57-70 before car No. 24		1	296 7251
57-70 after car No. 23		1	296 9382

7.5740 CLIP, DASH HARNESS RETAINING

57-70	To brake pedal support	1	●146 8169
57-70	To dash	5	146 7988

7.5750 SLEEVE, FUEL TANK FLOAT UNIT TERMINAL

57-70	(★7.0035)	1	●187 8788

7.5771 WIRE

57-70	7MM. Secondary		●185 1208
57-70	No. 14, single braid, black		●184 7845
57-70	No. 16, single braid, black		●184 7844
57-70	No. 18, single braid, black		●527 0013

7.5860 CLIP, TRUNK LOCK CONNECTION

57-70	On glove box	1	146 7571

7.5865 CLIP, HEADLAMP CONNECTION

57-70	Also for park, signal and fog lamp connection	4	●371 4373

SERIES	GROUP NO. & DESCRIPTION	SPECIFICATIONS	NO. USED	PART NO.
	8.0025	CRANKCASE EN-BLOC, FITTED WITH PISTONS, RINGS, PISTON PINS, CLUTCH HOUSING, MAIN BEARINGS, BEARING CAPS AND CAMSHAFT BEARINGS (STANDARD SIZE)		
		NOTE: Factory will stamp engine number on block, when specified on order.		
57-70		Less flywheel housing	1	363 0794
	8.0030	ENGINE ENAMEL, CADILLAC BLUE		
57-70		1 gal. can		●109 8605
	8.0105	BOLT, MAIN BEARING CAP		
57-70		Hex. hd., 1/2"-13 x 3 1/4"	10	●146 4572
	8.0158	PLUG, CRANKCASE		
57-70		In outer cylinder wall, for counterbored hole, 1 47/64" spec. expansion	AR	●145 3829
57-70		(★25.0180) 1 1/8" expansion. For crankcase rear	1	●106 517
57-70		1 31/64", expansion. In outer cylinder wall, for counterbored hole	6	●145 4078
	8.0286	HOUSING, CLUTCH OR FLYWHEEL		
57-70		w/Bushing and Seal	1	●861 8101
	8.0287	SCREW, FLYWHEEL HOUSING		
57-70		(★25.0500) 7/16"-14 x 1 1/4". To crankcase	6	●122 267
	8.0290	SEAL, FLYWHEEL HOUSING		
57-70		(★20.0070) HYD.	1	●861 8181
	8.0291	SEAL, FLYWHEEL HOUSING TO CASE		
57-70		HYD.	1	●861 6480
	8.0328	SHAFT, VERTICAL, IN CRANKCASE		
57-70		(★7.1253)	1	●146 3387
	8.0359	GEAR ON END OF VERTICAL SHAFT		
57-70		(★7.1242) For distributor and oil pump	1	●192 6995
	8.0443	COVER, ENGINE FRONT		
57-70			1	●351 0966
	8.0444	SCREW, ENGINE FRONT COVER		
57-70		(★25.0500) 5/16"-18 x 1/2"	9	●120 834
	8.0455	GASKET, ENGINE FRONT COVER		
57-70			1	●145 1662
	8.0500	SLINGER, OIL, FRONT END OF CRANKSHAFT		
57-70			1	●145 5461
	8.0555	WASHER, OIL, SEAL RETAINER		
57-70		Rubber lip type	1	●146 6004
	8.0687	CRANKSHAFT WITH COUNTER WEIGHTS		
57-70		All engines exc. special purpose jobs	1	●146 8023
	8.0690	SPACER, BETWEEN CRANKSHAFT AND FLYWHEEL		
57-70			1	●146 8064
	8.0840	PACKING, CRANKSHAFT REAR BEARING		
57-70			2	●143 5209

	8.0845 MAIN BEARING, CRANKSHAFT, STD. SIZE			
57-70	Front, center and intermediate. Upper and lower		4	●363 0622
57-70	Rear. Upper and lower		1	●363 0760
	8.0850 PLASTIGAGE, MAIN BEARINGS			
57-70	Set includes 12 pieces of plastigage and instruction sheet		1	●109 7678
	8.0920 BALANCER OR PULLEY, ON CRANKSHAFT			
57-70	Air cond. Harmonic w/Pulley		1	●351 0778
	8.0921 PULLEY, FAN DRIVE, ON CRANKSHAFT			
57-70	Quadruple pulley, air cond.		1	●146 5626
	8.0923 SCREW, BALANCER TO CRANKSHAFT			
57-70	1/2"-20 x 1 3/8"		1	●146 8651
	8.0924 WASHER, FLAT, BALANCER CRANKSHAFT SCREW			
57-70	17/32" x 1 3/8" x 1/4"		1	●145 1724
	8.0925 KEY, BALANCER TO CRANKSHAFT			
57-70	(★8.1554) Spec., 3/16" x 1 3/8"		1	●144 7231
	8.0931 FLYWHEEL			
57-70	w/Ring gear & dowels. HYD.		1	●861 8027
	8.0936 PLATE, FLYWHEEL DRIVE			
57-70	w/Shims & Washers		1	●363 0887
	8.0937 SCREW, DRIVE PLATE TO CRANKSHAFT			
57-70	(★8.0712) Spec. 7/16"-20 x 5/8"		6	●116 1920
	8.0938 NUT, DRIVE PLATE TO FLYWHEEL			
57-70	(★25.0088) Hex. lock 5/16"-24		4	●126 002
	8.0939 SHIM, DRIVE PLATE TO FLYWHEEL			
57-70			4	●146 6903
	8.0945 PLUG IN FLYWHEEL, FLUID DRAIN			
57-70	(★20.1503) HYD.		1	●860 8680
	8.0995 CAMSHAFT			
57-70	w/Dowel		1	●351 1059
	8.1035 BEARINGS, CAMSHAFT			
57-70	Front, center and intermediate		4	●145 5467
57-70	Rear		1	●145 5468
	8.1073 CHAIN, ENGINE TIMING			
57-70			1	●145 1634
	8.1543 SPROCKET, DRIVE, ON CRANKSHAFT			
57-70			1	●145 9163
	8.1544 SPACER, CRANKSHAFT SPROCKET			
57-70			1	●145 1609
	8.1554 KEY, SPROCKET TO CRANKSHAFT			
57-70	Spec. 3/16" x 1 3/8"		1	●144 7231
	8.1575 SPROCKET, DRIVEN, ON CAMSHAFT			
57-70			1	●145 3718
	8.1940 COVER, VALVE COMPARTMENT			
57-70			1	●350 9049
	8.1945 SCREW, VALVE COMPARTMENT COVER			
57-70	Spec. hex. hd., pointed 1/4"-20 x 3 7/8"		2	●145 7883

	8.1947 WASHER, FLAT		
57-70	9/32" x 5/8" x 1/16". Fibre	2	●145 7418
	8.1984 GASKET, VALVE COMPARTMENT COVER		
57-70		1	●145 3821
	8.2006 TUBE OR CONDUIT, ENGINE VENTILATOR		
57-70		1	●146 5447
	8.2010 SCREW, VENTILATOR TUBE		
57-70	Spec., hex. hd., pointed 1/4"-20 x 5 9/16"	1	●145 3384
	8.2012 WASHER, VENTILATOR TUBE		
57-70	(★8.1947) 9/32" x 5/8" x 1/16", fibre	1	●145 7418
	8.2017 GASKET, VENTILATOR TUBE OR CONDUIT		
57-70	To valve lifter compartment cover	1	●145 5428
	8.2082 CONNECTING ROD WITH BEARING CAP, BOLTS AND NUTS (STANDARD SIZE)		
57-70	Less piston pin bushing	8	●351 0706
	8.2090 BOLT, CONNECTING ROD		
57-70	3/8"-24 x 2 3/16"	16	●145 5112
	8.2093 NUT, CONNECTING ROD BOLT		
57-70	Spec., 3/8"-24	16	●560 545
	8.2140 BEARING, CONNECTING ROD (STANDARD SIZE)		
57-70	Upper and lower	8	●363 0513
	8.2145 PLASTIGAGE, CONNECTING ROD BEARINGS		
57-70	(★8.0850) Set includes 12 pieces of plastigage and instruction sheet	1	●109 7678
	8.2157 PISTON W/RINGS AND PIN (STANDARD SIZE)		
57-70	High comp.	8	●363 0779
	8.2165 PISTON W/RINGS AND PIN (.010" OVERSIZE)		
57-70	High comp.	8	●363 0780
	8.2172 PISTON W/RINGS AND PIN (.020" OVERSIZE)		
57-70	High comp.	8	●363 0781
	8.2176 PISTON W/RINGS AND PIN (.030" OVERSIZE)		
57-70	High comp.	8	●363 0782
	8.2275 RE-RING SET, PISTON (STANDARD SIZE)		
	(NOTE: For oversize see group 8.2278,79,80).		
57-70		1	●146 4860
57-70	2 in 1 Chrome set. Use on pistons to .010" oversize	1	●146 4870
	8.2278 RE-RING SET, PISTON (.010" OVERSIZE)		
57-70		1	●146 4861
	8.2279 RE-RING SET, PISTON (.020" OVERSIZE)		
57-70	2 in 1 Chrome set. Also use on .015" oversize	1	●146 4873
	8.2280 RE-RING SET, PISTON (.030" OVERSIZE)		
57-70	2 in 1 Chrome set	1	●146 4876
	8.2283 CYLINDER HEAD		
57-70	RH	1	363 0766
57-70	LH	1	●363 0754
	8.2306 PLUG, CYLINDER HEAD		
57-70	(★8.0158) 1 31/64" expansion	4	●145 4078

8.2317 GASKET, CYLINDER HEAD

57-70		2	●146 3147

8.2320 SCREW, CYLINDER HEAD TO BLOCK

57-70	7/16"-14 x 5 15/16"	8	●145 1862
57-70	Air cond., 7/16"-14 x 4 1/16", spec.	10	●145 1863
57-70	7/16"-14 x 3 11/16"	8	●146 3111
57-70	Air cond., 7/16"-14 x 2 3/4", spec.	7	●146 3013
57-70	Air cond., 7/16"-14 x 3"	1	●146 3634

8.2350 SPARK PLUGS

57-70	(★25.0045) 44, 14mm. thd. (Optional)		●155 9492
57-70	(★25.0045) 43, 14mm. thd. (Optional)		●556 9857

8.2358 GASKET, SPARK PLUGS

57-70	(★25.0046) For 14 mm. thd. spark plugs		●155 5475

8.2500 VALVE, INLET AND EXHAUST

NOTE: Inlet valves are marked "IN" and exhaust valves "EX".

57-70	"IN"	8	●146 5611
57-70	"EX"	8	●146 5612

8.2510 COVER, VALVE ROCKER ARM

57-70	RH. Cars w/dual carbs.	1	●351 1028
57-70	LH. Cars w/dual carbs.	1	●351 1027

8.2520 GASKET, VALVE ROCKER ARM COVER

57-70		2	●146 7429

8.2528 BOLT, VALVE ROCKER ARM COVER

57-70	(★25.0562) 1/4"-20 x 5/8"	8	●160 536

8.2532 REINFORCEMENT, VALVE ROCKER ARM COVER

57-70		8	●383 6660

8.2540 ARM, VALVE ROCKER

57-70		16	●146 1986

8.2614 SHAFT, VALVE ROCKER ARM

57-70	w/Plugs	2	●363 0066

8.2618 WASHER, ROCKER ARM SHAFT

57-70	Flat, 13/16" x 1 5/16" x 1/16"	8	●123 7679
57-70	Spring, 27/32" x 1 5/16"	4	●124 9383

8.2628 BRACKET, ROCKER ARM SHAFT

57-70	Identified by daub of white paint. Front, center and rear	8	●146 3615

8.2670 SPRING, ROCKER ARM SHAFT

57-70	4 31/32" lg.	4	●145 1924
57-70	3 63/64" lg.	2	●145 1925

8.2700 VALVE LIFTER

57-70	Unit type	16	●523 1740

8.2702 RING, LOCK, VALVE LIFTER

57-70	Plunger to body. Use w/unit type lifter	16	●523 0321

8.2743 GUIDE, VALVE STEM

57-70	Identified by daub of white paint. In cylinder head	16	●146 2112

8.2753 PUSH ROD, VALVE LIFTER

57-70		16	●146 8453

8.2773 SPRING, INLET AND EXHAUST VALVES

57-70		16	●146 5408

	8.2783 SEAT, VALVE SPRING			
57-70	"IN" and "EX"		16	●146 5409
	8.2786 SEAL, VALVE SPRING SEAT			
57-70			16	●145 3923
	8.2793 LOCK, VALVE SPRING SEAT			
57-70			32	●838 029
	8.2900 TUBE, OIL FILLER AND CRANKCASE BREATHER			
57-70	Fuel pump support		1	●351 0723
	8.2902 GASKET, OIL FILLER TUBE TO CRANKCASE			
57-70			1	●145 1881
	8.2932 CAP, OIL FILLER			
57-70	Type FB-5, 3" high, breather cap		1	●155 2231
	8.2957 GASKET, OIL FILTER TO CRANKCASE			
57-70			1	519 458
	8.2960 CARTRIDGE, OIL FILTER			
57-70	Type PF-122		1	557 2128
	8.3075 TUBE, OIL LEVEL INDICATOR			
57-70			1	●146 5501
	8.3080 INDICATOR, OIL LEVEL			
57-70	Less cap		1	●146 6797
	8.3135 PAN, OIL			
57-70			1	●351 0366
	8.3136 SCREW, OIL PAN TO CRANKCASE			
57-70	(★25.0500) 5/16"-18 x 1/2"		16	●120 834
	8.3145 FLANGE, OIL PAN DRAIN PLUG			
57-70			1	●145 5543
	8.3147 PLUG, OIL PAN DRAIN			
57-70	5/8"-18. Less gasket		1	●145 5051
	8.3157 GASKET, OIL PAN DRAIN PLUG			
57-70			1	●145 6386
	8.3172 BAFFLE, OIL PAN			
57-70	w/Support		1	●351 0633
	8.3176 SCREW, SUPPORT TO BAFFLE			
57-70	(★25.0500) 5/16"-18 x 9/16"		4	●121 986
	8.3180 GASKET, OIL PAN			
57-70	Complete set		1	●363 0054
	8.3478 CONNECTOR, OIL PIPE			
57-70	(★25.0210) Power Steer.		2	●137 404
	8.3550 GAUGE, OIL PRESSURE			
57-70			1	151 8655
	8.3560 SWITCH, OIL PRESSURE SIGNAL SENDING			
57-70			1	150 8624
	8.3563 SENDING UNIT, OIL GAUGE			
57-70			1	150 8566
	8.3565 ADAPTER, OIL GAUGE SENDING UNIT			
57-70			1	443 998

8.3567 ELBOW, OIL PRESSURE ENGINE UNIT SWITCH

57-70	(★12.4160) 1/8"-90°	1	●444 038

8.3670 HOUSING, OIL PUMP

57-70		1	●145 9827

8.3674 SCREW OR STUD, FOR OIL PUMP

57-70	3/8"-24, 3/8"-16, 1 7/16" lg. To rear main bearing cap	2	●103 195

8.3706 GASKET, OIL PUMP

57-70	To bearing cap	1	●145 1839

8.3778 GEAR, OIL PUMP DRIVE AND DRIVEN

57-70	w/Shaft	1	●363 0434

8.3800 SHAFT, OIL PUMP DRIVEN GEAR

57-70		1	●145 9311

8.3833 COLLAR, DRIVE SHAFT

57-70		1	●146 0715

8.3878 VALVE, OIL PRESSURE, IN HOUSING

57-70		1	●141 2987

8.3880 SPRING, OIL PRESSURE REGULATING

57-70		1	●146 7974

8.3882 RETAINER, REGULATING SPRING

57-70		1	●141 2988

8.3885 DRIVER, VACUUM PUMP ROTOR

57-70		1	●145 7872

8.3887 SEAL, OIL PUMP INTAKE

57-70	(★7.2968)	1	●392 454

8.3889 SCREEN, OIL PUMP STRAINER

57-70	Floating type	1	●145 9843

8.4325 MANIFOLD, INTAKE

57-70	Cars w/dual carbs.	1	●351 0701

8.4326 SCREW, INTAKE MANIFOLD

57-70	Power steer., 3/8"-16 x 1 1/8". To cylinder head	4	●145 9588

8.4350 GASKET, INTAKE MANIFOLD

NOTE: For combination intake and exhaust manifold gaskets, see group 8.4454.

57-70	To cylinder head	2	●145 3393

8.4432 MANIFOLD, EXHAUST

57-70	RH	1	●146 5051
57-70	LH	1	●146 4237

8.4433 SCREW, EXHAUST MANIFOLD

57-70	7/16"-14 x 1 1/2"	2	●146 3113
57-70	7/16"-14 x 2 1/4"	10	●146 3110

8.4438 STUD, INTAKE AND EXHAUST MANIFOLD

57-70	Air cond., 3/8"-16, 3/8"-24, 1 13/16". In cylinder head	2	●103 197
57-70	Air cond., 3/8"-16, 3/8"-24 x 2 1/16" lg.	1	●103 198

8.4439 NUT

57-70	(★25.0080) 3/8"-24	4	●120 369

	8.4445 WASHER FOR SCREW OR STUD			
57-70	Air cond., 13/32" x 1 3/8" x 1/4"		3	●400 130
	8.4454 GASKET, EXHAUST MANIFOLD			
57-70	Front and rear. To cylinder head		4	●146 3109
57-70	Center. To cylinder head		2	●146 3112
	8.4456 COVER, CARBURETOR AUTOMATIC CHOKE HEATER ON EXHAUST MANIFOLD			
57-70			1	●146 5363
	8.4490 VALVE, MANIFOLD HEAT CONTROL			
57-70			1	●351 0508
	8.9000 GASKET KIT, VALVE REGRIND			
57-70			1	●363 0859
	8.9005 SOLVENT, CADILLAC GUM AND CARBON			
	15 oz. can		#	●146 3341
	8.9010 PASTE, GASKET			
	16 oz. can, w/Brush		#	●109 7445

NOTE: #: Inflammable material CANNOT be routed postal or air shipment.

No Page Number 38

SERIES	GROUP NO. & DESCRIPTION	SPECIFICATIONS	NO. USED	PART NO.
	9.0010 MUFFLER, FRONT			
57-70			2	●146 8027
	9.0012 MUFFLER, REAR			
57-70		Resonator	2	146 8527
	9.0013 BAFFLE, REAR MUFFLER DRAIN HOLE			
57-70		Rubber disc at front of rear muffler	2	146 8671
	9.0219 PIPE, EXHAUST MANIFOLD TO MUFFLER, FRONT OR UPPER			
57-70		RH. Less flange	1	●146 6637
57-70		LH. Less flange	1	●146 6698
	9.0222 PIPE, EXHAUST MANIFOLD TO MUFFLER, INTERMEDIATE			
57-70		RH	1	146 6636
57-70		LH	1	146 6717
	9.0230 ADAPTER, MUFFLER PIPE			
57-70		Front pipe between front and rear muffler	2	146 7329
	9.0241 FLANGE, EXHAUST PIPE			
57-70			2	●145 8655
	9.0242 SCREW, OR STUD, EXHAUST PIPE FLANGE			
57-70		(★8.4475) 3/8"-24 x 3/8"-16 x 1 3/8" lg. stud	2	●145 4696
57-70		(★8.4475) 3/8"-24 x 3/8"-16 x 2 1/4" lg. stud	2	●145 5359
	9.0243 NUT			
57-70		(★8.4476) 3/8"-24 spec.	4	●367 9216
	9.0253 GASKET, EXHAUST PIPE FLANGE			
57-70			3	●146 3228
	9.0263 COVERING, ASBESTOS OR FLEXIBLE STEEL TUBING, EXHAUST PIPE			
57-70		Rear, 30 1/2" long. Flexible steel tubing; cut to length as required	2	●146 6893
57-70		RH, front. Flexible steel tubing; cut to length as req'd.	1	●146 1152
57-70		LH. Flexible steel tubing; cut to length as req'd.	AR	●142 6686
	9.0270 PIPE, BETWEEN FRONT AND REAR MUFFLER			
57-70		RH. Front, also order adapter pipe no. 146 7329 (gr. 9.0230)	1	146 7336
57-70		LH. Front, also order adapter pipe no. 146 7329 (gr. 9.0230)	1	146 7335
57-70		RH. Rear	1	146 6388
57-70		LH. Rear	1	146 6387
	9.0283 PIPE, TAIL, MUFFLER, REAR			
57-70			2	146 6631
	9.0293 SUPPORT, MUFFLER			
57-70		RH. w/Insulator, intermediate pipe between front and rear muffler	1	351 0944
57-70		LH. w/Insulator, intermediate pipe between front and rear muffler	1	351 0943
57-70		RH. Exhaust pipe in front of muffler	1	351 0967
57-70		RH. w/Insulator, front of front muffler	1	351 1039

57-70	LH. w/Insulator, front of front muffler	1	351 1038
57-70	RH. w/Insulator, rear of front muffler	1	351 1114
57-70	LH. w/Insulator, rear of front muffler	1	351 1113

9.0296 SCREW, MUFFLER HANGER SPRING

57-70	(★10.0012) For rear muffler support. Tapping. Hex. hd., 5/16"-18 x 3/4"	4	●178 411

9.0303 BRACE, MANIFOLD, TO MUFFLER PIPE

57-70	RH. To flywheel housing	1	146 7216
57-70	LH. To flywheel housing	1	●146 6848

9.0383 "U" BOLT, MUFFLER, SADDLE

57-70	Resonator clamp	4	●146 3289
57-70	Rear clamp	2	●146 3289
57-70	Muffler, rear support	2	●146 8489
57-70	Muffler, front	4	●146 8489

9.0395 SADDLE, MUFFLER CLIP OR "U" BOLT

57-70	Muffler, front and rear inlet clamp	4	●146 3286
57-70	Resonator clamp. For cars w/resonators	4	●146 3288
57-70	Rear clamp. For cars less resonators	4	●146 3288
57-70	Muffler rear clamp	2	●146 3288

9.0410 INSULATOR, TAIL PIPE TO TAIL PIPE END

57-70		2	●146 6136

9.0415 CLIP, TAIL PIPE TO TAIL PIPE END INSULATOR

57-70		2	●146 4098

9.0421 ESCUTCHEON, REAR BUMPER, EXHAUST PORT

57-70	(★11.0814)	2	351 0816

SERIES	GROUP NO. & DESCRIPTION	SPECIFICATIONS	NO. USED	PART NO.
	10.0010 FENDER, FRONT, IN PRIMER			
57-70		RH	1	351 0583
57-70		LH	1	351 0582
	10.0012 SCREW, FRONT FENDER			
57-70		To frame. Self tapping 5/16"-18 x 3/4"	14	●178 411
57-70		(★25.0500) 3/8"-24 x 1 1/4". Fender to radiator cradle	2	●181 639
	10.0013 NUT, FRONT FENDER SCREW			
57-70		Clinch type, 3/8"-16. To rocker panel	AR	●273 240
	10.0014 WASHER			
57-70		(★25.0400) 21/64" x 1 1/2" x 3/32" flat washer	4	● 52 232
57-70		(★54.1070) 13/32" x 1 1/4" x 1/8" flat washer	2	●143 7694
	10.0021 SEAL, FRONT FENDER			
57-70		RH (★35.0050) Sponge rubber, upper panel to cowl	1	470 3663
57-70		LH (★35.0050) Sponge rubber, upper panel to cowl	1	470 3664
57-70		RH. Weatherstrip, fender to hood	1	146 8040
57-70		LH. Weatherstrip, fender to hood	1	146 8039
57-70		Dustshield to frame, rubber	2	●146 8439
	10.0022 SPACER, FRONT FENDER			
57-70		Fender to body and radiator tie bar	AR	●146 2559
	10.0023 BRACKET, FRONT FENDER			
57-70		To rocker panel	2	●146 6568
	10.0025 BUMPER, FRONT FENDER			
57-70		Fender to front bumper	8	●146 6995
	10.0026 SUPPORT, FRONT FENDER			
57-70		RH. Rear, to hinge pillar, front	1	146 7094
57-70		LH. Rear, to hinge pillar, front	1	146 7093
	10.0027 SCREW, FENDER SUPPORT			
57-70		Fender to body (★25.0500) 3/8"-16 x 1"	2	●120 233
	10.0033 MOLDING, TRIM, FRONT FENDER OR EXTENSION			
57-70		RH. Front, above bumper, chromium	1	146 6396
57-70		LH. Front, above bumper, chromium	1	146 6395
57-70		RH. Side, upper, chromium	1	146 5991
57-70		LH. Side, upper, chromium	1	146 5990
57-70		Horn grille assy., chromium	2	351 0817
57-70		RH. Lower, sill extension, chromium	1	146 8077
57-70		LH. Lower, sill extension, chromium	1	146 8076
	10.0034 SCREW OR FASTENER STUD, TRIM MOLDING			
57-70		(★25.0562) No. 10-24 x 1/2" pan hd., sill extension molding retainer to fender	4	●159 920
	10.0035 NUT, TRIM MOLDING			
57-70		(★25.0080) 1/4"-20 horn grille retaining	2	●120 375
57-70		Front fender side molding	14	●146 3192
57-70		(★14.1920) No. 10-12 "J" type spring nut, sill molding extension	2	446 767
57-70		(★10.0114) No. 6-32, w/Lockwasher	14	271 482
57-70		(★54.5833) No. 10-24 with lockwasher, sill molding extension retainer to fender	4	●271 166

10.0038 PLATE OR CLIP, TRIM MOLDING

57-70	Plate, horn grille retaining	2	146 5988
57-70	Clip w/Stud, lower front molding	14	146 6821
57-70	Clip, side molding	14	146 7457
57-70	Steel strip, side sill extension	2	146 8083

10.0040 VENTILATOR, FRONT FENDER

57-70	RH, inner. In primer	1	351 1108
57-70	RH, outer. In primer	1	351 1107
57-70	LH, inner and outer. In primer	2	351 1107

10.0042 NUT, FRONT FENDER VENTILATOR

57-70	(★25.0080) No. 8-32	33	●120 622

10.0049 LETTER, NAME PLATE, OR CREST, FRONT FENDER

57-70	Bezel, with insert, Eldorado Brougham, w/Studs, chromium	2	146 7985

10.0050 CLIP, OR NUT, NAME PLATE TO FENDER

57-70	(★31.5411) No. 8-32 nut, for crest insert	4	●146 3696

10.0067 PLATE, BAFFLE, DUST SHIELD

57-70	RH. Front of fender. w/Seal	1	351 0861
57-70	LH. Front of fender. w/Seal	1	351 0860
57-70	RH. Upper rear of fender. w/Seal	1	351 0839
57-70	LH. Upper rear of fender. w/Seal	1	351 0838
57-70	RH. Inner. w/Seal	1	351 0841
57-70	LH. Inner. w/Seal	1	351 0840
57-70	RH. Dust shield to frame	1	●351 0855
57-70	LH. Dust shield to frame	1	●351 0854
57-70	RH. Lower extension front of fender, w/Seal	1	351 0981
57-70	LH. Lower extension front of fender, w/Seal	1	351 0980
57-70	RH. Lower, rear of fender	1	351 0837
57-70	LH. Lower, rear of fender	1	351 0836

10.0068 BRACKET, DUST SHIELD BAFFLE

57-70	Front extension	2	146 7727

10.0069 SCREW, BAFFLE PLATE

57-70	(★25.0500) 5/16"-18 x 3/4"	34	●122 007
57-70	(★25.0500) 1/4"-20 x 3/4"	2	●121 887
57-70	(★25.0500) 1/4"-20 x 1/2"	4	●120 706
57-70	(★25.0562) 1/4"-20 x 3/4", header point, rear lower plate to fender	6	273 716
57-70	(★10.0012) 5/16"-18 x 3/4", self tapping	12	●178 411

10.0070 NUT

57-70	(★10.0708) 1/4"-20 clip, type "J"	6	●146 7045
57-70	(★6.1078) 1/4"-20 spring type "U", baffle to extension	4	146 7236
57-70	(★11.0766) 5/16"-18 clip, type "J"	12	146 6883

10.0092 BOX, BATTERY

57-70	Tray	1	351 0862

10.0097 HOSE, DRAIN, BATTERY TRAY

57-70	8" long	1	146 7433

10.0100 PANEL, CROSSOVER, FRONT FENDER

57-70	Below hood, in primer	1	351 1240

10.0110 MOLDING, FRONT FENDER CROSSOVER PANEL

57-70	Center, above radiator grille, chromium	1	146 6087
57-70	Escutcheon, center to fender moldings	2	146 6566

10.0112 CLIP, CROSSOVER PANEL MOLDING

57-70	(★10.0038) Clip, w/Stud	4	146 6821

10.0114 NUT, CROSSOVER PANEL MOLDING CLIP

57-70	No. 6-32, w/Lock washer	4	271 482

10.0120 SEAL, FENDER CROSSOVER PANEL

57-70	Rubber, to tie bar	1	146 7744

10.0122 RETAINER, CROSSOVER PANEL SEAL

57-70	To tie bar, in primer	2	146 7146

10.0124 SCREW, CROSSOVER PANEL SEAL

57-70	(★6.1073) No. 14-14 x 5/8", tapping screw, washer head, to tie bar	5	●415 204

10.0126 WASHER, CROSSOVER PANEL SEAL SCREW

57-70	(★10.0834) Plain washer, 1 1/4" x 9/32" x 1/16"	1	●146 2120

10.0700 FENDER, REAR, IN PRIMER

57-70	RH. (★35.1015) Outer panel, includes rear fender, less hinge pillar, wheelhouse panel and front and rear extensions	1	467 5830
57-70	LH. (★35.1015) Outer panel, includes rear fender, less hinge pillar, gas tank filler door, wheelhouse panel and front and rear extensions	1	467 5831

10.0705 MOLDING, TRIM, REAR FENDER OR CAP

57-70	(★35.1620) Lower, above wheel opening molding	2	468 7661
57-70	RH. (★10.0820) Panel around wheel opening, with locks and seals. Chromium	1	351 0600
57-70	LH. (★10.0820) Panel around wheel opening, with locks and seals. Chromium	1	351 0599
57-70	(★35.1620) Fender crown molding	2	468 7038

10.0707 SCREW OR STUD, RETAINER MOLDING

57-70	(★35.1625) Plate, top of fin molding	2	●466 0799
57-70	(★31.0575) Retainer, lower molding, front	2	467 6240
57-70	Rear fender lower molding clip	14	●116 5051

10.0784 DEFLECTOR, GRAVEL, REAR FENDER

57-70	RH. In primer	1	146 5049
57-70	LH. In primer	1	146 5048

10.0785 BRACE, REAR FENDER GRAVEL DEFLECTOR

57-70	RH. In primer	1	146 6192
57-70	LH. In primer	1	146 6191

10.0817 ROD, CONNECTING, WHEEL SHIELD LOCK

57-70		2	146 5957

10.0818 CLIP, WHEEL SHIELD LOCKING ROD

57-70	Left front and right rear	2	146 6447
57-70	Right front and left rear	2	146 6448

10.0820 SHIELD, WHEEL OPENING

57-70	RH. w/Locks and Seals, chromium	1	351 0600
57-70	LH. w/Locks and Seals, chromium	1	351 0599

10.0821 BRACKET OR CLAMP, WHEEL OPENING SHIELD

57-70	RH. Front, on body	1	146 7598
57-70	LH. Front, on body	1	146 7597
57-70	RH. Rear, on fender	1	146 6086
57-70	LH. Rear, on fender	1	146 6085

10.0822 SCREW, BRACKET AND SHIELD

57-70	(★25.0500) 5/16"-18 x 3/4", to body	8	●122 007

10.0824 SEAL, WHEEL OPENING SHIELD (RUBBER)

57-70	RH. Front	1	146 6326
57-70	LH. Front	1	146 6325
57-70	RH. Center	1	146 6322
57-70	LH. Center	1	146 6321
57-70	RH. Rear	1	146 6324
57-70	LH. Rear	1	146 6323

SERIES	GROUP NO. & DESCRIPTION	SPECIFICATIONS	NO. USED	PART NO.
	11.0010 FRAME ASSEMBLY			
57-70			1	146 7882
	11.0470 CROSS MEMBER, FRONT, UNDER RADIATOR			
57-70		w/rad. Mounting & Front Suspension Bracket	1	146 7837
	11.0471 BRACKET, FRONT SHOCK ABSORBER MOUNTING			
57-70		RH, w/Retainer	1	363 0921
57-70		LH, w/Retainer	1	363 0920
	11.0472 CROSS MEMBER, NO. 2, UNDER ENGINE			
57-70		At flywheel housing	1	146 4800
	11.0575 CROSS MEMBER, INTERMEDIATE, IN FRONT OF FUEL TANK			
57-70		w/shock absorber mounting Brackets	1	146 8021
	11.0621 CROSS MEMBER, REAR			
57-70			1	146 7846
	11.0759 GUARD, BUMPER IMPACT BAR			
57-70		Front, center	1	146 5665
57-70		Rear, center, around license plate	1	146 4634
	11.0760 SPACER, BUMPER GUARD CAP			
57-70		Front	2	●146 6483
	11.0762 CAP, BUMPER GUARD			
57-70		Front bumper, rubber, w/Bolt	2	146 6583
	11.0763 SUPPORT, BUMPER GUARD TO FRAME			
57-70		RH, front ends	1	146 5295
57-70		LH, front ends	1	146 5294
57-70		Rear license guard	2	146 5111
	11.0765 SCREW, BUMPER GUARD TO IMPACT BAR			
57-70		(★25.0500) 3/8"-24 x 1 3/4". Outer mtg. bar	4	●120 668
57-70		(★25.0500) 3/8"-24 x 1 3/4". Support to guard	4	●120 668
57-70		3/8"-24 x 2 1/8", front guard to bumper	4	●125 994
57-70		Rear license guard to frame, (★25.0500) 3/8"-24 x 1 1/4"	4	●181 639
57-70		Upper, 3/8"-16 x 3/4" flat hd., w/lock Washer; rear license guard to bracket	2	273 644
57-70		Lower, 1/4"-20 x 7/16" flat hd., w/Lock-washer; rear license guard to bkt.	2	273 645
	11.0782 BAR, IMPACT, FRONT BUMPER			
57-70		Center, lower	1	146 4626
57-70		RH, upper	1	146 4628
57-70		LH, upper	1	146 4627
	11.0782 BAR, IMPACT, REAR BUMPER			
57-70		RH	1	146 4630
57-70		LH	1	146 4629
	11.0786 REINFORCEMENT, BUMPER BAR			
57-70		Frt. bumper center bar to outer bar. In primer	2	146 8529
	11.0787 SCREW, CENTER IMPACT BAR			
57-70		(★25.0500) 3/8"-24 x 1 3/8", front bumper center to ends	8	●181 641
57-70		(★25.0500) 3/8"-16 x 3/4", front bumper rein.	4	●122 119
	11.0792 BAR, MOUNTING, FRONT BUMPER			
57-70		RH	1	146 5366
57-70		LH	1	146 5365

11.0792 BAR, MOUNTING, REAR BUMPER

57-70	RH, upper	1	146 6094
57-70	LH, upper	1	146 6093
57-70	RH, lower	1	146 7930
57-70	LH, lower	1	146 7929

11.0793 BRACKET, MOUNTING BAR TO FRAME

57-70	RH, front	1	●146 5036
57-70	LH, front	1	●146 5035

11.0794 BRACKET, MOUNTING BAR TO IMPACT BUMPER

57-70	RH, front, inner	1	146 6001
57-70	LH, front, inner	1	146 6000

11.0795 SCREW, IMPACT BUMPER AND MOUNTING BAR

57-70	9/16"-18 x 2 3/16". Front, mtg. bar to frame	4	●145 3813
57-70	1/2"-20 x 2", mtg. bar	8	124 169
57-70	Front, (★25.0500) 1/2"-20 x 1 1/2", mtg. bar to impact bumper	2	●181 700
57-70	Rear, (★25.0500) 1/2"-20 x 1 1/2", mtg. bar to impact bumper	4	●181 700
57-70	(★25.0500) Upper mtg. bar to rear impact bar	8	●181 701
57-70	(★25.0500) 1/2"-20 x 1 1/4", upper rear bar to frame	6	●181 698

11.0796 WASHER, IMPACT BAR

57-70	Front, to frame	10	●145 6673
57-70	Rear, to frame	2	●145 6673
57-70	(★13.0195) Spec.	16	●145 2844
57-70	Flat, 9/16" x 1 1/4", rear bumper mounting	12	446 230

11.0797 NUT

57-70	Front, (★25.0080) 1/2"-20	8	●225 857
57-70	Rear, (★25.0080) 1/2"-20	10	●225 857
57-70	(★11.0766) Clinch type 1/2"-20, rear bumper upper mtg.	2	●145 9895

11.0798 SHIM, BUMPER OUTER MOUNTING BAR

57-70	Front and rear bumper mounting	AR	●146 6092

11.0814 ESCUTCHEON, REAR BUMPERS

57-70	Exhaust port	2	351 0816

11.0818 SCREW, EXHAUST PORT ESCUTCHEON

57-70	(★25.0560) 1/4"-20 x 1/2", rd. hd. tapping, to bumper	8	166 781

11.1210 BOLT, ENGINE FRONT SUPPORT

57-70	(★25.0500) 3/8"-24 x 1 1/4"	6	●181 639

11.1230 CUSHION, ENGINE FRONT SUPPORT (RUBBER)

57-70	w/Bolt	2	●146 7058

11.1242 WASHER, FRONT CUSHION SUPPORT

57-70	1 3/8" x 19/32" x 7/32"	2	●146 1489

11.1500 SUPPORT, ENGINE, REAR, ON TRANSMISSION

57-70	Cross member	1	146 4895

11.1505 SCREW, ENGINE REAR SUPPORT

57-70	(★25.0500) 7/16"-20 x 1 3/4"	2	●181 674

11.1530 CUSHION, ENGINE REAR SUPPORT

57-70		1	●363 0882

11.1537 RETAINER, REAR SUPPORT CUSHION

57-70		1	●146 4984

11.1538 SCREW, CUSHION RETAINER

57-70	(★25.0500) 7/16"-14 x 1"	2	●180 145

SERIES	GROUP NO. & DESCRIPTION	SPECIFICATIONS	NO. USED	PART NO.
	12.0980 CARBURETOR			
57-70		(WCFB-2582S) Carter dual carbs. Less idle speed-up control. Used for carbs WCFB-2582S,2583S,2584S. On cars w/air cond. also use 1 idle speed-up control 146 8359	2	146 7685
	12.0981 STUD, CARBURETOR TO MANIFOLD			
57-70		5/16"-18 x 1/2" (1 1/2") 5/16"-24 x 9/16". Dual carbs.	8	●103 175
	12.0982 NUT			
57-70		(★25.0080) 5/16"-24	8	●120 368
	12.0983 GASKET, CARBURETOR TO MANIFOLD			
57-70		Dual carbs.	2	●146 5150
	12.0985 REPAIR KIT, CARBURETOR			
57-70		(1855) Dual carbs. Carter	2	●146 8135
	12.0986 GASKET KIT, CARBURETOR			
57-70		(295) Carter dual carbs.	2	●146 8136
	12.0987 BODY, CARBURETOR			
	NOTE: Float chamber body for Carter carburetor not supplied for service replacement.			
57-70		(1-1463S) Front and rear. Lower, throttle. Carter dual carbs.	2	●146 8335
57-70		(6-1283S) Upper, air horn. Carter dual carbs.	2	●146 8342
	12.0988 SCREW, CARBURETOR BODY			
57-70		(101-152S) Upper body. w/Washer. Carter	4	●700 0744
57-70		(101-149S) Carter dual carbs. Lower body; w/Washer	8	●700 0650
57-70		(101-335S) Upper. Carter dual carbs.	14	●145 9525
57-70		(101-307S) Air cond. Upper. Carter	5	●134 6866
57-70		(101-362S) Upper. Air cond. Carter	3	●146 1360
57-70		(101-298S) Lower body. w/Washer. Carter dual carbs.	4	372 1033
	12.0990 GASKET, CARBURETOR BODY			
57-70		(121-232) Upper. Carter	2	●563 895
57-70		(121-277) Lower. Carter	2	●146 5398
	12.0991 PLUG, CARBURETOR BODY			
57-70		(47-14) Welsh. Piston housing. Carter	2	●700 2449
57-70		(47-33) Welsh. Spark port. Carter dual carbs.	2	●700 7281
	12.0993 GASKET, DUST COVER			
57-70		(121-208) Carter	2	●134 6579
	12.0996 COVER, DUST, METERING RODS, ACCELERATOR PUMP ARM AND LINKS			
57-70		(118-102S) Carter	2	●566 252
	12.0997 SHAFT, THROTTLE VALVE, W/LEVER			
57-70		(3-1115S) Secondary. Carter dual carbs.	2	●146 8339
57-70		(3-1119S) Auxiliary. Carter dual carbs.	2	●146 8340
57-70		(3-1114S) Primary. Carter dual carbs.	2	●146 8338
	12.0998 SHAFT, CHOKE VALVE			
57-70		(14-439S) w/Lever and Link. Carter	2	●134 6550

12.0999 LEVER, SECONDARY

57-70	(53A-405) Operating. Carter dual carbs. . .	2		373 2783

12.1000 LEVER, FAST IDLE AND CHOKE VALVE OPERATING

57-70	(14-383S) Fast idle. w/Clamp Screw. Carter	2	●700	2443
57-70	(14-426S) Coil Shaft. w/Clamp Screw. Carter	2	●145	8267

12.1003 LEVER, THROTTLE

57-70	(114-127) Outer. Carter dual carbs.	2	●700	8356
57-70	(114-128) Inner. Carter dual carbs.	2	●700	8357
57-70	(114-148) Outer. Carter dual carbs.	2	●146	8349

12.1004 SCREW, LEVER TO THROTTLE SHAFT

57-70	(101-74) Carter	4	●187	5292

12.1005 WASHER

57-70	(136-172) Secondary throttle shaft. Carter . .	2	●563	896

12.1010 SPRING, SECONDARY THROTTLE LEVER RETURN

57-70	(61-483) Carter	2	●563	888

12.1011 COUNTERSHAFT, ACCELERATOR PUMP, W/LEVER

57-70	(53A-333S) Carter	2	●134	6557

12.1013 ROD, CONNECTOR, THROTTLE

57-70	(115-290) Connector. Carter dual carbs. . .	2	●146	8352
57-70	(115-293) Operating. Carter dual carbs. . .	2	●146	8353

12.1014 WASHER, SPACING, CONNECTOR ROD

57-70	(136-37) Carter	4	●700	0731

12.1015 LINK, ACCELERATOR PUMP ROD TO LEVER

57-70	(117-165) Carter	2	●116	6219

12.1017 DISC, CHOKE AND THROTTLE VALVES

57-70	(7-173) Choke. Carter	2	●134	6547
57-70	(2-192) Primary and secondary throttle. Carter dual carbs.	8	●146	8336
57-70	(2-203) Auxiliary throttle. Carter dual carbs.	2	●146	8337

12.1018 SCREW, ATTACHING DISC TO SHAFT

57-70	(39-11) Choke disc. Carter	4	●342	146
57-70	(101-337) Primary and secondary. Carter dual carbs.	16	●563	127
57-70	(101-320) Auxiliary throttle valve. Carter dual carbs.	8	●146	8348

12.1023 SPRING, ANTI-RATTLE, CONNECTOR ROD

57-70	(61-128) Carter	4	●839	539

12.1024 RETAINER, ANTI-RATTLE SPRING

57-70	(63-93) Carter	4	●700	0760

12.1026 SCREW, IDLE

57-70	(30A-58) Idle adj. Carter	4	●116	3770
57-70	(30A-74) Air adj. screw. Carter	2	●146	8344

12.1027 SPRING, IDLE SCREW

57-70	(61-84) For idle adj. screw. Carter	6	●563	887
57-70	(61-598) For idle air adj. screw. Carter . .	2		146 8747

12.1029 ROD, ACCELERATOR PUMP, WITH PISTON, LEATHER AND SPRING

57-70	(64-193S) Carter dual carbs.	2	●146	5684

12.1031 SPRING, ACCELERATOR PUMP ROD

57-70	(61-171) Carter	2	●187	5351

12.1033 NEEDLE VALVE WITH SEAT

57-70	(25-280S) Primary. Carter	2	●700 8347
57-70	(25-289S) Secondary. Carter	2	●700 8348

12.1035 GASKET, NEEDLE VALVE SEAT

57-70	(20-126) Carter dual carbs.	4	701 0633

12.1036 SCREEN, NEEDLE VALVE

57-70	(30-73) Primary. Carter	2	●565 213

12.1037 FLOAT AND LEVER, CARBURETOR

57-70	(21-143S) Primary. Carter	2	●145 9998
57-70	(21-168S) Secondary. Carter dual carbs.	2	●700 9566

12.1038 PIN, HINGE, CARBURETOR FLOAT

57-70	(24-24) Carter	4	●187 5363

12.1043 METERING ROD - STANDARD SIZE

57-70	(75-1347) Carter dual carbs.	4	●146 8347

12.1046 ARM ASSY., LOCKOUT

57-70	(53A-420S) w/Pawl. Carter dual carbs.	2	●146 8346

12.1048 SPRING, METERING ROD

57-70	(61-382) Carter	2	●700 2455

12.1050 LEVER, METERING ROD AND ACCELERATOR PUMP

57-70	(111-47S) Acc. pump. Carter	2	●133 8013
57-70	(111-60S) Metering rod. Carter	2	●134 6570

12.1053 SPRING, METERING ROD PIN, ACCELERATOR PUMP AND CONNECTOR LINK

57-70	(150A-10) Carter	10	●836 159

12.1055 VALVE, PUMP

57-70	Air cond. (116-13) Ball intake check. Carter	4	●187 5237
57-70	(17-70) Needle. Carter	2	●700 2444

12.1057 JET OR HOUSING, ACCELERATOR PUMP

57-70	(48-253S) Jet w/Housing. Carter dual carbs.	2	●146 8345

12.1058 JET, CARBURETOR IDLE

57-70	(11-306S) Carter dual carbs.	4	●146 8343

12.1060 JET, METERING

57-70	(120-160) Primary. Carter	4	●700 2494
57-70	(120-174) Secondary. Carter dual carbs.	4	●134 6578

12.1061 SCREW, ACCELERATOR PUMP JET HOUSING

57-70	(101-278) Carter	2	●700 2482

12.1062 GASKET, ACCELERATOR PUMP JET HOUSING

57-70	(121-241) Carter	2	●116 3772

12.1065 PLUG, FLOAT LEVEL SIGHT

57-70	(11B-146) Carter	4	●700 5286

12.1067 CHECK ASSEMBLY, THROTTLE RETURN

57-70	w/Nipple and Check Valve. On dash	1	●701 0950

12.1068 SPRING, FLEX, THROTTLE

57-70	(61-552) Carter. Dual carbs.	1	●700 8801

12.1070 SCREW, THROTTLE RETURN CHECK

57-70	Special, adjusting	1	●146 8007

12.1071 PLUG, BALL CHECK PASSAGE OR PUMP RELIEF

57-70	(122-75S) Pump relief. Carter	2	●700 0658

12.1072 RETAINER

57-70 (★4.5905) Throttle return check . . . . . 1 ●146 6932

12.1073 RING, RETAINING BALL IN ACCELERATOR PUMP PASSAGE

57-70 (63-57) Carter . . . . . 2 ●144 7265

12.1074 GASKET, PUMP DISCHARGE PASSAGE PLUG

57-70 (20-26) Carter . . . . . 2 ●836 672

12.1078 ROD, CHOKE MODIFIER, THERMO. TO THROTTLE

57-70 (115-289) Carter dual carbs. 2 146 8351

12.1081 GASKET, VACUUM PISTON HOUSING

57-70 (121-298) Carter dual carbs. 2 374 2916

12.1083 COIL AND COVER, CHOKE THERMOSTAT

57-70 (170AJ-241S) w/Housing. Carter dual carbs. 2 ●146 5400

12.1084 SCREW, THERMOSTAT HOUSING OR COVER

57-70 (★25.0520) (101-136) Attaching housing. Carter 6 ●131 954

12.1085 RETAINER, THERMOSTAT COVER SCREW

57-70 (63-58) Carter . . . . . 6 ●700 0614

12.1086 PLATE, CHOKE THERMOSTAT

57-70 (186-38S) Baffle plate w/Spring. Carter . . . 2 ●145 9377

12.1088 ARM, VENT, CARBURETOR

57-70 (53A-344) Carter . . . . . 2 ●145 9754

12.1089 GASKET, THERMOSTAT COVER OR HOUSING

57-70 (121-78) For housing. Carter . . . . . 2 ●700 0610

12.1090 PISTON, AUTOMATIC CHOKE

57-70 (160-91) Carter . . . . . 2 ●145 7554

12.1092 HOUSING, PISTON

57-70 (170-513S) w/Plug. Carter dual carbs. . . . . 2 ●146 8355

12.1093 PISTON, VACUUM OR POWER

57-70 (160-110S) Vacuum. Carter . . . . . 2 ●134 6583

12.1095 LINK, VACUUM PISTON METERING RODS

57-70 (117-162) Carter . . . . . 2 ●566 251

12.1100 MAGNET, ELECTRIC, CARBURETOR DIAPHRAGM

57-70 (213-21S) w/Housing. Air cond. Carter dual carbs. . . . . 1 ●146 8358

12.1101 CONTROL ASSY., FAST IDLE SPEED-UP, AIR COND.

57-70 (202-111U) Control, w/attaching screws. Carter dual carbs. . . . . 1 ●146 8359

12.1105 SCREW, FAST IDLE CAM OR LEVER TO CARBURETOR

57-70 (101-324) Carter . . . . . 2 ●145 9352

12.1106 SCREW, FAST IDLE ADJUSTING

57-70 (101-429) Carter. In front carb., dual carbs. 1 701 1179

12.1110 CAM AND COLLAR, FAST IDLE

57-70 (181-244S) Carter dual carbs. 2 146 8748

12.1111 LEVER, CAM TRIP

57-70 (14-440) Carter . . . . . 2 ●145 9332

12.1112 ROD, CONNECTOR CHOKE

57-70 (115-288) Carter dual carbs. . . . . 2 ●146 8350

12.1115 STRAINER, FUEL INLET

57-70	(30-75) Bowl. Carter	2	●566 009
57-70	(30-74) Secondary. Carter	2	●565 214

12.1116 NUT, FUEL INLET STRAINER

57-70	(15-63S) Carter dual carbs.	2	●701 0635

12.1117 GASKET, FUEL INLET STRAINER NUT

57-70	(20-127) Carter dual carbs.	4	701 0634

12.1119 BAFFLE, CHOKE HOUSING, FRONT CARBURETOR

57-70	Carter dual carbs.	1	●146 3595

12.1132 HOSE, THROTTLE RETURN CHECK

57-70 (★38.6350) 7/32" I.D. Specify length req'd. . AR ●109 8356

12.1136 CROSS, W/S WIPER HOSE TO THROTTLE RETURN CHECK

57-70 . . . . . 1 146 7426

12.1150 GASKET, AIR CLEANER TO CARBURETOR

57-70 Use w/dual carbs. . . . . 2 ●146 3468

12.1152 STUD, AIR CLEANER TO CARBURETOR

57-70 Use w/Carter dual carbs. 2 146 6763

12.1153 NUT, AIR CLEANER TO CARBURETOR STUD

57-70 (★12.1165) Wing nut, 1/4"-20. Cars w/dual carbs. . . . . 2 ●126 177

12.1154 KNOB, AIR CLEANER TO ELBOW STUD

57-70 Cars w/dual carbs. . . . . 2 ●146 7660

12.1170 ELEMENT, FILTER, CARBURETOR SILENCER

57-70 Cars w/dual carbs. (AC type 104). w/Cover . 2 ●155 3169

12.1175 GASKET, FILTER ELEMENT

57-70 Cars w/dual carbs. Between element and oil reservoir . . . . . 2 ●155 2386

12.1180 OIL RESERVOIR, SILENCER

57-70 Cars w/dual carbs. . . . . 2 ●155 2991

12.1210 ELBOW, AIR CLEANER

57-70 Cars w/dual carbs. 1 155 2989

12.1218 SPACER, AIR CLEANER ELBOW TO CARBURETOR

57-70 Cars w/Carter carb. . . . . 2 ●146 8051

12.1220 GASKET, AIR CLEANER TO ELBOW

57-70 Cars w/dual carbs. . . . . 2 ●155 2261

12.1230 VEE, AIR CLEANER ELBOW

57-70 Cars w/dual carbs. . . . . 1 ●146 3445

12.1232 NUT, AIR CLEANER ELBOW VEE

57-70 Cars w/dual carbs. . . . . 3 ●146 3451

12.1850 PEDAL, ACCELERATOR

57-70 w/Bezel, Lever, Shaft and Bracket 1 351 0833

12.1870 BEZEL, ACCELERATOR PEDAL

57-70 Chromium. Cars w/dual carbs. . . . . 1 ●146 6255

12.1980 CLIP, ACCELERATOR PEDAL LEVER TO RELAY ROD

57-70 . . . . . 1 ●131 4091

12.2010 ROD, TRANSMISSION CONTROL, CARBURETOR TO TRANSMISSION

57-70 Dual carbs. . . . . 1 ●351 0900

12.2011 PIN, ROD TO TRANSMISSION LEVER

57-70 Clevis pin . . . . . 1 ●146 7170

12.2021 PLATE, THROTTLE ADAPTER

57-70 (Stamped C57,2) Use w/Carter dual carbs. w/Bushings . . . . . 1 ●351 0898

12.2022 SCREW, ADAPTER PLATE TO CARBURETOR

57-70 Hex. hd. w/lock Washer. No. 10-32 x 3/8" . 3 ●457 007

12.2025 LEVER, THROTTLE CONTROL, AT TRANSMISSION

57-70 Outer . . . . . 1 ●146 7178

	12.2027 SCREW, THROTTLE CONTROL LEVER			
57-70	(★25.0500) Hex. hd., 1/4"-28 x 7/8"	1	●123 456	
	12.2028 NUT, THROTTLE LEVER SCREW			
57-70	Sq. 1/4"-28	1	127 797	
	12.2033 SHIELD, TRANSMISSION CONTROL LINKAGE			
57-70		1	●146 7384	
	12.2043 BRACKET, THROTTLE RELAY, ON DASH			
57-70	w/Lever, Pin, Bushing and Clip	1	351 0460	
	12.2125 BUSHING, THROTTLE RELAY LEVER			
57-70		1	●144 1074	
	12.2145 SPRING, RETRACTING, THROTTLE			
57-70	Cars w/dual carbs.	1	●146 7538	
	12.2170 LINK, CONNECTING AUXILIARY VALVE			
57-70	Use w/Carter dual carbs.	1	●146 8282	
	12.2172 RETAINER, AUXILIARY VALVE CONNECTING LINK			
57-70	(★12.1053) Use w/Carter dual carbs.	2	●836 159	
	12.2174 WASHER, AUXILIARY VALVE CONNECTING LINK			
57-70	Plain washer 5/32" I.D. x 5/16" O.D. x 1/32". Use w/Carter dual carbs.	2	●446 121	
	12.2268 ROD, ACCELERATOR PEDAL TO THROTTLE RELAY			
57-70		1	146 5939	
	12.2278 ROD, CARBURETOR THROTTLE CONTROL			
57-70	Front carb. to relay on dash. Cars w/dual carbs.	1	●351 0834	
	12.2283 ROD, CARB. THROTTLE LEVERS CONNECTING			
57-70	Front. Cars w/dual carbs.	1	●146 4616	
57-70	Rear. Cars w/dual carbs.	1	●146 4618	
	12.2290 NUT, CARB. THROTTLE LEVER CONNECTING ROD ADJUSTING			
57-70	Cars w/dual carbs.	1	●146 4617	
	12.2350 TRUNNION, THROTTLE ROD			
57-70	Adj. 29/32" lg. 1/4"-36 threaded hole. 1/4" pin diam.	1	●145 1231	
57-70	1 5/16" lg. At carb.	1	●146 2695	
57-70	1 3/8" lg. Dual carbs.	1	●146 4376	
	12.2355 WASHER, THROTTLE ROD TRUNNION AND NUT			
57-70	Spring, 17/64"-1/2"	3	●410 224	
	12.2420 CLIP, THROTTLE CONTROL ROD AND TRUNNION			
57-70		2	●145 5017	
	12.2535 TUBING, STEEL, FUEL PIPES			
57-70	5/16" O.D., 50 ft. roll	1	●146 1710	
	12.2540 NUT, STEEL TUBING			
	(★25.0205)	2	●137 398	
	12.2542 UNION, STEEL TUBING			
57-70	(★25.0260) For 5/16" O.D. tube	AR	●137 414	
	12.2555 FLEXIBLE TUBE, FUEL LINE TO FUEL PUMP			
57-70	13" lg. To fuel filter	1	●146 7576	
57-70	18" long	1	●145 4597	
	12.2690 PIPE, CARBURETOR TO IDLE SPEED-UP CONTROL			
57-70	Cars w/Carter dual carbs. Air cond.	1	●146 7656	

12.2695 PIPE, VACUUM PUMP INLET TO CRANKCASE

57-70 ..... 1 ●145 9314

12.2700 PIPE, VACUUM PUMP CHECK VALVE TO DASH

57-70 ..... To double check valve for w/s wiper and washer ..... 1 ●146 7696

12.2705 PIPE, VACUUM, INTAKE MANIFOLD TO DASH

57-70 ..... Cars w/dual carbs. ..... 1 ●146 3274

12.2815 PIPE, FUEL FILTER TO CARBURETOR

57-70 ..... 1 146 8711

12.2820 PIPE, FRONT TO REAR CARBURETOR

57-70 ..... Cars w/Carter dual carbs. ..... 1 ●146 4812

12.2825 PIPE, CHOKE HEATER ON MANIFOLD TO CARBURETOR

57-70 ..... Use w/Carter dual carbs. ..... 1 ●146 7646

12.2830 RETAINER, CHOKE HEATER PIPE

57-70 ..... 1 ●145 5757

12.3125 GAUGE, FUEL, IN INSTRUMENT CLUSTER

57-70 ..... (★8.3550) 1 151 8655

NOTE: Lens for fuel gauge, see Group 3.1448

12.3165 FLOAT UNIT IN FUEL TANK

57-70 ..... 1 151 8565

12.3166 SCREW, FLOAT UNIT TO FUEL TANK

57-70 ..... (★25.0562) Cross recess pan-hd., No. 10-24 x 1/2" ..... 5 ●159 920

12.3168 GASKET, FLOAT UNIT SCREW

57-70 ..... 5 ●839 903

12.3185 GASKET, FLOAT UNIT TO FUEL TANK

57-70 ..... 1 146 5985

12.3195 UNIT, FUEL GAUGE TELL TALE

57-70 ..... 1 151 8656

12.3201 GASKET, FUEL GAUGE TELL TALE UNIT

57-70 ..... (★12.3185) ..... 1 ●151 5832

12.3205 SCREW, FUEL GAUGE TELL TALE UNIT MOUNTING

57-70 ..... (★25.0562) ..... 5 ●159 920

12.3210 GASKET, FUEL GAUGE TELL TALE MTG. SCREW

57-70 ..... (★12.3168) ..... 5 ●839 903

12.3214 NUT, FUEL TANK UNIT TERMINAL

57-70 ..... Tell tale unit ..... 1 ●151 7194

12.3250 FUEL TANK, LESS FLOAT UNIT

57-70 ..... 1 363 0757

12.3252 SUPPORT, FUEL TANK

57-70 ..... Inner 1 146 5997
57-70 ..... Outer 1 146 5996

12.3255 SCREW, FUEL TANK SUPPORT

57-70 ..... Hook bolt 2 146 5944

12.3280 CAP, FILLER, FUEL TANK

57-70 ..... 1 ●145 3962

12.3305 EXTENSION, FILLER, ON FUEL TANK

57-70 ..... w/Support and Vent Pipe 1 146 5986

12.3316 HOSE, FUEL TANK FILLER

57-70		1	●145 3939

12.3318 CLAMP, FILLER HOSE

57-70	2 3/16" I.D.	2	●455 588

12.3360 HOSE, FUEL TANK VENT PIPE

57-70	1/2" I.D. x 3/4" O.D. x 8 1/8"	1	●146 6280

12.3365 CLAMP, VENT PIPE HOSE

57-70	3/4"	2	●145 6355

12.3370 SUPPORT, FUEL TANK VENT PIPE TO FRAME

57-70		1	●146 8078

12.3400 PLUG, PIPE, DRAINING FUEL TANK

57-70	(*8.3147) 5/8" x 18, less gasket	1	●145 5051

12.3405 GASKET, FUEL TANK DRAIN PLUG

57-70	(★8.3157)	1	●145 6386

12.3855 VALVE, CHECK, VACUUM PUMP

57-70	At crankcase	1	●146 4492

12.3955 PUMP, FUEL AND VACUUM

NOTE: For fuel and vacuum pump support, see Group 8.2900

57-70	Vacuum. w/Screws, locking Plates & Driver	1	●559 3254
57-70	Fuel. Electric (Carter P2630S)	1	146 8047

12.3964 GASKET, ELECTRIC FUEL PUMP MOUNTING SCREW

57-70	(★12.3168)	8	●839 903

12.3966 REINFORCEMENT, ELECTRIC FUEL PUMP TO TANK

57-70		1	146 8074

12.3967 PLATE, LOCKING VACUUM PUMP TO OIL PUMP SCREW

57-70		2	●146 2587

12.3970 GASKET, FUEL PUMP

57-70	For electric fuel pump	1	146 8075

12.3971 SCREW, FUEL AND VACUUM PUMP

57-70	Hex-hd., 1/4"-20 x 3/4". Vacuum pump to oil pump housing	6	●175 141
57-70	(★25.0562) Pan cross recess hd. No. 10-24 x 1/2". Electric fuel pump mounting	8	●159 920

12.3985 DRIVER, VACUUM PUMP ROTOR

57-70	(★8.3885)	1	●145 7872

12.3989 COVER, FUEL PUMP OPENING IN OIL FILLER

57-70		1	146 8073

12.3990 SCREW, FUEL PUMP OPENING COVER

57-70	(★25.0500) Hex. hd. 3/8"-16 x 3/4"	2	●122 119

12.4010 FITTING, FUEL AND VACUUM PUMP

57-70	(★25.0210) 1/4". Connector for vacuum pipe inlet	2	●137 405
57-70	(★25.0215) 1/4"-90°. Elbow intake manifold to dash pipe	1	●137 421
57-70	(★12.4160) 1/8"-45°. Elbow. Vacuum pump	1	●444 052
57-70	(★25.0210) 5/16". Connector for carburetor inlet	1	●137 406
57-70	(★12.4160) 1/8"-90° elbow. Fuel pump	1	●444 038
57-70	(★25.0215) Elbow (5/16"-90) Fuel pipe to rear carb. inlet	1	●137 422

12.4128 SWITCH ASSY., ELECTRIC FUEL PUMP CONTROL

57-70 . . . . . Carter (A634S) 1 146 8046

12.4132 TEE, ELECTRIC FUEL PUMP CONTROL SWITCH TO ENGINE

57-70 . . . . . 1 940 9943

12.4133 ELBOW, ELECTRIC FUEL PUMP CONTROL SWITCH TO ENGINE

57-70 . . . . . (★12.4160) . . . . . 2 ●444 052

12.4140 RELAY, ELECTRIC FUEL PUMP

57-70 . . . . . (★31.1418) . . . . . 1 ●111 6895

12.4141 SCREW, ELECTRIC FUEL PUMP RELAY

57-70 . . . . . (★25.0562) Pan cross recess hd., No. 10-24 x 1/2" . . . . . 2 ●159 920

12.4142 NUT, RELAY SCREW

57-70 . . . . . (★3.1622) . . . . . 2 ●445 441

12.4155 SUPPORT, FUEL FILTER TO THERMOSTAT HOUSING

57-70 . . . . . 1 146 8710

12.4160 ELBOW, FUEL FILTER

57-70 . . . . . Fuel line hose . . . . . 1 ●444 038

12.4174 CONNECTOR, FUEL FILTER

57-70 . . . . . (★25.0210) Fuel filter outlet . . . . . 1 ●137 406

12.4180 TEE, FUEL FILTER OUTLET TO CARBURETOR

57-70 . . . . . To front carb. Cars w/dual carbs. . . . . 1 ●143 483

SERIES	GROUP NO. & DESCRIPTION	SPECIFICATIONS	NO. USED	PART NO.
	13.0030 HOOD PANEL, IN PRIMER			
57-70		Less hinges	1	351 0588
	13.0033 EMBLEM OR LETTERS, HOOD PANEL			
57-70		Emblem "V" alum. finished, front, below hood	1	146 5510
57-70		Block letter "R", (★31.5400) alum. finished. Front panel, below hood	1	146 4999
57-70		Block letter "D", (★31.5400) alum. finished. Front panel, below hood	2	146 5000
57-70		Block letter "E", (★31.5400) alum. finished. Front panel, below hood	1	146 5001
57-70		Block letter "A", (★31.5400) alum. finished. Front panel, below hood	1	146 5002
57-70		Block letter "L", (★31.5400) alum. finished. Front panel, below hood	1	146 5003
57-70		Block letter "O", (★31.5400) alum. finished. Front panel, below hood	2	146 5004
	13.0034 NUT OR CLIP, HOOD PANEL EMBLEM			
57-70		No. 8-32, washer type, for hood "V"	4	146 7747
57-70		(★31.5411) Spring nut, for block letters	8	146 6481
	13.0063 BUMPER, HOOD PANEL			
57-70		No. 2, .28" high. On cowl weatherstrip	AR	●145 7244
57-70		No. 4, .40" high. On cowl weatherstrip	AR	●145 7246
57-70		(★13.0084) Hood to radiator cradle	2	●145 7511
	13.0085 SCREW, HOOD PANEL BUMPER			
57-70		1/4"-20 x 1 1/8" spec. hd.	2	●146 2588
	13.0091 HINGE ASSEMBLY, HOOD			
57-70		RH. w/Strap and Spring	1	351 0665
57-70		LH. w/Strap and Spring	1	351 0664
	13.0093 BOX, HOOD HINGE			
57-70		RH, in primer	1	351 0667
57-70		LH, in primer	1	351 0666
	13.0095 STRAP, HOOD HINGE			
57-70		(Also part of hinge assembly)	2	351 1371
	13.0096 PIN, HOOD HINGE			
57-70		Strap to box	2	146 5581
57-70		Spring, lower retaining	2	146 5585
	13.0097 CUP, HOOD HINGE SPRING			
57-70		Lower	2	146 5681
	13.0100 SCREW, HOOD HINGE			
57-70		(★25.0500) 3/8"-16 x 1". Hinge to radiator cradle tie bar	2	●120 233
57-70		(★25.0500) 3/8"-24 x 7/8", hinge to hood	4	●181 636
57-70		(★25.0500) 3/8"-24 x 1", hinge to radiator cradle	6	454 922
	13.0105 SHIM, HOOD HINGE ADJUSTING			
57-70		(★10.0022) Hinge to radiator cradle	AR	●146 2559
	13.0195 WASHER, HINGE BRACKET SCREW			
57-70		Friction washer, on hood hinge pivot pin	4	●146 1570

	13.0211 SPRING, HOOD HINGE			
57-70	(Also part of hinge assembly)	2		146 5590
	13.0495 LOCK ASSEMBLY, HOOD			
57-70	On cowl	1		146 6436
	13.0497 SCREW, HOOD LOCK ASSEMBLY			
57-70	(★25.0500) 1/4"-20 x 1/2"	3	●120	706
	13.0591 HOOK OR SAFETY CATCH, HOOD TOP PANEL			
57-70	Striker on hood	1		146 7215
	13.0593 SHIM, HOOD LOCK STRIKER			
57-70	(★10.0022) Striker to hood	AR	●146	2559
	13.0594 SCREW, SAFETY CATCH			
57-70	(★25.0500) 1/4"-20 x 7/8", striker to hood	2		121 893
	13.0700 CABLE, HOOD LOCK			
57-70	w/Knob	1		146 6938
	13.0702 NUT, ON CABLE COLLAR			
57-70	(★25.0080) 3/8"-24	1		225 854
	13.0703 BLOCK, HOOD LOCK CABLE ANCHOR			
57-70		1	●365	5561
	13.0704 SCREW, ANCHOR BLOCK			
57-70	(★25.0535) No. 8-32 x 1/4"	1	●155	023
	13.0705 GROMMET, HOOD LOCK CABLE			
57-70		1		146 6207
	13.0710 SPRING, ANTI-RATTLE, HOOD LOCK CABLE HANDLE			
57-70		1		146 6937

SERIES	GROUP NO. & DESCRIPTION	SPECIFICATIONS	NO. USED	PART NO.
	14.0310 HEADLAMP			
57-70		RH. Dual headlamp assy., less door. Consists of headlamp & driving light. Exc. export cars driven on LH side of road	1	594 7842
57-70		LH. Dual headlamp assy., less door. Consists of headlamp & driving light. Exc. export cars driven on LH side of road	1	594 7841
	14.0314 BEARING, ADJUSTING, HEADLAMP ADAPTER			
57-70			12	594 8015
	14.0317 RING, OR ADAPTER MOUNTING, SEALED BEAM UNIT			
57-70		RH. Adapter. Upper or driving beam	1	594 8012
57-70		LH. Adapter. Upper or driving beam	1	594 8011
57-70		RH. Adapter. Upper and lower or driving and passing beam	1	594 8014
57-70		LH. Adapter. Upper and lower or driving and passing beam	1	594 8013
	14.0320 DOOR, HEADLAMP			
57-70		RH. For headlamp & driving light. w/rubber Seal	1	351 1049
57-70		LH. For headlamp & driving light. w/rubber Seal	1	351 1048
	14.0321 SEAL, HEADLAMP DOOR (RUBBER)			
57-70			4	146 6089
	14.0325 RING, OR RIM RETAINING LIGHTING UNIT, HEADLAMP			
57-70		Rim	4	594 8024
	14.0335 SEALED BEAM LIGHTING UNIT			
57-70		Upper or driving beam (No. 1) (T-3)	2	594 8501
57-70		Upper and lower, or driving & passing beam (No. 2). Exc. export cars driven on LH side of road. (T-3)	2	594 8502
	14.0392 SCREW, HEADLAMP DOOR CATCH			
57-70		(★25.0560) Pan-hd., No. 8-15 x 1/2"	6	●161 867
	14.0418 NUT, HEADLAMP DOOR RETAINING SCREW			
57-70		(★14.0734) Spring "U" type No. 8-15	4	●445 434
	14.0565 SCREW, HEADLAMP ADJUSTMENT			
57-70			8	●924 561
	14.0566 NUT, HEADLAMP ADJUSTMENT SCREW			
57-70			8	●593 9769
	14.0680 WIRE, HEADLAMP			
57-70		Upper or driving beam. w/Loom, Grommet, Connector and terminals	2	594 8021
57-70		Upper & lower, or driving & passing beam. w/Loom, Grommet, Connector and Terminals	2	594 8018
	14.0731 RETAINER, HEADLAMP TO FRONT FENDER			
57-70		RH	1	351 0761
57-70		LH	1	351 0760
	14.0733 SCREW, HEADLAMP RETAINER			
57-70		(★25.0560) Pan cross recess hd., No. 8-15 x 1/2"	2	●161 860

57-70	(★25.0560) Rd. cross recess hd., No. 10-12 x 3/4"	4	●161 651

14.0734 NUT, HEADLAMP RETAINER SCREW

57-70	Spring, "U" type, No. 8-15	2	●445 434
57-70	(★14.1920) Spring, "U" type, No. 10-12	4	●445 445

14.0735 PLATE, HEADLAMP RETAINER TO FENDER

57-70		4	●146 7049

14.0758 SCREW, MOUNTING HEADLAMP

57-70	(★25.0560) No. 10-12 x 3/4"	12	●161 651

14.0761 NUT, HEADLAMP MOUNTING SCREW

57-70	No. 10-12	12	●187 328

14.1150 LAMP, PARKING

57-70	RH (★53.0110) Fog, signal & parking lamp	1	898 226
57-70	LH (★53.0110) Fog, signal & parking lamp	1	898 225

14.1350 LAMP, BACK-UP

57-70	In rear bumper	2	898 281

14.1351 SCREW, MOUNTING BACK-UP LAMP

57-70	(★25.0560) Rd. cross recess hd., No. 10-16 x 1/2"	4	162 903

14.1409 LENS, BACK-UP

57-70		2	594 7694

14.1411 SCREW, BACK-UP LAMP LENS

57-70	(★14.1705)	4	594 5860

14.1419 GASKET, LENS TO BACK-UP LAMP BODY

57-70		2	594 7692

14.1429 BULB, BACK-UP LAMP

57-70	(★25.0040) 32 C.P.	2	●454 646

14.1439 SWITCH, BACK-UP LAMP

57-70	(★20.2195) Also for horn contact	1	199 8170

14.1670 REAR LAMP

57-70	Stop, signal and aux. tail lamp, in bumper	2	898 280
57-70	Stop, signal, tail & reflex, in rear fender	2	898 288

14.1671 SCREW, REAR LAMP MOUNTING

57-70	(★25.0560) Rd. cross recess hd., No. 10-16 x 1/2". Stop, signal and aux. tail lamp	4	162 903
57-70	(★25.0535) Rd. cross recess hd., 1/4"-20 x 3/4". Stop, signal, tail & reflex lamp	4	155 348

14.1672 NUT, REAR LAMP MOUNTING

57-70	(★3.1495) U shape, No. 12	8	●146 3812
57-70	Spring J shape, 1/4"-20	4	146 5484

14.1682 BODY, OR HOUSING, REAR LAMP

57-70	For tail & reflex lamp. w/Bulb, Socket, Tube and Wire	2	594 7822

14.1688 GASKET, REAR LAMP BODY

57-70	To fender	2	594 7853

14.1703 WASHER, STOP SIGNAL, REFLEX AND TAIL LAMP MTG. SCREW

57-70	Rubber	4	●146 6946

14.1741 LENS, REAR LAMP

57-70	Stop, signal, tail and reflex	2	594 7840
57-70	Stop and signal	2	594 7693

14.1747 GASKET, REAR LAMP LENS

57-70	(★14.1419) Stop & signal lamp	2	594 7692
57-70		2	594 7852

14.1748 SCREW, LENS RETAINING, REAR LAMP

57-70	(★14.1705) Stop and signal lamp	4	594 5860
57-70	Stop, signal, tail & reflex lamp (oval hd. No. 8-32 x 7/8")	4	594 6946

14.1798 BULB, REAR LAMP

57-70	(★25.0040) Stop, signal, tail and reflex lamps. 32-4 C.P.	4	●454 645

14.1826 GROMMET FOR REAR LAMP WIRE

57-70	(3 holes), thru trunk comp't. inner panel	2	●146 7232

14.1918 LAMP, REAR LICENSE PLATE

57-70	RH, in body	1	898 290
57-70	LH, in body	1	898 289

14.1919 SCREW, REAR LICENSE LAMP MOUNTING

57-70	(★25.0562) Pan cross recess hd., No. 8-32 x 5/8"	4	159 612

14.1920 NUT, LICENSE LAMP SCREWS

57-70	Special, No. 8-32	4	146 5482

14.1926 BODY, LICENSE PLATE LAMP

57-70	See Group 14.1928		

14.1928 LENS, LICENSE PLATE LAMP

57-70	RH. w/License Lamp Body	1	594 7810
57-70	LH. w/License Lamp Body	1	594 7809

14.1933 BULB, LICENSE PLATE LAMP

57-70	(★25.0040) 3 C.P.	2	●142 450

14.1935 WIRES, LICENSE PLATE LAMP

57-70	w/Socket and Terminal	2	594 7808

14.1939 CLAMP, REAR LICENSE FRAME

57-70	RH	1	351 0772
57-70	LH	1	351 0771

14.1941 SCREW, REAR LICENSE FRAME CLAMP BRACKET

57-70	(★25.0510) Flat hd., 1/4"-20 x 3/4"	2	120 697

14.1942 NUT

57-70	(★25.0080) 1/4"-20	2	●120 375

14.1943 PLUG, LICENSE CLAMP ACCESS HOLE

57-70	(1 1/2")	2	146 5158

14.1945 CLIP, REAR LICENSE FRAME RETAINING

57-70		2	146 5935

14.1946 SCREW, LICENSE FRAME RETAINING CLIP

57-70	(★31.0595) Pan cross recess hd., No. 8-32 x 1/2"	4	●451 600

14.1947 FRAME, LICENSE PLATE

57-70	Complete	2	351 0965

14.1950 SUPPORT, LICENSE PLATE, REAR

57-70	(★11.0782) Filler in rear bumper	1	●146 6665

14.1958 BRACKET, REAR LICENSE PLATE GUARD TO FRAME

57-70	(★11.0763)	2	146 5111

14.1967 SCREW, LICENSE FRAME ATTACHING

57-70 ..... Front, (★25.0562) Slotted pan hd., 1/4"-20 x 3/4" ..... 3 ●273 716

14.1978 PLATE, FRONT BUMPER LICENSE FILLER

57-70 ..... w/Crest. Except cars w/front license plate . 1 351 0936

14.1984 CREST, FRONT LICENSE FILLER PLATE

57-70 ..... (★35.1605) Exc. cars w/front license plate . 1 146 6795

14.1985 NUT, FILLER PLATE CREST

57-70 ..... (★25.0080) 1/4"-20 ..... 1 ●120 375

14.1999 BUMPER, FRONT LICENSE SUPPORT BRACKET

57-70 .... 1 ●412 4440

14.2010 SWITCH, LIGHTING CONTROL

57-70 ..... (12 volt) 1 199 5078

14.2012 NUT, LIGHT SWITCH MOUNTING

57-70 .... 1 ●146 6868

14.2018 ESCUTCHEON, LIGHT SWITCH

57-70 .... 1 ●146 6954

14.2019 SEAL, LIGHT SWITCH ESCUTCHEON

57-70 .... 1 146 8167

14.2020 ROD, OPERATING LIGHTING SWITCH

57-70 ..... w/Knob 1 146 7035

NOTE: See Group 53.0180 for rod used w/Fog Lamp.

14.2034 HOUSING ASSY., LIGHT SWITCH ESCUTCHEON LIGHT

57-70 .... 1 146 7081

14.2040 SWITCH, FOOT CONTROL

57-70 ..... Exc. cars w/autronic-eye ..... 1 ●199 7008

14.2044 PAD, FOOT CONTROL SWITCH

57-70 .... 1 ●146 7339

14.2050 SWITCH, BRAKE LIGHT

57-70 ..... (★33.1300) Parking brake light ..... 1 ●199 8161

NOTE: Switch, oil pressure indicator light, see Group 8.3560.

14.2080 SWITCH, STOP LIGHT

57-70 .... 1 ●199 8192

14.2085 NUT, STOP LIGHT SWITCH MOUNTING

57-70 .... 1 ●858 388

14.2091 LEVER, STOP LIGHT SWITCH

57-70 .... 1 146 6278

14.2092 SCREW, STOP LIGHT SWITCH LEVER

57-70 ..... Special ..... 1 ●146 6204

14.2093 NUT

57-70 ..... (★25.0080) 1/4"-20 ..... 1 ●120 375

14.2096 WASHER, STOP LIGHT SWITCH LEVER

57-70 ..... Spring, 3/8" x 9/16" x .008" thk. 1 145 5965

57-70 ..... Plain, 13/32" x 13/16" x .070" thk. 1 146 8826

14.2115 SWITCH, DIRECTIONAL SIGNAL

NOTE: See Color chart on page G-4 for paint specifications.

57-70 ..... Complete, w/Housing & Wiring Harness. Paint w/lacquer to match when required ..... 1 ●199 5814

14.2125 BULB, DIRECTIONAL SIGNAL SWITCH ON INSTRUMENT PANEL

57-70	(★25.0040) 2 C.P. (12 volt)	1	●273 157

14.2132 BALL, DIRECTIONAL SIGNAL CONTACT CARRIER

57-70	3/32"	4	●169 063

14.2135 LEVER, DIRECTIONAL SIGNAL, AT STEER. WHEEL

57-70	Less knob, cap and ferrule	1	●146 5833

14.2137 BACK, DIRECTIONAL SIGNAL SWITCH

57-70	w/wiring Harness	1	●193 2969

14.2139 CLAMP, DIRECTIONAL SIGNAL SWITCH HARNESS

57-70		1	●193 7744

14.2149 CONTACT, DIRECTIONAL SIGNAL SWITCH

57-70	Rectangular	2	●193 0278
57-70	Triangular	2	●193 0279

14.2151 CARRIER, CONTACT, DIRECTIONAL SIGNAL SWITCH

57-70		1	●193 2484

14.2153 SPRING, CONTACT CARRIER

57-70		4	●192 5266

14.2155 FLASHER, DIRECTIONAL SIGNAL

57-70	Plug in type (12 volt)	1	●234 3656

14.2160 INSULATOR, FLASHER PLUG

57-70	Rubber	1	●145 7957

14.2166 SCREW, FLASHER PLUG

57-70	(★25.0560) Tapping, rd., cross recess hd., No. 5-20 x 1/2"	1	●161 565

14.2172 KNOB, DIRECTIONAL SIGNAL LEVER

57-70	Jamaican Green	1	146 8917
57-70	Kenya Beige	1	146 8916
57-70	Lake Placid Blue	1	146 8915
57-70	Wimbledon Gray	1	146 8914
57-70	Chamonix White	1	146 8913

14.2174 CAP, DIRECTIONAL SIGNAL LEVER KNOB

57-70		1	146 8776

14.2176 FERRULE, DIRECTIONAL LEVER KNOB

57-70		1	●146 7009

14.2195 FUSE, DIRECTIONAL SIGNAL

57-70	(★25.0035) 6 Amp.	1	●147 683

14.2215 BULB, INSTRUMENT PANEL LIGHTS

57-70	(★25.0040) 2 C.P. Instrument cluster, tell-tale lights, shift indicator, turn signal, summer vent & air cond. control	12	●273 157
57-70	(★25.0040) 1 C.P. Beam indicator, clock, ignition lock, cigar lighter, light switch	5	●131 282

14.2260 SWITCH, MAP LIGHT

57-70	Switch and Body Assy.	1	●146 5994

14.2268 LENS, MAP LIGHT

57-70		1	146 5148

14.2270 BULB, MAP AND COURTESY LIGHT

57-70	(★25.0040) 6 C.P.	1	●142 453

14.2282 RETAINER, MAP LIGHT HOUSING

57-70	RH	1	●146 7777
57-70	LH	1	●146 7776

14.2283 SCREW, MAP LIGHT AND LENS RETAINING

57-70 . . . . . (★33.1944) Oval cross recessed hd., No. 10-12 x 3/4" . . . . . 2 ●168 593

14.2284 NUT, MAP LIGHT LENS RETAINING SCREW

57-70 . . . . . (★14.1920) Spring "U" type. No. 10-12 . . . 2 ●445 445

14.2285 LIGHT, TRUNK COMPARTMENT

57-70 . . . . . (12 volt) w/Bracket, Bulb, Socket, Wire and Terminal 1 146 7447

14.2286 SCREW, TRUNK COMPARTMENT LIGHT

57-70 . . . . . (★25.0560) Pan hd., No. 10-12 x 3/8" . . . . 1 ●161 892

14.2290 BULB, TRUNK COMPARTMENT LIGHT

57-70 . . . . . (★25.0040) 15 C.P. 1 455 490

14.2295 LENS, TRUNK COMPARTMENT LIGHT

57-70 . . . . 1 146 6935

14.2301 BEZEL, TRUNK COMPARTMENT LIGHT LENS

57-70 . . . . 1 146 6936

14.2302 SCREW, COMPARTMENT LIGHT BEZEL AND LENS

57-70 . . . . . (★25.0560) Tapping pan cross recess hd., No. 8-15 x 3/4" 2 161 872

SERIES	GROUP NO. & DESCRIPTION	SPECIFICATIONS	NO. USED	PART NO.
	17.0141 BUMPER FOR SPRING (RUBBER)			
57-70		Front, on frame	2	●146 0140
57-70		Rear, center, on crossmember	1	146 6265
57-70		Rear, side, at air spring dome	2	146 5625
57-70		Front, on spring seat	2	146 7577
	17.0147 BRACKET, RUBBER BUMPER RETAINER			
57-70		Rear, sides, at air spring dome	2	146 5724
	17.0680 SHOCK ABSORBER, FRONT			
57-70		Model FS837P 1" diam. Valve code 5A8. Pkg., w/Bushings	2	553 5533
	17.0680 SHOCK ABSORBER, REAR			
57-70		Model FS881V 1" diam. Valve code 3D8, assy., w/integral Bushings	2	553 1508
	17.0684 NUT			
57-70		Rear, 3/8"-24, spec.	4	●145 8111
57-70		Front, (★25.0080) 3/8"-24	4	●120 369
57-70		Rear, (★25.0080) 3/8"-24	4	●120 369
	17.0685 SCREW			
57-70		(★25.0500) 3/8"-24. Front	4	●181 639
	17.0710 BOLT, FRONT SHOCK ABSORBER BRACKET			
57-70		(★25.0500) 3/8"-24 x 1", to frame	6	454 922
	17.0720 BUSHING OR GROMMET, SHOCK ABSORBER			
57-70		Front, (★17.0828)	8	146 7337
	17.0725 RETAINER, SHOCK ABSORBER			
57-70		Front, (★17.0829)	8	144 2085
57-70		Front, upper	2	●130 4569
	17.0810 KIT, FRONT STABILIZER LINK			
57-70			2	●363 0762
	17.0815 LINK, STABILIZER ARM			
57-70		Front	2	●146 6025
	17.0816 NUT, FRONT STABILIZER ROD LINK			
57-70		5/16"-24	2	●530 2387
	17.0817 SPACER, FRONT STABILIZER ROD LINK			
57-70			2	●146 6026
	17.0828 GROMMET, FRONT STABILIZER LINK			
57-70			8	●146 7337
	17.0829 WASHER, GROMMET RETAINING			
57-70			8	●144 2085
	17.1200 RIDE STABILIZER, FRONT			
57-70		Less bushings	1	146 7900
	17.1230 BRACKET, STABILIZER SHAFT			
57-70		Front	2	●411 142
	17.1250 BUSHING, STABILIZER			
57-70		Rubber. Front stabilizer	2	●146 3944

	17.1400 LINK, REAR AXLE LOWER CONTROL			
57-70	w/Bushing	1		363 0923
	17.1415 BOLT, REAR AXLE, LOWER CONTROL LINK			
57-70	1/2"-20 x 4", in bushing	2		455 034
	17.1417 NUT, REAR AXLE CONTROL LINK BOLT			
57-70	(★25.0080) 1/2"-20, special	2		225 857
	17.1425 BRACKET, REAR AXLE LOWER CONTROL LINK			
57-70	Front, on frame	2		146 5845
	17.1430 BOLT, REAR AXLE LOWER CONTROL LINK BRACKET			
57-70	(★25.0500) 3/8"-24 x 1". Front to frame	8	●	454 922
	17.1445 SHIM, REAR AXLE LOWER CONTROL LINK BRACKET			
57-70	.0598" thk. Front to frame	AR		146 5858
57-70	.0897" thk. Front to frame	AR		146 5859
57-70	.1196" thk. Front to frame	AR		146 5860
	17.1455 BALL JOINT, REAR AXLE CONTROL LINK			
57-70	Link to axle	2		761 531
	17.1457 SEAL, GREASE, REAR AXLE CONTROL LINK BALL JOINT			
57-70	Rubber, side link	2		761 276
	17.1460 NUT, CONTROL LINK BALL JOINT			
57-70	(*25.0086) 5/8"-18 slotted	2	●	125 267
	17.1463 WASHER, CONTROL LINK BALL JOINT			
57-70	11/16" x 1 1/2" x .134", plain	2		446 248
	17.1500 YOKE ASSY., REAR AXLE CONTROL			
57-70	w/Bushing	1		351 0722
	17.1520 BOLT, REAR AXLE CONTROL YOKE BUSHING			
57-70	(★17.1415) 1/2"-20 x 4", to crossmember	2		455 034
	17.1526 NUT, CONTROL YOKE BUSHING BOLT			
57-70	(★25.0080) 1/2"-20 hex.	2		225 857
	17.1535 BALL JOINT, REAR AXLE CONTROL YOKE			
57-70	On differential housing	1		761 525
	17.1537 SEAL, GREASE, REAR AXLE YOKE BALL JOINT			
57-70	Rubber, center	2		761 530
	17.1545 SCREW, REAR AXLE CONTROL YOKE BALL JOINT			
57-70	(★25.0500) 3/8"-24 x 7/8", ball joint to rear axle housing	4	●	454 921
57-70	1/2"-20 x 3 1/2", yoke to ball joint	1		181 713
	17.1550 NUT, REAR AXLE CONTROL YOKE			
57-70	(★25.0080) 1/2"-20, on ball joint screw	1		225 857
	17.1800 COMPRESSOR, AIR SPRING			
57-70		1		530 2935
	17.1820 BRACKET, AIR COMPRESSOR MOUNTING			
57-70		1		146 7406

17.1830 SCREW, AIR COMPRESSOR MOUNTING

57-70	(★25.0500) 1/4"-28 x 1/2"	4	●123 316
57-70	(★25.0500) 5/16"-18 x 2 1/2"	2	122 077

17.1831 NUT

57-70	(★25.0080) 5/16"-18	2	●120 376

17.1880 PIPE, AIR COMPRESSOR OIL LINE TO ENGINE

57-70	Oil feed (26" length)	1	146 7313
57-70	Oil return (16" length)	1	146 7314

17.1885 FITTING, AIR COMPRESSOR OIL LINES TO ENGINE

57-70	(★25.0215) Elbow, inverted flared tube, return line	1	●137 420
57-70	(★25.0210) Connector, inverted flared tube, feed line	1	●137 404

17.1895 RELAY, AIR SPRING CONTROL

57-70	On left front dust shield	1	111 6931

17.1900 SOLENOID, AIR SPRING CONTROL

57-70		1	553 3165

17.1905 FUSE, AIR SPRING WIRES

57-70	6 amp.	1	●147 683

17.1910 BOLT, AIR SPRING SOLENOID MOUNTING

57-70	(★25.0500) 1/4"-28 x 2 1/4"	2	124 058

17.1915 BULB, AIR SPRING SIGNAL

57-70	(★25.0040) 2 C.P., on instrument panel	1	●273 157

17.1980 PISTON, AIR SPRING

57-70	Front spring	2	351 0694
57-70	Rear spring	2	351 0713

17.1990 DIAPHRAGM, AIR SPRING

57-70	Front spring, rubber	2	146 5556
57-70	Rear spring, rubber	2	146 5555

17.1995 RETAINER, AIR SPRING DIAPHRAGM

57-70	Front spring	2	146 7071

17.2000 DOME, AIR SPRING, IN PRIMER

57-70	RH. Front spring, w/Fitting	1	351 0964
57-70	LH. Front spring, w/Fitting	1	351 0877
57-70	RH. Rear spring, w/Fitting	1	146 5747
57-70	LH. Rear spring, w/Fitting	1	146 5746

17.2010 BOLT, AIR SPRING DOME

57-70	(★25.0500) 5/16"-24 x 3/4", dome to mtg. plate front and rear spring	16	●120 741
57-70	(★25.0500) 3/8"-24 x 1", dome to bracket, rear spring	8	●454 922
57-70	(★25.0500) 3/8"-24 x 1", dome to mounting plate, front spring	6	●454 922

17.2011 NUT, AIR SPRING DOME BOLT

57-70	(★25.0080) 5/16"-24	16	●120 368

17.2015 BRACKET, DOME TO FRAME

57-70	RH front. Rear spring dome	1	146 7893
57-70	LH front. Rear spring dome	1	146 7892
57-70	RH rear. Rear spring dome	1	146 7938
57-70	LH rear. Rear spring dome	1	146 7937

17.2020 PLATE, AIR SPRING DIAPHRAGM RETAINER

57-70	Front spring	2	146 5557
57-70	Rear spring	2	146 5725

17.2030 SEAT, AIR SPRING PISTON ROD

57-70	Rear spring	2	146 5514

17.2040 BEARING, AIR SPRING PISTON

57-70	Front spring	2	146 5515

17.2042 NUT, AIR SPRING PISTON BEARING

57-70	(★25.0080) 3/8"-16, to seat, front spring	2	●120 377

17.2050 RETAINER, AIR SPRING PISTON ROD TO SEAT

57-70	Spring pin, 1/8" x 1 1/8", rear spring	2	455 277
57-70	Spring clip, rear spring	2	455 563

17.2060 SEAL, AIR SPRING PISTON BEARING

57-70	Front spring. Rubber	2	146 5521
57-70	Rear spring. Rubber	2	146 5477

17.2170 VALVE, AIR SPRING LEVELING

57-70	Front	1	553 6759
57-70	Rear	2	553 6758

17.2172 SCREW, LEVELING VALVE

57-70	(★25.0500) 1/4"-28 x 2 1/4", front	2	124 058
57-70	(★25.0500) 1/4"-28 x 3 1/2", RH rear	2	220 594
57-70	(★25.0500) 1/4"-28 x 2 1/2"; LH rear	2	124 064

17.2180 SPACER, AIR SPRING LEVELING VALVE

57-70	RH, rear, mounting	2	146 7173
57-70	Adjusting link bushings	2	146 7174

17.2173 NUT

57-70	(★25.0080) 1/4"-28, rear	4	●120 367

17.2190 LINK, ADJUSTING, AIR SPRING LEVELING VALVE

57-70	Front	1	146 6476
57-70	Rear	2	146 6475

17.2192 NUT, ADJUSTING LINK

57-70	(★25.0080) 1/4"-28	9	●120 367

17.2193 WASHER, ADJUSTING LINK

57-70	(★6.1327) Plain washer 17/64" x 3/4" x 1/16"	6	●145 6008

17.2200 BUSHING, LEVELING VALVE ADJUSTING LINK

57-70	Rubber	12	146 5530

17.2250 PIPE, TANK TO AIR SPRING

NOTE: For pipe layout see Illustration, page G-12.

57-70	9" lg; front check valve to LH front air dome	1	109 8687
57-70	22" lg; front check valve to RH front air dome and rear check valve to rear air domes, RH and LH	3	109 8688
57-70	32" lg; control solenoid to front leveling valve (pressure and exhaust) and air tank to solenoid	3	109 8689
57-70	150" lg; solenoid to rear tee fittings (pressure and exhaust)	2	109 8693
57-70	43" lg; rear tee fitting to LH rear leveling valve (pressure and exhaust)	2	109 8694
57-70	9" lg; air tank service tee	1	109 8695
57-70	13" lg; front leveling valve to check valve tee and RH rear leveling valve to tee fittings (pressure and exhaust)	3	109 8696

17.2265 CLIP, AIR SPRING PIPING

57-70	Tank to solenoid pipe, on radiator	1	146 8249
57-70	Air lines to radiator bracket	1	146 7909
57-70	Air lines to dome bracket, intermediate cross member and frame	4	145 539
57-70	Leveling valve to air dome pipe	2	146 8569

17.2270 NUT, AIR SPRING PIPING

57-70	3/8"-24 thd., flared tube union nut, special	30	146 7164

17.2275 GUARD, AIR SPRING PIPING

57-70	Front. On inner side sill panel, in primer	1	146 7755
57-70	Intermediate. On inner side sill panel, in primer	1	146 7742
57-70	Rear. On inner side sill panel, in primer	1	146 7763

17.2276 SCREW AIR SPRING PIPING GUARD

57-70	No. 10-32 x 5/8", to side sill	5	187 838
57-70	No. 8-18 x 5/8", flat hd., tapping, side sill guard to guard plate	7	162 659

17.2278 PLATE, RETAINING, AIR SPRING PIPING GUARD

57-70	To side sill panels	7	146 7739

17.2280 SEAL, AIR SPRING PIPING

57-70	Rubber "O" ring	31	146 7287

17.2285 TEE, SOLENOID PIPES TO LEVELING VALVE

57-70	Service tee	2	146 7325

17.2287 SCREW, SERVICE TEE

57-70	(★17.2292) No. 10-32 x 5/8", hex. hd. tapping, to radiator tie bar	1	172 380

17.2290 TEE, CHECK, AIR SPRING ORIFICE

57-70	On front crossmember, (for front air springs)	1	553 3166

17.2292 SCREW, FRONT CHECK TEE MOUNTING

57-70	No. 10-32 x 5/8", hex. hd., tapping	1	172 380

17.2300 TANK, AIR

57-70	Over radiator	1	146 7806

17.2303 BOLT, AIR TANK

57-70	Special, 5/16"-18 x 3/4", self locking, tank suspension	4	372 2133

17.2305 TEE, SERVICE, AIR TANK TO AIR LINES

57-70		1	534 1736

17.2310 SWITCH, PRESSURE INDICATOR

57-70	On air tank	1	150 8641

17.2320 DRAIN, AIR SPRING TANK

57-70	Cock, 1/8" pipe thd.	1	114 981

17.2350 HOSE, AIR COMPRESSOR

57-70	To pressure tank, flexible	1	146 7256
57-70	(★38.6350) To air cleaner, 9" req'd.	ft	●109 8356

No Page 70

SERIES	GROUP NO. & DESCRIPTION	SPECIFICATIONS	NO. USED	PART NO.

NOTE: Number stamped on Power Steering gear rack cover indicates the day and year manufactured (315-2 315th day - 1952) and is used as a breakpoint control when it is not possible to use Cadillac engine serial number.

18.0007 SCREW, STEERING GEAR TO FRAME

57-70		(★25.0500) 7/16"-14 x 2 1/2"	1	●180 157
57-70		(★25.0500) 7/16"-14 x 4 1/4"	1	●189 310
57-70		(★25.0500) 7/16"-14 x 3 1/2"	1	●180 162

18.0010 WHEEL, STEERING

57-70		Deauville Gray Rim, Wimbledon Gray Grips	1	761 080
57-70		Copenhagen Blue Rim, Lake Placid Blue Grips	1	761 081
57-70		Laurentian Green Rim, Jamaican Green Grips	1	761 082
57-70		Black Rim, Chamonix White Grips	1	761 084
57-70		Nairobi Brown Rim, Kenya Beige Grips	1	761 083
57-70		Deauville Gray Rim, Chamonix White Grips	1	761 085
57-70		Copenhagen Blue Rim, Chamonix White Grips	1	762 121
57-70		Laurentian Green Rim, Chamonix White Grips	1	762 122

18.0080 NUT, WHEEL TO STEERING TUBE

57-70			1	●257 720

18.0095 FLUID, OR LUBRICANT CADILLAC POWER STEERING GEAR AND PUMP

57-70		(★20.0015) 1 qt. can (24 cans to case)	1	●109 7333
57-70		(★20.0015) 5 qt. can	1	●109 8629

18.0100 JACKET, STEERING COLUMN, IN PRIMER

57-70		w/Supports & Stop. Paint w/lacquer to match	1	351 0731

18.0103 SEAL, HOT AIR, STEERING COLUMN

57-70		At lower bearing	1	●146 8515

18.0104 WASHER, STEERING COLUMN HOT AIR SEAL

57-70			1	●146 8450

18.0105 SPRING, STEERING COLUMN TUBE BEARING

57-70		Power steer.	1	●146 2645

18.0106 WASHER, STEERING COLUMN TUBE SPRING RETAINING

57-70		(★8.2618) Between spring and snap ring	1	●123 7679

18.0107 SEAT, BEARING SPRING

57-70		Power steer.	1	●262 468

18.0110 BUSHING OR BEARING, STEERING COLUMN TUBE

57-70		Upper and lower bearing. Power steer., HYD.	2	●131 7442

18.0116 BRACKET, STEERING COLUMN TO TOE PAN

57-70		Upper	1	351 0698
57-70		Lower	1	351 0699

18.0117 PLATE, STEERING COLUMN BRACKET BACKING

57-70		RH	1	146 6079
57-70		LH	1	146 5688

18.0118 SCREW, STEERING COLUMN BRACKET

57-70		(★18.0176) Hex. hd. 1/4"-20 x 1"	4	●145 8010
57-70		Spec. hex. hd 5/16"-18 x 3/4"	2	454 869

18.0130 RETAINER, STEERING COLUMN CLAMP BOLT

57-70		w/Bolts	1	●350 9533

18.0132 NUT

57-70	(★25.0080) Hex., 5/16"-18 w/external tooth lock washer	2	●271 184
57-70	Spring nut, 5/16"-18	2	●145 9836

18.0175 COVER, STEERING COLUMN

NOTE: See Color chart on page G-4 for paint specifications.

57-70	Upper. Paint w/lacquer to match	1	146 5648
57-70	Lower. Paint w/lacquer to match	1	146 5649

18.0176 SCREW, STEERING COLUMN COVER

57-70	Truss clutch recess hd., No. 10-24 x 5/8". Lower cover	2	●456 960

18.0177 ANTI-SQUEAK, STEERING COLUMN

57-70	Upper cover to instrument cluster	1	146 5909

18.0180 SCREW, STEERING COLUMN COVER RETAINER

57-70	(★25.0560) Pan.-hd., No. 10-32 x 1/2". Self-tapping, cross recess. For upper cover	2	●166 689

18.0184 NUT, STEERING COLUMN COVER SCREW

57-70	Spring, type "U", No. 10-24	2	●145 8527

18.0189 BUMPER, STEER. COLUMN COVER

57-70	Rubber	4	●146 7142
57-70	To instrument panel	4	●146 7193

18.0225 SUPPORT OR CLAMP, STEERING COLUMN

57-70	Clamp	1	●146 3708

18.0240 CRADLE, STEERING COLUMN CLAMP

57-70	Power steer.	1	●351 0361

18.0242 SOLENOID, SHIFT LEVER LOCKING FOR REAR DOOR

57-70	On steering column	1	111 9917

18.0244 LEVER ASSEMBLY, SHIFT TUBE LOCKING

57-70	On steering column	1	146 7340

18.0246 SUPPORT ASSEMBLY, SHIFT TUBE LOCKING LEVER

57-70	On steering column	1	146 7333

18.0247 PIN, SHIFT TUBE LOCKING SOLENOID

57-70	Spring type 1/8" x 9/16" to lever	1	454 736
57-70	Spring type 3/16" x 13/16" to support	1	455 106

18.0248 SCREW, SOLENOID MOUNTING

57-70	(★25.0500) Hex. hd. 1/4"-20 x 3/4"	2	121 887

18.0249 NUT, SOLENOID MOUNTING

57-70	(★25.0080) Hex. 1/4"-20	2	120 375

18.0250 VALVE, POWER, STEERING GEAR

57-70	Consists of Housing, Spool, Link Valve, Plugs and Seals. HYD.	1	●568 5330

18.0254 SEAL, STEERING POWER VALVE

57-70	5/16" I.D. To housing. HYD.	2	●568 5078

18.0263 NUT, LOCK, THRUST BEARING

57-70	For upper bearing. Power steer. HYD.	1	●568 4425

18.0265 WASHER, VALVE SPOOL PRELOAD

57-70	Spring type. Power steer. HYD.	1	●568 3580

18.0268 LINK ASSY., POWER STEERING GEAR VALVE

57-70	HYD.	1	●568 3302

	18.0269 LEVER, VALVE ACTUATING		
57-70	Power steer. HYD.	1	●568 5373
	18.0270 COVER, VALVE LINKAGE		
57-70	Power steer. HYD.	1	●568 5257
	18.0271 RING, LINK ASSY., RETAINING		
57-70	Power steer. HYD.	1	●568 2766
	18.0272 PLUG, VALVE END		
57-70	Power steer. HYD.	1	●568 3300
	18.0273 SEAL, END PLUG		
57-70	Power steer. HYD.	1	●568 1876
	18.0274 RING, END PLUG, RETAINING		
57-70	Power steer. HYD.	1	●568 3143
	18.0275 COVER, STEERING GEAR, POWER VALVE AND ADAPTER		
57-70	Upper housing, w/Bushing, Bearing and Seal. Power steer. HYD.	1	●568 5235
	18.0276 SCREW, COVER TO HOUSING		
57-70	3/8"-16 x 1 1/2". Power steer. HYD.	4	●568 2858
	18.0277 SEAL, VALVE LINKAGE COVER		
57-70	To valve body. Power steer. HYD.	1	●568 2993
57-70	To upper housing cover. Power steer. HYD.	1	●568 5234
	18.0280 SEAL, STEERING TUBE VALVE COVER		
57-70	Power steer. HYD.	1	●568 2846
	18.0282 BEARING, UPPER HOUSING COVER		
57-70	Power steer. HYD.	1	●568 3229
	18.0283 WASHER, UPPER HOUSING COVER		
57-70	Power steer. HYD.	1	●568 3223
	18.0285 KIT, SEAL, UPPER HOUSING COVER AND VALVE		
57-70	Power steer. HYD.	1	●568 5262
	18.0305 SHAFT, STEERING		
57-70	Lower, matched worm and flange w/Guide, Nuts, Balls and Adapter Assy. Power steer. HYD.	1	●568 5334
57-70	Upper shaft assy., less flange	1	568 4482
	18.0320 WASHER, VALVE COVER DUST SEAL		
57-70	Felt. Power steer.	1	●568 3127
	18.0321 PIN, FLANGE		
57-70	Power steer.	1	●568 2726
	18.0322 COUPLING, STEERING SHAFT FLANGE		
57-70	Power steer.	1	●568 2485
	18.0323 REINFORCEMENT, STEERING SHAFT COUPLING		
57-70	Power steer.	4	●568 2486
	18.0324 BOLT, STEERING SHAFT		
57-70	To upper flange. Spec. Power steer.	2	●568 2483
57-70	To lower flange. Spec. Power steer.	2	●568 2484
	18.0326 FLANGE, UPPER STEERING SHAFT		
57-70	Power steer. HYD.	1	●568 3816
	18.0327 SCREW, UPPER STEERING SHAFT FLANGE		
57-70	(★25.0500) Hex.-hd., 3/8"-24 x 1 1/4". Power steer. HYD.	1	●181 639

18.0330 SHAFT, PITMAN

57-70 . . . . . Power steer. HYD. w/Gear . . . . . 1 ●568 5406

18.0335 KIT, SEAL, PITMAN SHAFT

57-70 . . . . . Includes retaining Ring, Seals and Washer. Power steer. HYD. . . . . 1 ●568 5583

18.0340 SEAL, STEERING SHAFT, LOWER BEARING

57-70 . . . . . Power steer. HYD. . . . . 1 ●146 4047

18.0342 RETAINER, SEAL, STEERING SHAFT LOWER BEARING

57-70 . . . . . Power steer. HYD. . . . . 1 ●146 3974

18.0345 RING, SNAP, STEERING SHAFT SPRING RETAINING

57-70 . . . . . At lower bearing. Power steer. HYD. . . . . 1 ●146 4087

18.0385 BEARING AND SPRING ASSY., WORM THRUST

57-70 . . . . . Kit, upper end. In housing, w/4 extra springs. Power steer. HYD. . . . . 1 ●568 5447

18.0387 ADAPTER ASSEMBLY, WORM GEAR

57-70 . . . . . w/Pin, Seal, Ring and Washer, Power steer. HYD. . . . . 1 ●568 5250

18.0389 SEAL, ADAPTER

57-70 . . . . . (★18.0254) Outer, Power steer. HYD. . . . . 1 ●568 0593
57-70 . . . . . (★18.0254) To upper cover. Power steer. HYD. 1 ●568 0593

18.0484 SCREW, PITMAN SHAFT LASH ADJUSTING

57-70 . . . . 1 ●568 5408

18.0485 NUT, ADJUSTING SCREW

57-70 . . . . . Spec. . . . . 1 ●568 5372

18.0487 WASHER, ADJUSTING SCREW

57-70 . . . . 1 ●568 5409

18.0489 RETAINER, ADJUSTING SCREW

57-70 . . . . 1 ●568 5404

18.0490 SHIM, PITMAN SHAFT LASH ADJUSTER

57-70 . . . . . Kit, consists of 1 ea. .063", .065", .067", .069" thk., shims . . . . . 1 ●605 142

18.0644 KIT, "O" RING SEAL OR MASTER STEERING GEAR

57-70 . . . . . Power steer. HYD. . . . . 1 ●568 5264
57-70 . . . . . Complete master seal kit. Power steer. HYD. 1 ●568 5263

18.0645 KIT, OIL SEAL, RING AND WASHER, WORM GEAR

57-70 . . . . . Power steer. HYD. . . . . 1 ●568 3981

18.0666 HOUSING, STEERING WORM AND SECTOR

57-70 . . . . . w/Bushing, Seal and Plug. HYD. . . . . 1 ●568 5323

18.0670 KIT, PLUG AND SEAL IN STEERING GEAR

57-70 . . . . . Housing end. HYD. . . . . 1 ●568 4069

18.0707 BUSHING, FOR PITMAN SHAFT AND HOUSING

57-70 . . . . . Bearing, needle . . . . . 1 ●442 612

18.0790 COVER, SIDE, STEERING GEAR WORM HOUSING

57-70 . . . . . Power steer. HYD. . . . . 1 ●568 5472

18.0810 GASKET, HOUSING SIDE COVER

57-70 . . . . . (★18.0254) Seal. Power steer. HYD. . . . . 1 ●568 0593

18.0945 SCREW, RACK ASSY., BALL NUT RETAINING

57-70 . . . . . To worm gear assy., Power steer. HYD. . . 1 ●568 3582

	18.0950 RACK, POWER STEERING GEAR			
57-70	Kit, consists of Rack, Plug, Rings and Screw, HYD.		1	●568 5266
	18.0955 RING, PISTON, STEERING GEAR POWER RACK			
57-70	HYD.		1	●568 4441
	18.1007 HOSE ASSY., PRESSURE LINE, POWER VALVE TO PUMP			
57-70	Power steer. HYD.		1	●568 4542
	18.1008 SEAT, PRESSURE LINE			
57-70	In power valve. Power steer. HYD.		1	●568 1757
	18.1011 HOSE, RETURN LINE, POWER VALVE TO PUMP			
57-70	Less end assy., and clamps. HYD.		1	●568 3931
	18.1012 SEAT, RETURN LINE			
57-70	In power valve. Power steer. HYD.		1	●568 2044
	18.1013 UNION, RETURN LINE HOSE			
57-70	In power valve. Power steer.		1	●566 4020
	18.1015 SEAL, RETURN AND PRESSURE HOSE UNION			
57-70	(★18.0989) Rubber ring (9/16" I.D.). For return hose union. Power steer. HYD.		1	●566 4015
	18.1016 END ASSY., RETURN LINE HOSE			
57-70	Power steer. HYD.		1	●146 7535
	18.1017 CLAMP, RETURN LINE HOSE			
57-70	(★4.5305) Power steer. HYD.		2	●111 603
	18.1320 ARM, STEERING GEAR (PITMAN)			
57-70	w/Ball Stud		1	●567 1626
	18.1342 NUT, ARM RETAINING			
57-70	7/8"-14		1	●258 779
	18.1350 ARM, IDLER, CONNECTING LINK TO SUPPORT ON SIDE BAR			
57-70	w/Ball Stud		1	●264 953
	18.1357 SUPPORT, IDLER ARM TO SIDE BAR			
57-70	w/Bushing		1	●146 8168
	18.1359 SCREW, IDLER ARM SUPPORT			
57-70	(★25.0500) 3/8"-24 x 1"		2	●181 637
	18.1362 SEAL, IDLER ARM BUSHING			
57-70	Rubber		1	●144 2592
	18.1375 LINK, DRAG, STEERING CONNECTING			
57-70	L.H.D.		1	●567 1867
	18.1385 SEAT, STEERING CONNECTING LINK PIVOT			
57-70	Front and rear		8	●264 946
	18.1395 PLUG, SPRING TENSION ADJUSTING, IN STEERING CONNECTING LINK			
57-70	Front and rear		2	●264 945
	18.1405 SPRING IN END OF CONNECTING LINK			
57-70	Idler arm end		1	●566 7373
57-70	Pitman arm end		1	●566 7373
	18.1415 PLUG, STOP, CONNECTING LINK PIVOT SPRING			
57-70	Idler arm end		1	●263 697
57-70	Pitman arm end		1	●263 697

18.1425 SPACER, STEERING CONNECTING LINK

57-70 . . . . . 3 3/4" lg. Between idler arm and RH tie rod ball seat . . . . . 1 ●567 1869

57-70 . . . . . 1 25/32" lg. Between pitman arm and LH tie rod ball seat . . . . . 1 ●567 1868

18.1426 COVER, STEERING CONNECTING LINK SPACER

57-70 . . . . . 2 ●265 516

18.1435 WASHER, CONNECTING LINK

57-70 . . . . . 1/8", backing tie rod pivot seat . . . . . 2 ●264 988

18.1455 COVER, DUST, CONNECTING LINK

57-70 . . . . . For steering connecting rod and idler arm ball stud . . . . . 4 ●265 765

18.1465 SPRING, CONNECTING LINK DUST COVER

57-70 . . . . . 4 ●264 949

18.1470 REPAIR KIT, DRAG LINK

57-70 . . . . . RH side. Idler arm end. Kit consists of Plugs, Seats, Covers, Washers, Spacers, Dust Covers and Springs . . . . . 1 ●363 0865

57-70 . . . . . LH side. Pitman arm end. Kit consists of Plugs, Seats, Covers, Washers, Spacers, Dust Covers and Springs . . . . . 1 ●363 0864

18.2010 PUMP, POWER STEERING GEAR

57-70 . . . . . w/hose Fittings 1 568 5972

18.2015 SCREW, PUMP TO MOUNTING BRACKET

57-70 . . . . . (★25.0500) Hex.,-hd., 3/8"-16 x 1". Power steer. HYD. . . . . 2 ●120 233

18.2035 BRACKET, MOUNTING POWER PUMP

57-70 . . . . . On water pump body . . . . . 1 ●146 5822

18.2053 REPAIR KIT, POWER STEERING PUMP

57-70 . . . . . Consists of Cam Ring, Rotor and Vanes . . . 1 ●568 5050

18.2068 TANK OR RESERVOIR, OIL, POWER STEERING PUMP

57-70 . . . . . HYD. . . . . 1 ●568 4982

18.2069 SCREW, TANK TO PUMP BODY

57-70 . . . . . 1/4"-20 x 15/16". Power steer. HYD. . . . 4 ●568 3542

18.2072 GASKET, TANK TO PUMP BODY

57-70 . . . . . Power steer. HYD. . . . . 1 ●568 3968

18.2073 GASKET, TANK TO PUMP COVER

57-70 . . . . . (★18.2072) Power steer. HYD. . . . . 1 ●568 3968

18.2074 MANIFOLD, POWER STEERING PUMP TANK

57-70 . . . . . HYD. . . . . 1 ●568 4957

18.2075 FILTER, TANK OIL RETURN

57-70 . . . . . w/Retainer. Power steer. HYD. . . . . 1 ●568 5072

18.2078 COVER, TANK, POWER STEERING PUMP

57-70 . . . . . HYD. . . . . 1 ●568 3388

18.2079 SCREW, PUMP TANK COVER

57-70 . . . . . (★25.0500) 5/16"-18 x 3". Power steer. HYD. 1 ●100 128

18.2080 WASHER, PUMP TANK COVER SCREW

57-70 . . . . . Power steer. HYD. . . . . 1 ●568 2148

18.2088 GASKET, PUMP TANK COVER

57-70 . . . . . Power steer. HYD. . . . . 1 ●568 2123

	18.2093 COVER, PUMP, POWER STEERING			
57-70	HYD.		1	●568 5048
	18.2094 SCREW, POWER STEERING PUMP COVER			
57-70	(★25.0500) Hex.-hd., 5/16"-18 x 2 3/8" HYD.		2	●273 916
57-70	(★25.0500) Hex.-hd., 5/16"-18 x 3 1/8" HYD.		2	●273 917
	18.2098 KIT, GASKET, PUMP TANK			
57-70	Consists of pump to tank & cover Gaskets & pump ring seals. Power steer. HYD.		1	●568 5051
	18.2101 VALVE KIT, FLOW CONTROL, POWER STEERING PUMP			
57-70	Consists of Relief Valve, Ball, Spring, Guide, Adj. Screw, Flow Control Plunger, and Shims. HYD.		1	●568 5449
	18.2103 SHIM, FLOW CONTROL VALVE SCREW			
57-70	HYD.		AR	●568 3875
	18.2107 SPRING, FLOW CONTROL VALVE PLUNGER			
57-70	Power steer. HYD.		1	●568 4941
	18.2135 PLATE, PRESSURE, POWER STEERING PUMP			
57-70	HYD.		1	●568 5071
	18.2142 ROTOR, POWER STEERING PUMP			
57-70	HYD.		1	●568 3680
	18.2146 VANE KIT, POWER STEERING PUMP ROTOR			
57-70	Consists of 10 vanes. HYD.		1	●568 3488
	18.2150 RING, CAM, POWER STEERING PUMP			
57-70	HYD.		1	●568 5047
	18.2154 PIN, CAM RING, POWER STEERING PUMP			
57-70	HYD.		2	●568 3678
	18.2160 BODY, POWER STEERING PUMP			
57-70	w/Bushing. HYD.		1	●568 4945
	18.2165 SHAFT, DRIVE, POWER STEERING PUMP			
57-70	Kit w/Bearing and retaining Ring. HYD.		1	●568 4949
	18.2168 KEY, WOODRUFF, PUMP SHAFT			
57-70	(★20.1894) Power steer. HYD.		1	●124 543
	18.2170 SEAL, POWER STEERING PUMP SHAFT			
57-70	HYD.		1	●568 3898
	18.2175 BEARING, BALL, POWER STEERING PUMP SHAFT, FRONT			
57-70	HYD.		1	●568 4946
	18.2184 RING, SNAP, RETAINING BEARING ON SHAFT			
57-70	Power steer. HYD.		1	●568 4935
57-70	Power steer. HYD.		1	●568 4948
	18.2205 PULLEY ASSY., POWER STEERING GEAR PUMP			
57-70	(5 23/32" O.D.) HYD.		1	●146 6585
	18.2207 NUT, PULLEY TO PUMP			
57-70	(★25.0080) Hex., 1/2" - 20. Power steer. HYD.		1	●124 934
	18.2208 WASHER, PLAIN			
57-70	17/32" x 1 1/8" x 5/32". Power steer. HYD.		1	●144 4435

18.2220 PULLEY, POWER STEERING GEAR PUMP

57-70 . . . . . (★6.0245) Quadruple. Fan and water pump driven. Air cond. HYD. . . . . 1 ●351 1147

18.2230 PULLEY, DRIVE, POWER STEERING GEAR PUMP

57-70 . . . . . (★8.0921) Quadruple. Air cond. On crankshaft balancer. Water pump and generator drive. HYD. . . . . 1 ●146 5626

18.2235 SCREW, PULLEY TO HUB

57-70 . . . . . (★25.0500) Hex.-hd., 5/16"-18 x 3/4". Air cond. Power steer. HYD. . . . . 6 ●122 007

18.2245 BELT, PUMP DRIVE, STEERING GEAR

57-70 . . . . . (★6.0337) Power steer. HYD. . . . . 1 ●146 5976

SERIES	GROUP NO. & DESCRIPTION	SPECIFICATIONS	NO. USED	PART NO.
	20.0005	TRANSMISSION, HYD. ASSEMBLY W/FLYWHEEL HOUSING TORUS COVER AND MEMBERS		
57-70		CB57. Less cooler	1	861 8917
	20.0007	HOUSING, FLYWHEEL		
57-70		(★8.0286) w/Bushing and Seal. HYD.	1	●861 8101
	20.0008	SEAL, FLYWHEEL		
57-70		(★8.0291) HYD.	1	●861 6480
	20.0010	CASE, TRANSMISSION		
57-70		w/Plugs. HYD.	1	●861 7543
	20.0015	FLUID, CADILLAC HYDRA-MATIC TRANSMISSION		
57-70		1 qt. can (24 cans to a case)		●109 7333
57-70		5 qt. can		●109 8629
57-70		55 gallon drum (drum not returnable)		●109 7471
	20.0020	GASKET SET, TRANSMISSION OVERHAUL		
57-70		HYD.	1	●861 6908
	20.0045	TUBE, TRANSMISSION OIL FILLER		
57-70		w/Bracket and Shield. HYD.	1	●146 5290
	20.0046	SEAL, OIL FILLER TUBE		
57-70		HYD.	1	●861 7747
	20.0055	BREATHER ASSEMBLY, TRANSMISSION		
57-70		HYD.	1	●861 8120
	20.0060	INDICATOR, OIL LEVEL		
57-70		HYD.	1	●146 4186
	20.0070	SEAL, OIL, FRONT COVER		
57-70		In flywheel housing. HYD.	1	●861 8181
	20.0091	COVER, BOTTOM OF TRANSMISSION CASE		
57-70		HYD.	1	●861 7571
	20.0092	SCREEN, OIL, IN BOTTOM COVER		
57-70		HYD.	1	●861 7603
	20.0093	SCREW, BOTTOM COVER TO TRANSMISSION CASE		
57-70		5/16"-18 x 1/2" w/external tooth lock Washer. HYD.	15	●425 107
	20.0102	GASKET, BOTTOM COVER		
57-70		HYD.	1	●861 6182
	20.0110	COOLER ASSY., TRANSMISSION OIL		
57-70		Cars w/dual carbs. HYD.	1	●852 5184
	20.0111	PIPE ASSY., TRANSMISSION TO COOLER		
57-70		Inlet	1	●146 6358
57-70		Outlet	1	●146 6357
	20.0112	BRACKET, HOSE RETAINER, TRANSMISSION OIL COOLER		
57-70		Cars w/dual carbs. HYD.	1	●146 3433
	20.0113	HOSE, TRANSMISSION OIL COOLER		
57-70		(★20.6450) 15/16" O.D. x 5/8" I.D. Cut to length required. HYD.	1	●109 8625

	20.0114	FITTING, TRANSMISSION OIL COOLER		
57-70		(★54.0172) Nipple. Engine block to oil cooler hose. HYD.	1	●145 5707
57-70		Elbow, water pump takeoff. HYD.	1	●146 8202
	20.0116	CLAMP, HOSE, TRANSMISSION OIL COOLER		
57-70		Cars w/dual carbs. (★54.0162) HYD.	6	●145 8199
57-70		HYD.	1	●146 8203
	20.0124	ADAPTER, OIL COOLER		
57-70		HYD.	1	●861 7835
	20.0125	SCREW, OIL COOLER ADAPTER TO CASE		
57-70		Screw cap hex. socket 5/16"-18 x 5/8". HYD.	2	●217 907
	20.0126	WASHER, OIL COOLER ADAPTER TO CASE		
57-70		Copper. HYD.	2	●861 6498
	20.0127	GASKET, OIL COOLER ADAPTER TO CASE		
57-70		HYD.	1	●861 6496
	20.0128	SLEEVE, OIL COOLER		
57-70		HYD.	2	●861 6497
	20.0129	SEAL, OIL COOLER SLEEVE		
57-70		HYD.	2	●861 6494
	20.0132	TUBE, CONNECTOR, TRANSMISSION OIL COOLER HOSE		
57-70		Cars w/dual carbs. HYD.		●146 7063
	20.0185	PLUG IN CASE		
57-70		(★8.3147) In bottom, less gasket, HYD.	1	●145 5051
	20.0190	GASKET, TRANSMISSION DRAIN PLUG		
57-70		(★8.3157) HYD.	1	●145 6386
	20.0420	BEARING ON END OF MAIN SHAFT		
57-70		Output shaft. In extension housing. HYD.	1	●903 007
	20.0423	RING, RETAINING, REAR MAIN SHAFT BEARING		
57-70		Snap ring. To rear housing. HYD.	1	●861 1914
57-70		Snap ring. To rear housing. HYD.	1	●861 4096
	20.0425	KIT, SNAP RING, TRANSMISSION OVERHAUL		
57-70		HYD.	1	●861 6916
	20.0490	HOUSING, MAIN SHAFT EXTENSION		
57-70		w/Bushings and Shield. HYD.	1	●861 7592
	20.0501	SCREW, EXTENSION HOUSING TO TRANSMISSION CASE		
57-70		(★25.0500) 3/8"-16 x 2 1/4"	5	●179 848
57-70		(★25.0500) 3/8"-16 x 1 5/8". HYD.	1	●179 844
57-70		Hex. hd. 3/8"-16 x 2 3/8". HYD.	2	●861 8086
	20.0512	GASKET, EXTENSION HOUSING		
57-70		Between extension housing and rear pump, HYD.	1	●861 7746
	20.0516	OIL SEAL IN MAIN SHAFT EXTENSION HOUSING		
57-70		Rear	1	●861 7869
	20.0916	LEVER, SHIFT, HAND CONTROL		
57-70		Chromium	1	●146 5834
	20.0927	KNOB, HAND CONTROL SHIFT LEVER		
57-70		Deauville Gray	1	●146 5902
57-70		Black	1	●146 5906

57-70	Nairobi Brown		1	●146 5904
57-70	Lake Placid Blue		1	146 8172
57-70	Chamonix White		1	146 8170
57-70	Wimbledon Gray		1	146 8171
57-70	Kenya Beige		1	146 8173
57-70	Jamaican Green		1	146 8174
	20.0928 FERRULE, SHIFT LEVER KNOB			
57-70	Chromium		1	●146 6948
	20.1303 LEVER, SHIFT, AT TRANSMISSION OUTER			
57-70			1	●146 7179
	20.1305 SCREW, SHIFT LEVER TO SHAFT			
57-70	(★25.0500) Hex. hd., 1/4"-20 x 1". HYD.		1	●123 461
	20.1400 DRUM, NEUTRAL CLUTCH			
57-70	HYD.		1	●861 7478
	20.1401 DISC, NEUTRAL CLUTCH			
57-70	Driven (Steel) HYD.		4	●861 6475
57-70	Drive w/Facings. Replace in sets of 5 only		5	●861 7931
	20.1402 SPRING, NEUTRAL CLUTCH RELEASE			
57-70	HYD.		5	●861 6476
	20.1403 PISTON, NEUTRAL CLUTCH			
57-70	HYD.		1	●861 6899
	20.1404 RING, OIL SEAL, NEUTRAL CLUTCH PISTON			
57-70	Kit. Rubber Lip Type. HYD.		1	●861 6919
	20.1405 SUPPORT ASSEMBLY, BEARING, CENTER			
57-70	w/Bearing. HYD.		1	●861 6897
	20.1406 RING, OIL SEAL, CENTER SUPPORT			
57-70	HYD.		2	●861 7567
	20.1407 RING, SNAP, CENTER SUPPORT TO CASE			
57-70	HYD.		1	●861 6152
	20.1408 WASHER, THRUST, INNER RACE TO CENTER SUPPORT			
57-70	HYD.		1	●861 6097
	20.1409 KEY, STATIONARY STOP			
57-70	HYD.		1	●861 6605
	20.1410 SCREW, CASE TO CENTER SUPPORT			
57-70	HYD.		1	●861 6432
	20.1500 COVER, TORUS, FLUID COUPLING			
57-70	Includes 2 locating dowels. HYD.		1	●861 6954
	20.1503 PLUG, DRAIN, FLUID COUPLING COVER			
57-70	HYD.		1	●860 8680
	20.1505 SEAL, FLUID COUPLING COVER			
57-70	Neoprene, HYD.		1	●861 6338
	20.1507 GEAR, FRONT SUN			
57-70	HYD.		1	●861 6082
	20.1508 WASHER, THRUST, FRONT SUN GEAR			
57-70	Bz. To fluid coupling driving assy. HYD.		1	●861 6091
57-70	To fluid coupling driving assy. HYD.		1	●861 6087
57-70	Bz. To hub. HYD.		1	●861 6189
57-70	To hub. HYD.		1	●861 6540

20.1509 SCREW, FLUID COUPLING COVER TO FLYWHEEL			
57-70	5/16"-24 x 1". HYD.	12	●861 6889
20.1510 TORUS AND HUB MEMBER, FLUID COUPLING			
57-70	Driven Assy., w/Valve and Spring, cars w/dual carbs. HYD.	1	●861 6089
57-70	Driving Assy., w/Planet Pinions, cars w/dual carbs. HYD.	1	●861 6088
20.1511 NUT, FLYWHEEL TO TORUS COVER			
57-70	(★25.0088) Hex. hd., lock 5/16"-24. HYD.	12	●126 002
20.1512 VALVE, CHECK, DRIVEN TORUS			
57-70	HYD.	1	●861 6062
20.1513 SPRING, DRIVEN TORUS CHECK VALVE			
57-70	HYD.	1	●861 6020
20.1518 RETAINER, DRIVEN OR DRIVING TORUS			
57-70	7/8" I.D. Snap Ring. Driven. On mainshaft. HYD.	2	●861 6503
57-70	1 1/8" I.D. Snap Ring. Driving. On intermediate shaft. HYD.	1	●861 6492
20.1525 GEAR, FRONT UNIT DRIVE			
57-70	Internal, w/Bushing. HYD.	1	●861 6040
20.1535 WASHER, THRUST, FRONT UNIT DRIVE GEAR			
57-70	.070" thk. Steel. HYD.	AR	●861 6703
57-70	.078" thk. Steel. HYD.	AR	●861 6704
57-70	.086" thk. Steel. HYD.	AR	●861 6705
57-70	.094" thk. Steel. HYD.	AR	●861 6706
57-70	.102" thk. Steel. HYD.	AR	●861 6707
57-70	.110" thk. Steel. HYD.	AR	●861 6708
57-70	.118" thk. Steel. HYD.	AR	●861 6709
57-70	.126" thk. Steel. HYD.	AR	●861 6710
57-70	.134" thk. Steel. HYD.	AR	●861 6711
57-70	.142" thk. Steel. HYD.	AR	●861 6712
57-70	.150" thk. Steel. HYD.	AR	●861 6713
57-70	.158" thk. Steel. HYD.	AR	●861 6714
57-70	.166" thk. Steel. HYD.	AR	●861 6715
57-70	.174" thk. Steel. HYD.	AR	●861 6716
20.1572 TORUS ASSEMBLY, FRONT UNIT COUPLING			
57-70	Driven Assy. w/Shaft. HYD.	1	●861 6154
57-70	Driving Assy. HYD.	1	●861 6528
20.1573 RING, SEAL, FRONT UNIT COUPLING			
57-70	In coupling cover. HYD.	2	●861 6479
57-70	On driven torus shaft hub. HYD.	1	●861 6489
57-70	On driven torus shaft. HYD.	1	●861 6481
57-70	Front pump to torus cover. HYD.	2	●861 6034
20.1574 RING, SNAP, FRONT UNIT COUPLING COVER			
57-70	HYD.	1	●861 6190
20.1575 WASHER, THRUST, FRONT UNIT COUPLING			
57-70	HYD.	1	●861 6646
57-70	Bz. HYD.	1	●861 6107
57-70	Spacer type. On driving assy. hub. HYD.	1	●861 7938
20.1576 COVER ASSEMBLY, FRONT UNIT COUPLING			
57-70	HYD.	1	●861 6926
20.1577 VALVE, EXHAUST, FRONT UNIT COUPLING			
57-70	HYD.	2	●861 6407
20.1578 SPRING, EXHAUST VALVE, FRONT UNIT COUPLING			
57-70	HYD.	2	●861 6406

20.1625 SHAFT, MAIN, TRANSMISSION

57-70	HYD.	1	861 7947

20.1626 GEAR, REAR SUN

57-70	On main shaft. HYD.	1	•861 7948

20.1627 WASHER, REAR UNIT SUN GEAR

57-70	Thrust. HYD.	1	•861 6433
57-70	Needle bearing. HYD.	1	•457 122

20.1628 RING, SNAP, SUN GEAR TO MAINSHAFT

57-70	(★20.1518) HYD.	1	•861 6503
57-70	HYD.	1	•861 7953

20.1629 RETAINER, WASHER, THRUST BACKING

57-70	HYD.	1	•861 7949

20.1643 WASHER, THRUST, REAR UNIT

57-70	.057" thk. Bz. HYD.	AR	•861 7821
57-70	.062" thk. Bz. HYD.	AR	•861 7822
57-70	.067" thk. Bz. HYD.	AR	•861 7823
57-70	.072" thk. Bz. HYD.	AR	•861 7824
57-70	.077" thk. Bz. HYD.	AR	•861 7825
57-70	.082" thk. Bz. HYD.	AR	•861 7826
57-70	.087" thk. Bz. HYD.	AR	•861 7827
57-70	.092" thk. Bz. HYD.	AR	•861 7828
57-70	.097" thk. Bz. HYD.	AR	•861 7829

20.1657 PISTON, REAR CLUTCH

57-70	Annular. HYD.	1	•861 7416

20.1658 RING, PISTON OIL SEAL

57-70	Kit, w/inner & outer Seals. HYD.	1	•861 6909

20.1664 DRUM ASSEMBLY, REAR CLUTCH

57-70	w/Bushing. HYD.	1	•861 7624

20.1665 SPRAG ASSEMBLY, REAR CLUTCH

57-70	HYD.	1	•861 7666

20.1666 RACE, REAR CLUTCH SPRAG ASSEMBLY

57-70	Outer. HYD.	1	•861 6103

20.1667 RETAINER, SPRAG AND RACE, REAR CLUTCH

57-70	HYD.	1	•861 7627

20.1668 RING, SNAP, OUTER RACE AND SPRAG RETAINER

57-70	(★20.1737) HYD.	1	•861 6057

20.1670 GEAR, REAR UNIT, INTERNAL

57-70	HYD.	1	•861 6110

20.1673 SHAFT, INTERMEDIATE

57-70	HYD.	1	•861 6095

20.1674 RING, OIL SEAL INTERMEDIATE SHAFT

57-70	HYD.	1	•861 6052

20.1675 HUB, CLUTCH, REAR UNIT

57-70	HYD.	1	•861 6112

20.1676 RING, SNAP, REAR CLUTCH HUB TO INTERMEDIATE SHAFT

57-70	(★20.1518) HYD.	1	•861 6492

20.1680 DISC, CLUTCH, REAR UNIT

57-70	Drive w/Facings. HYD.	7	•861 6059
57-70	Driven (Steel) HYD.	7	•861 6010

	20.1685 PLATE, CLUTCH PRESSURE, REAR UNIT			
57-70	HYD.	1	●861 6118
	20.1690 SPRING, CLUTCH RELEASE, REAR UNIT			
57-70	HYD.	8	●861 6132
	20.1692 RETAINER, REAR CLUTCH RELEASE			
57-70	HYD.	1	●861 6054
	20.1693 RING, SNAP, REAR CLUTCH SPRING RETAINER			
57-70	HYD.	1	●861 6060
	20.1695 WASHER, THRUST, REAR UNIT CLUTCH HUB			
57-70	To clutch drum. HYD.	1	●861 6173
	20.1697 DRUM, BRAKE, REAR UNIT			
57-70	HYD.	1	●861 6119
	20.1700 PLANET CARRIER ASSEMBLY, REVERSE UNIT			
57-70	w/Gear	1	●861 7820
	20.1709 RING, SNAP, REVERSE UNIT AND FLANGE, RETAINING			
57-70	(★20.1717) 1 21/64" I.D. (Reverse unit) HYD.	2	●860 6763
57-70	Flange to drum. HYD.	2	●861 6015
	20.1710 FLANGE, REVERSE UNIT DRIVE			
57-70	w/Gear and Bushing, HYD.	1	●861 7817
	20.1720 SHAFT, DRIVEN			
57-70	w/planet Carrier, HYD.	1	861 7943
	20.1721 GEAR, REVERSE, INTERNAL			
57-70	w/Bushing & Flange. HYD.	1	●861 6843
	20.1724 WASHER, THRUST, INTERNAL REVERSE GEAR			
57-70	Wave type. HYD.	1	●861 6069
	20.1726 SPRING, REVERSE PISTON RELEASE			
57-70	Wave type. HYD.	1	●861 6221
	20.1727 PISTON, REVERSE CLUTCH			
57-70	HYD.	1	●861 7372
	20.1730 CONE, REVERSE CLUTCH			
57-70	HYD.	1	●861 6755
	20.1731 KEY, REVERSE CLUTCH CONE			
57-70	(★20.1409) HYD.	1	●861 6605
	20.1732 RING, OIL, REVERSE PISTON			
57-70	Kit, Rubber Lip type. HYD.	1	●861 6925
	20.1734 SPRING, REVERSE CLUTCH RELEASE			
57-70	Star type. HYD.	1	●861 6222
	20.1737 RING, SNAP, FRONT OIL PUMP SPRAG ASSY. RETAINER			
57-70	HYD.	1	●861 6057
	20.1738 SPRAG ASSY., FRONT OIL PUMP			
57-70	HYD.	1	●861 6208
	20.1739 RACE, FRONT OIL PUMP SPRAG ASSY.			
57-70	Inner. HYD.	1	●861 7448
	20.1740 PUMP, FRONT SERVO UNIT AND OIL PUMP			
57-70	Pump Assy. HYD.	1	●861 6884

	20.1741 SPRING, FEED, FRONT OIL PUMP			
57-70	Feed valve. HYD.		1	●861 6467
	20.1743 GUIDE, FRONT OIL PUMP			
57-70	For feed valve spring. HYD.		1	●861 6465
	20.1744 SPRING, FRONT OIL PUMP PRIMING			
57-70	Kit		1	●861 6928
	20.1747 SPRING, FRONT OIL PUMP COOLER BY-PASS CHECK VALVE			
57-70	HYD.		1	●861 6466
	20.1749 BALL, FRONT OIL PUMP BY-PASS CHECK VALVE			
57-70	(★20.1943) 1/4" dia. HYD.		1	●169 108
	20.1754 RING, OIL SEAL, FRONT PUMP TO FRONT UNIT TORUS COVER			
57-70	HYD.		1	●861 6030
	20.1770 BODY, SERVO AND ACCUMULATOR			
57-70	w/Dowel. HYD.		1	●861 6983
	20.1771 PISTON, ACCUMULATOR			
57-70	HYD.		1	●861 6836
	20.1772 RING OR SEAL ACCUMULATOR PISTON			
57-70	Ring. HYD.		1	●861 6031
	20.1773 COVER, ACCUMULATOR			
57-70	HYD.		1	●861 7893
	20.1774 GASKET, ACCUMULATOR			
57-70	HYD.		1	●861 7894
	20.1775 SPRING, ACCUMULATOR PISTON			
57-70	Outer. HYD.		1	●861 6851
57-70	Trimmer valve. HYD.		1	●861 8050
	20.1776 VALVE ACCUMULATOR TRIMMER			
57-70	HYD.		1	●861 7983
	20.1777 PLUG, ACCUMULATOR			
57-70	Trimmer valve. HYD.		1	●861 6645
57-70	Throttle valve pressure. HYD.		1	●861 7984
	20.1778 PISTON ASSEMBLY, SERVO			
57-70	HYD.		1	●861 6140
	20.1779 RING, SERVO PISTON			
57-70	(★20.1732) HYD.		1	●861 6048
	20.1781 SPRING, SERVO			
57-70	HYD.		1	●861 6156
	20.1791 PISTON, OVERRUN CLUTCH			
57-70	HYD.		1	●861 6896
	20.1792 RING, OIL SEAL, OVERRUN CLUTCH			
57-70	Kit, Rubber Lip type. HYD.		1	●861 6918
	20.1793 PLATE ASSEMBLY, OVERRUN CLUTCH			
57-70	HYD.		1	●861 7447
	20.1794 SPRING, OVERRUN CLUTCH RELEASE			
57-70	HYD.		1	●861 6209

20.1801 PLUG, OIL PRESSURE REGULATOR VALVE

57-70 ..... HYD. ..... 1 ●861 6027

20.1802 GASKET, OIL PRESSURE REGULATOR PLUG

57-70 ..... Rubber. HYD. ..... 1 ●861 1804

20.1805 VALVE, OIL PRESSURE REGULATOR

57-70 ..... HYD. ..... 1 ●861 6202

20.1807 SPRING, OIL PRESSURE REGULATOR

57-70 ..... HYD. ..... 1 ●861 7968

20.1808 PLUG, PRESSURE REGULATOR SPRING

57-70 ..... HYD. ..... 1 ●861 6205

20.1809 PIN, PRESSURE REGULATOR VALVE STOP

57-70 ..... HYD. ..... 1 ●861 6206

20.1811 CLIP, FRONT PUMP INTAKE PIPE

57-70 ..... At oil screen. HYD. ..... 1 ●861 6561

20.1812 PIPE, OIL

57-70 ..... Front oil pump to screen. HYD. ..... 1 ●861 8208
57-70 ..... Rear oil pump to screen. HYD. ..... 1 ●861 7606

20.1813 GASKET OR SEAL, FRONT OR REAR OIL PUMP INTAKE PIPE

57-70 ..... Front pump. Rubber seal. HYD. ..... 1 ●861 6279
57-70 ..... Rear pump. Rubber seal. HYD. ..... 1 ●861 6280

20.1860 BAND, BRAKE, REAR UNIT

57-70 ..... HYD. ..... 1 ●861 6092

20.1870 PUMP, OIL, REAR UNIT, ASSEMBLY

57-70 ..... HYD. ..... 1 ●861 7922

20.1871 GASKET, REAR PUMP TO CASE

57-70 ..... HYD. ..... 1 ●861 6347

20.1882 GEAR, DRIVEN OIL PUMP AND GOVERNOR

57-70 ..... w/Bushing. HYD. ..... 1 ●861 6350

20.1883 GEAR, DRIVE, OIL PUMP AND GOVERNOR

57-70 ..... HYD. ..... 1 ●861 6344

20.1894 KEY, GOVERNOR DRIVE FLANGE

57-70 ..... HYD. ..... 1 ●861 6501

20.1900 GOVERNOR ASSEMBLY, REAR UNIT

57-70 ..... HYD. ..... 1 ●861 6353

20.1905 RING, GOVERNOR SLEEVE OIL SEAL

57-70 ..... 3/32" x 1 3/16". HYD. ..... 4 ●860 9440

20.1912 LEVER ASSEMBLY, PARKING BRAKE

57-70 ..... HYD. ..... 1 ●861 6183

20.1913 BRACKET ASSEMBLY, PARKING BRAKE

57-70 ..... HYD. ..... 1 ●861 7878

20.1914 SPRING, PARKING BRAKE LEVER

57-70 ..... HYD. ..... 1 ●861 7881

20.1920 LINK, PARKING BRAKE

57-70 ..... HYD. ..... 2 ●861 6888

20.1921 PIN, CLEVIS, PARKING BRAKE

57-70 ..... HYD. ..... 3 ●861 6136

20.1922 SPACER, PARKING BRAKE

57-70	HYD.	1	●861 6164
57-70	For bracket. HYD.	1	●861 6185

20.1923 RETAINER, PARKING BRAKE LEVER SPRING

57-70	HYD.	1	●861 6885

20.1929 PIN, PARKING BRAKE ANCHOR

57-70	HYD.	1	●861 6171

20.1930 ANCHOR, REVERSE GEAR AND PARKING BRAKE

57-70	HYD.	1	●861 6143

20.1939 BALL, TRANSITION VALVE CHECK

57-70	In coupling valve body. HYD.	1	●274 147

20.1941 SCREW, CONTROL VALVE TO CASE

57-70	1/4"-20 x 7/8". HYD.	2	●106 320
57-70	1/4"-20 x 2 1/4". HYD.	4	●106 323

20.1945 BODY, CONTROL VALVE ASSEMBLY

57-70	Shift valve body. Cars w/dual carbs., w/Valve, Springs and Plugs. HYD.	1	●861 8929
57-70	Coupling valve body, w/Valve, Springs and Plug. HYD.	1	●861 8909
57-70	Manual valve body. w/Valve, Springs and Plug. HYD.	1	●861 8913
57-70	Reverse blocker body, w/Valve, Springs and Plug. HYD.	1	●861 6903

20.1946 PLATE, VALVE BODY SPACER OR CHANNEL

57-70	Spacer. Channel plate to manual body and case. HYD.	1	●861 8170
57-70	Spacer. Channel plate to shift body, coupling body and reverse blocker body. HYD.	1	●861 8188
57-70	Channel plate. HYD.	1	●861 8224

20.1947 VALVE, MANUAL CONTROL OR BY-PASS

57-70	Manual control. HYD.	1	●861 6258
57-70	By-Pass. HYD.	1	●861 6542
57-70	Regulator type, in shift valve body	1	●861 7913

20.1949 WASHER, CASE TO DETENT PLATE

57-70	HYD.	1	●861 6450

20.1950 LEVER AND SHAFT, MANUAL SHIFT CONTROL

57-70	HYD.	1	●861 6240

20.1955 LEVER, ASSEMBLY, THROTTLE CONTROL

57-70	HYD.	1	861 7585

20.1957 KIT, SEAL AND WASHER, MANUAL AND THROTTLE CONTROL LEVER SHAFTS

57-70	w/Pin. HYD.	1	●861 6907

20.1961 PIN, OIL SEAL ON THROTTLE SHAFT

57-70	1/16" x 1/2", grooved. HYD.	1	●187 381

20.2000 CARRIER, HAND CONTROL SHIFT LEVER

NOTE: See Color chart on page G-4 for paint specifications.

57-70	(★20.2150) w/Tube. In primer, paint with lacquer to match when required. HYD.	1	351 0734

20.2003 PIN, SHIFT LEVER IN CARRIER

57-70	5/16" x 1", HYD.	1	●144 3252

20.2005 RETAINER, SHIFT LEVER PIN

57-70	Chromium	1	●145 7929

20.2007 WASHER, THRUST, SHIFT LEVER CARRIER

57-70 . . . . . .020" thk. HYD. . . . . 1 ●146 4013

20.2035 SPRING, ANTI-RATTLE, UPPER SHIFT LEVER YOKE

57-70 . . . . . 1 ●144 3266

20.2040 SPRING, SHIFT LEVER IN CARRIER

57-70 . . . . . HYD. . . . . 1 ●146 3989

20.2042 SCREW, SHIFT LEVER SPRING TO CARRIER

57-70 . . . . . (★25.0560) Pan, cross recess hd., No. 8-32 x 5/16" HYD. . . . . 2 ●167 028

20.2150 SHAFT, TRANSMISSION SHIFT ON STEERING COLUMN, IN PRIMER

NOTE: See Color chart on page G-4 for paint specifications.

57-70 . . . . . w/Carrier, paint with lacquer to match when required 1 351 0734

20.2155 WASHER, SPRING

57-70 . . . . . (★5.0690) 21/64" I.D. . . . . AR ●402 546

20.2174 HOLDER, TRANSMISSION SHIFT INDICATOR

57-70 . . . . . HYD. . . . . 1 ●146 5931

20.2175 INDICATOR, TRANSMISSION SHIFT

57-70 . . . . . HYD. 1 146 5932

20.2176 SCREW, TRANSMISSION SHIFT INDICATOR

57-70 . . . . . Indicator to holder. Set screw No. 8-32 x 3/16". HYD. . . . . 1 ●192 208

57-70 . . . . . Indicator holder to base. Hex.-hd., No. 10-12 x 5/8". HYD. . . . . 1 ●451 625

20.2188 LEVER, LOWER, TRANSMISSION SHIFT ON STEERING COLUMN

57-70 . . . . . HYD. . . . . 1 ●146 3981

20.2191 SEAL, DUST, STEERING COLUMN JACKET

57-70 . . . . . For lower lever. HYD. . . . . 1 ●146 3969

20.2193 SPACER, LOWER SHIFT LEVERS

57-70 . . . . . Steel bushing. HYD. . . . . 1 ●146 3968

20.2195 SWITCH, SAFETY

57-70 . . . . . Combination safety and backup light 1 199 8170

20.2200 ROD, STEERING COLUMN TO TRANSMISSION

57-70 . . . . . HYD. 1 146 5836

20.2207 LINK, TRANSMISSION SHIFT CONTROL ROD

57-70 . . . . . HYD. . . . . 1 ●146 6939

20.2210 PIN, CONTROL ROD CLEVIS

57-70 . . . . . HYD. . . . . 1 ●146 7169

20.2212 WASHER, ANTI-RATTLE, CLEVIS PIN

57-70 . . . . . (★5.0690) HYD. . . . . AR ●402 547

20.2227 BUSHING IN LOWER SHIFT LEVERS AND ADJUSTABLE EYE

57-70 . . . . . HYD. . . . . 1 ●146 4402

20.2305 CASING, SPEEDOMETER SHAFT

57-70 . . . . . 62 1/2" lg. L.H.D. . . . . 1 ●158 4358

20.2355 CABLE, IN SPEEDOMETER SHAFT

57-70 . . . . . L.H.D. Kit . . . . . 1 ●158 4381

20.2535 SLEEVE, SPEEDOMETER SHAFT

57-70 . . . . . w/Retainer and Seal . . . . . 1 ●351 1127

20.2605 PINION AND SHAFT, DRIVEN, SPEEDOMETER

	PINION AND SHAFT ASSY., PART NO.	IDENTI-FICATION MARKED	NO. OF TEETH	AXLE RATIO	TIRE SIZE	TRANS.
57-70	●351 0649	L-2	21	(3.36 to 1) (Marked 6)	15 x 8.20 8.00	HYD.

No Page 90

SERIES	GROUP NO. & DESCRIPTION	SPECIFICATIONS	NO. USED	PART NO.
	22.0010	WHEEL, ASSEMBLY LESS TIRE		
57-70		Alum., Turbine type, Chromium plated	5	146 6047
	22.0065	BEARING ASSEMBLY, FRONT WHEEL		
57-70		Outer. Includes Cone, Cup and Retainer	2	●909 025
57-70		Inner. Includes Cone, Cup and Retainer	2	●909 072
	22.0070	CUP, FRONT WHEEL BEARING		
57-70		Outer	2	●909 625
57-70		Inner	2	●909 662
	22.0080	CONE, FRONT WHEEL BEARING		
57-70		Outer	2	●909 525
57-70		Inner	2	●909 572
	22.0090	RETAINER, FRONT WHEEL BEARING, W/BALLS		
57-70		Outer	2	●909 725
57-70		Inner	2	●909 762
	22.0126	PACKING, FRONT WHEEL INNER BEARING, W/RETAINER		
57-70			2	●146 4727
	22.0132	WASHER, FRONT WHEEL, SAFETY		
57-70		(★1.0173)	2	●145 7981
	22.0135	NUT, FRONT WHEEL BEARING		
57-70		RH, 3/4"-20 (★1.0171)	1	●378 137
57-70		LH, 3/4"-20 (★1.0171)	1	●410 901
	22.0155	CAP, GREASE, IN FRONT HUB		
57-70			2	●408 374
	22.0240	BEARING, REAR WHEEL		
57-70		w/Seals	2	●351 0773
	22.0245	SEAL, REAR WHEEL BEARING		
57-70		Rubber "O" Ring	2	●146 6050
	22.0250	RETAINER, REAR WHEEL BEARING		
57-70			2	●146 7958
57-70		(★4.0132) w/static Collector	2	●351 0732
	22.0395	SCREW OR BOLT, MOUNTING FRONT AND REAR WHEELS		
57-70		RH, front. In brake drum, RH thd.	5	●146 2678
57-70		LH, front. In brake drum, LH thd.	5	●146 3257
57-70		RH, rear. In axle shaft, RH thd.	5	●145 7252
57-70		LH, rear. In axle shaft, LH thd.	5	●146 3357
	22.0397	NUT, WHEEL TO HUB		
57-70		Front, RH thd.	5	●405 984
57-70		Rear, RH thd.	5	●405 984
57-70		Front, LH thd.	5	●146 3254
57-70		Rear, LH thd.	5	●146 3254
	22.0515	CAP, HUB, TURBINE TYPE WHEELS		
57-70		For Turbine type wheel	4	146 6608
	22.0540	MEDALLION, HUB CAP		
57-70		For wheel disc or hub cap	4	●146 6601
	22.0550	RETAINER, WHEEL DISC MEDALLION		
57-70			4	●146 6606

22.0585 TIRE VALVE ASSY., TUBELESS TIRES

57-70			5	●273 889

22.0665 WEIGHT, WHEEL BALANCE

57-70	1/2 oz.		AR	●145 9943
57-70	1 oz.		AR	●145 9942
57-70	1 1/2 oz.		AR	●145 9941
57-70	2 oz.		AR	●145 9940
57-70	2 1/2 oz.		AR	●145 9939
57-70	3 oz.		AR	●145 9938

22.2310 ROD, REAR UPRIGHT SPARE WHEEL CARRIER

57-70			1	146 8031

22.2314 PIN, CLEVIS, ROD TO BRACKET

57-70	(★25.0120)		1	●138 083

22.2324 NUT ON ROD

57-70	1/2"-13 Wing nut		1	146 8032

25.0035 FUSES, ELECTRICAL

57-70

PART NO.	AMP.	LENGTH	POSITIONS USED
•147 683	6	3/4"	Air springs, turn signal
•147 684	9	7/8"	Antenna, back-up lights, inst. cluster
•455 844	25		Air cond., body feed
•106 653	20	1 1/4"	Heater
•455 640	7 1/2	7/8"	Radio

25.0040 LAMP BULB CHART

POSITION ON CAR	SERIES	QUAN.	PART NO.	BULB NO.	C.P.	VOLTS	CONTACT	TYPE OF BASE
Air Cond.	57-70	1	•273 157	57	2	12-16	Single	Bay
Air Spring Signal	57-70	1	•273 157	57	2	12-16	Single	Bay
Arm Rest Lighter Rear Door	57-70	2	•131 282	53	1	12-16	Single	Min. Bay
Ash Tray	57-70	1	•131 282	53	1	12-16	Single	Min. Bay
Back-Up Lamp	57-70	2	•454 646	1073	32	12-16	Single	Bay
Beam Indicator (Headlamp)	57-70	2	•131 282	57	2	12-16	Single	Bay
Clock-Inst. Panel	57-70	2	•273 157	57	2	12-16	Single	Bay
Cluster-Inst. Panel	57-70	4	•273 157	57	2	12-16	Single	Bay
Deck Lid Indicator	57-70	1	•273 157	57	2	12-16	Single	Bay
Emergency Brake Tell Tale	57-70	1	•273 157	57	2	12-16	Single	Bay
Fog Lamp	57-70	2	•455 902	1044	35W-32	12-16	Double	Prefocused
Fuel-Low Indicator	57-70	1	•273 157	57	2	12-16	Single	Bay
Generator Tell Tale	57-70	1	•273 157	57	2	12-16	Single	Bay
Glove Box	57-70	2	•273 157	57	2	12-16	Single	Bay
Heater Control	57-70	1	•273 157	57	2	12-16	Single	Bay
Hydra-Matic Shift Indicator	57-70	1	•273 157	57	2	12-16	Single	Bay
Ignition Lock, Cigar Lighter and Radio Pilot Light	57-70	3	•131 282	53	1	12-16	Single	Min. Bay
License Plate Lamp	57-70	2	•142 450	67	3	12-16	Single	Bay
Light Switch-On Inst. Panel	57-70	1	•131 282	53	1	12-16	Single	Min. Bay
Map and Courtesy	57-70	2	•142 453	90	6	12-16	Double	Bay
Oil Tell Tale	57-70	1	•273 157	57	2	12-16	Single	Bay
Parking Lamp, Front	57-70	2	•142 450	67	3	12-16	Single	Bay
Radio Dial	57-70	1 1	•273 157 •456 985	57 1891	2 2	12-16 12-16	Single Single	Bay Min. Bay
Radio Pilot Lamp	57-70	1	•274 020	1892				
Rear Lamp	57-70	4	•454 645	1034	32-4	12-16	Double	Bay
Side Roof Rail Lamp	57-70	4	•455 136	1004	15	12-16	Double	Bay
Temperature	57-70	1	•273 157	57	2	12-16	Single	Bay
Trunk Compt. Light	57-70	1	455 490	1003	15	12-16	Single	Bay
Turn Signal Indicator	57-70	2	•273 157	57	2	12-16	Single	Bay

25.0045 SPARK PLUGS

	TYPE	THREAD	PART NO.
57-70	44	14 M.M.	•155 9492
57-70	43 (optional)	14 M.M.	•556 9857

25.0046 GASKET, SPARK PLUG

	UNIT PKG.	PART NO.
Use with 14 M.M. spark plugs	100	•155 5475

25.0052 TUMBLER, UNIT, LOCK CYLINDER

		UNIT PKG.	PART NO.
57-70	"C", unit contains 72 pieces		•601 256
57-70	"N", unit contains 72 pieces		•601 257
57-70	"B", unit contains 72 pieces		•601 258
57-70	"Y", unit contains 72 pieces		•601 259

25.0053 SPRING, UNIT, LOCK TUMBLER

		UNIT PKG.	PART NO.
57-70	Unit contains 1 gross		•601 260

25.0054 RETAINER UNIT, TUMBLER SPRING

		UNIT PKG.	PART NO.
57-70	Unit contains 1 dozen		•601 261

25.0055 KEY BLANKS

		UNIT PKG.	PART NO.
57-70	Hex. head	36	•369 4624
57-70	Round head	36	•700 2238

25.0057 CODED KEYS

NOTE: Lock numbers must be specified when ordering coded keys.

		PART NO.
57-70	8000 to 9499, hex. head	•700 2202
57-70	8000 to 9499, round head	•700 2232

25.0080 NUTS, HEXAGON

PART NO.	UNIT PKG.	BOLT SIZE	THICKNESS	MATERIAL	FINISH
•120 622	25	No. 8-32	1/8"	Steel	Cadmium or zinc
•120 361	100	No. 10-24	1/8"	Steel	Cadmium or zinc
•121 743	50	No. 12-24	3/16"	Steel	Cadmium or zinc
•120 375	25	1/4"-20	7/32"	Steel	Cadmium or zinc
•120 367	50	1/4"-28	7/32"	Steel	Cadmium or zinc
•120 376	25	5/16"-18	17/64"	Steel	Cadmium or zinc
•120 368	50	5/16"-24	17/64"	Steel	Cadmium or zinc
•214 440		5/16"-24	17/64"	301M Steel	Plain
•120 377	25	3/8"-16	21/64"	Steel	Cadmium or zinc
•120 369	30	3/8"-24	21/64"	Steel	Cadmium or zinc
•125 913	30	3/8"-24	13/32"	Steel	Cadmium or zinc
•124 573	25	7/16"-14	3/8"	Steel	Cadmium or zinc
•124 934	10	1/2"-20	5/16"	Steel	Cadmium or zinc
•225 857		1/2"-20	7/16"	300M Steel	Cadmium or zinc
•120 371	10	1/2"-20	7/16"	286M Steel	Cadmium or zinc
•106 638	25	1/2"-20	9/16"	Steel	Cadmium or zinc
•124 634	10	9/16"-18	31/64"	Steel	Cadmium or zinc
•121 358		5/8"-18	35/64"	Steel	Cadmium or zinc

25.0086 NUTS, HEXAGON, SLOTTED

PART NO.	UNIT PKG.	BOLT SIZE	THICKNESS	MATERIAL	FINISH
•125 250		1/2"-20	7/16"	Steel	Cadmium or zinc
•125 267		5/8"-18	35/64"	Steel	Cadmium or zinc
•125 258		9/16"-18	31/64"	288M Steel	Cadmium or zinc

25.0088 NUTS, HEXAGON, SELF-LOCKING

PART NO.	UNIT PKG.	BOLT SIZE	THICKNESS	MATERIAL	FINISH
•126 002		5/16"-24	17/64"	Steel	Cadmium or zinc
•131 250		7/8"-14	49/64"	Steel	Plain

25.0120 PIN, CLEVIS

(NOTE - See illustration in Master Parts List for specifications)

PART NO.	UNIT PKG.	A	B
•138 083		1/4"	43/64"
•121 741		5/16"	13/16"

25.0180 PLUGS, EXPANSION

(NOTE - See illustration in Master Parts List for specifications)

PART NO.	UNIT PKG.	A	B
•106 517	10	1 1/8"	.083"

25.0200 PLUGS, PIPE

PART NO.	UNIT PKG.	TYPE OF PLUG	THREAD SIZE
•444 866		Headless, hexagon hole	3/8"-18 dryseal

25.0205 UNION NUT, FLARED TUBE (MALE)

(NOTE - See illustration in Master Parts List for specifications)

PART NO.	UNIT PKG.					MATERIAL
•137 397		1/4"	7/16"-24	7/16"	33/64"	Steel
•137 398		5/16"	1/2"-20	1/2"	39/64"	Steel
•137 399		3/8"	5/16"-18	5/8"	25/32"	Steel

25.0210 CONNECTOR, INVERTED FLARED TUBE

(NOTE - See illustration in Master Parts List for specifications)

PART NO.	UNIT PKG.	TUBE SIZE	A	B	C	D	E
•137 405		1/4"	7/32"	7/16"-24	1/2"	43/64"	1/8" taper

25.0215 ELBOW, INVERTED FLARED TUBE (90°)

(NOTE - See illustration in Master Parts List for specifications)

PART NO.	UNIT PKG.	TUBE SIZE	B	C	D	E	F	G
940 9931			1/8" taper	9/16"	3/4"	1/8" taper	7/32"	7/32"

25.0380 LOCKWASHERS, REGULAR

(NOTE - See illustration in Master Parts List for specifications)

PART NO.	UNIT PKG.	BOLT SIZE	A	B	THICK	FINISH
•120 217	100	No. 10	.200"	.3250"	3/64"	Cadmium or zinc
•121 744	100	No. 12	.221"	.380"	1/16"	Cadmium or zinc
•187 241	100	1/4"	.255"	.493"	5/64"	Cadmium or zinc
•187 119	100	5/16"	11/32"	19/32"	1/16"	Cadmium or zinc
120 638		5/16"	.319	.601	.097	Cadmium or zinc
120 381		3/8"	.382	.678	.070	Cadmium or zinc
•187 123	100	3/8"	25/64"	21/32"	3/32"	Cadmium or zinc
•187 128	100	7/16"	15/32"	25/32"	1/8"	Cadmium or zinc
•187 130	50	1/2"	17/32"	7/8"	5/32"	Cadmium or zinc
•187 133	50	9/16"	19/32"	31/32"	1/8"	Cadmium or zinc

25.0385 LOCK WASHERS, INTERNAL SHAKEPROOF

PART NO.	UNIT PKG.	BOLT SIZE	FINISH
•120 423	50	1/4"	Cadmium or zinc

25.0387 LOCK WASHERS, EXTERNAL SHAKEPROOF

PART NO.	UNIT PKG.	BOLT SIZE	FINISH
•121 753	100	1/4"	Cadmium
•138 485	10	5/16"	Cadmium
•138 473		No. 6	Cadmium or zinc

25.0400 FLAT WASHERS

(NOTE - See illustration in Master Parts List for specifications)

PART NO.	UNIT PKG.	A	B	C	MATERIAL	FINISH
•120 391	20	7/32"	1/2"	1/16"	Steel	Cadmium or zinc
•120 392	20	9/32"	5/8"	1/16"	Steel	Cadmium or zinc
• 76 008		9/32"	1"	1/16"	Steel	Plain
• 52 232	10	21/64"	1 1/2"	3/32"	Steel	Cadmium or zinc
•120 393	20	11/32"	11/16"	1/16"	Steel	Cadmium or zinc
• 59 281		11/32"	15/16"	1/16"	Steel	Cadmium or zinc
•881 129		13/32"	7/8"	1/8"	Steel	Plain
•120 394	20	13/32"	13/16"	1/16"	Steel	Cadmium or zinc
•120 395	20	15/32"	15/16"	1/16"	Steel	Cadmium or zinc
•120 396	20	17/32"	1 1/16	3/32"	Steel	Parkerized

25.0500 SCREWS, HEXAGON HEAD (COMMON HEAD - COMMON END)

PART NO.	UNIT PKG.	THREAD	LENGTH	TYPE OF MATERIAL	FINISH
•120 706	10	1/4"-20	1/2"	260M-Steel	Cadmium or zinc
•120 854	20	1/4"-20	5/8"	260M-Steel	Cadmium or zinc
•121 887	25	1/4"-20	3/4"	260M-Steel	Cadmium or zinc
•121 893		1/4"-20	7/8"	260M-Steel	Cadmium or zinc
121 906		1/4"-20	1 1/8"	260M-Steel	Cadmium or zinc
•123 467		1/4"-28	1 1/8"	260M-Steel	Cadmium or zinc
124 058		1/4"-28	2 1/4"	260M-Steel	Cadmium or zinc
124 064		1/4"-28	2 1/2"	260M-Steel	Cadmium or zinc
220 594		1/4"-28	3 1/2"	260M-Steel	Cadmium or zinc
•120 834	10	5/16"-18	1/2"	260M-Steel	Cadmium or zinc
•121 986	20	5/16"-18	9/16"	260M-Steel	Cadmium or zinc
•120 228	25	5/16"-18	5/8"	260M-Steel	Cadmium or zinc
•122 007	25	5/16"-18	3/4"	260M-Steel	Cadmium or zinc
•120 229	25	5/16"-18	7/8"	260M-Steel	Cadmium or zinc
•142 2921	10	5/16"-18	1 1/8"	260M-Steel	Cadmium or zinc
•122 077		5/16"-18	2 1/4"	260M-Steel	Cadmium or zinc
•273 916		5/16"-18	2 3/8"	300M-Steel	Cadmium or zinc
•273 917		5/16"-18	3 1/8"	300M-Steel	Cadmium or zinc
•123 350		5/16"-24	1/2"	260M-Steel	Cadmium or zinc
•120 741	10	5/16"-24	3/4"	260M-Steel	Cadmium or zinc
•186 616	10	5/16"-24	1"	290M-Steel	Cadmium or zinc
•186 634		5/16"-24	1"	300M-Steel	Cadmium or zinc
•123 774	25	5/16"-24	1 1/4"	260M-Steel	Cadmium or zinc
•124 100		5/16"-24	2 3/4"	260M-Steel	Cadmium or zinc
•122 119	10	3/8"-16	3/4"	260M-Steel	Cadmium or zinc
•122 126	10	3/8"-16	7/8"	260M-Steel	Cadmium or zinc
•120 233	10	3/8"-16	1"	260M-Steel	Cadmium or zinc
•179 841		3/8"-16	1 1/4"	280M-Steel	Plain
•180 126		3/8"-16	1 1/2"	280M-Steel	Cadmium or zinc
•179 844		3/8"-16	1 5/8"	280M-Steel	Plain
•179 848		3/8"-16	2 1/4"	280M-Steel	Plain
•122 194		3/8"-16	2 1/2"	260M-Steel	Cadmium or zinc
•122 201		3/8"-16	2 3/4"	260M-Steel	Cadmium or zinc
•186 282		3/8"-16	3 1/4"	280M-Steel	Plain
•181 636	20	3/8"-24	7/8"	280M-Steel	Cadmium or zinc
454 921		3/8"-24	7/8"	300M-Steel	Cadmium or zinc
•181 637	20	3/8"-24	1"	280M-Steel	Cadmium or zinc
•454 922		3/8"-24	1"	300M-Steel	Cadmium or zinc
•193 223		3/8"-24	1 1/8"	300M-Steel	Cadmium or zinc
•181 639	15	3/8"-24	1 1/4"	280M-Steel	Plain
•181 641		3/8"-24	1 3/8"	280M-Steel	Cadmium or zinc
•120 677		3/8"-24	1 1/2"	260M-Steel	Cadmium or zinc
•120 668	10	3/8"-24	1 3/4"	260M-Steel	Cadmium or zinc
•120 669		3/8"-24	2 3/4"	260M-Steel	Cadmium or zinc

PART NO.	UNIT PKG.	THREAD	LENGTH	TYPE OF MATERIAL	FINISH
•180 145	10	7/16"-14	1"	280M-Steel	Cadmium or zinc
•122 267	10	7/16"-14	1 1/4"	260M-Steel	Cadmium or zinc
•180 153	5	7/16"-14	2"	280M-Steel	Cadmium or zinc
•180 162		7/16"-14	3 1/2"	280M-Steel	Cadmium or zinc
•181 666		7/16"-20	1"	280M-Steel	Cadmium or zinc
•181 672		7/16"-20	1 3/4"	280M-Steel	Cadmium or zinc
•181 696		1/2"-20	1"	280M-Steel	Cadmium or zinc
•181 698		1/2"-20	1 1/4"	280M-Steel	Cadmium or zinc
•181 700		1/2"-20	1 1/2"	280M-Steel	Cadmium or zinc
•181 701		1/2"-20	1 5/8"	280M-Steel	Cadmium or zinc
•181 702		1/2"-20	1 3/4"	280M-Steel	Cadmium or zinc
•455 029		1/2"-20	2 1/2"	300M-Steel	Cadmium or zinc
•181 732		9/16"-18	2 1/4"	280M-Steel	Cadmium or zinc

25.0510 SCREWS, FLAT HEAD (COMMON END)

PART NO.	UNIT PKG.	THREAD	LENGTH	MATERIAL	FINISH
•120 697		1/4"-20	3/4"	Steel	Cadmium or zinc

25.0530 SCREWS, ROUND HEAD (COMMON END)

PART NO.	UNIT PKG.	THREAD	LENGTH	MATERIAL	FINISH
•120 583		1/4"-20	5/8"	Steel	Cadmium or zinc
•155 388		1/4"-20	2 1/2"	Steel (cross recessed)	Cadmium or zinc
•132 911		No. 10-32	5/8"	Steel	Cadmium or zinc

25.0535 SCREWS, ROUND, CROSS RECESSED HEAD, WITH LOCK WASHER

PART NO.	UNIT PKG.	THREAD	LENGTH	MATERIAL	FINISH
•155 118		No. 10-24	5/8"	Steel	Cadmium or zinc
•155 348		1/4"-20	3/4"	Steel	Cadmium or zinc

25.0560 SCREW, SHEET METAL (TAPPING, TYPE A)

PART NO.	UNIT PKG.	THREAD	LENGTH	HEAD
•161 565		No. 5-20	1/2"	Round (cross recessed)
•162 289		No. 6-18	1/2"	Oval (cross recessed)
•161 860		No. 8-15	1/2"	Pan
•161 867		No. 8-15	1/2"	Pan (cross recessed)
•161 872		No. 8-15	3/4"	Pan (cross recessed)
•161 874		No. 8-15	7/8"	Pan (cross recessed)
•178 781	10	No. 10	3/8"	Hex.
•161 892		No. 10-12	3/8"	Pan (cross recessed)
•161 651	10	No. 10	3/4"	Binding (cross recessed)
•455 524		No. 10-12	1/2"	Truss (cross recessed)
•161 648		No. 10-12	5/8"	Round (cross recessed)
•161 475		No. 12-11	7/8"	Flat (cross recessed)
•161 681		No. 12-11	7/8"	Round (cross recessed)
•162 510		No. 12-11	1"	Oval (cross recessed)
•162 050		No. 14	1/2"	Pan (cross recessed)
•162 074		No. 14-10	5/8"	Pan (cross recessed)

25.0560 SCREW, SHEET METAL (TAPPING, TYPE B)

PART NO.	UNIT PKG.	THREAD	LENGTH	HEAD
•178 812		No. 6	1/4"	Pan
•162 903		No. 10-16	1/2"	Round (cross recessed)
•163 303		1/4"-14	1/2"	Pan (cross recessed)

25.0560 SCREW, SHEET METAL (TAPPING, TYPE C,D,F, OR G)

PART NO.	UNIT PKG.	THREAD	LENGTH	HEAD	TYPE
•166 991		No. 6-32	3/8"	Pan (cross recessed)	D
•167 008		No. 6-32	3/4"	Pan (cross recessed)	D
•167 028		No. 8-32	5/16"	Pan	D
164 354		No. 8-32	3/8"	Pan (cross recessed)	D
•164 021		No. 8-32	7/16"	Round (cross recessed)	C
•166 689		No. 10-32	1/2"	Pan	D
•172 380		No. 10-32	5/8"	Hex.	D
•172 433		1/4"-20	7/8"	Hex.	D
•166 781		1/4"-20	1/2"	Round (cross recessed)	D
•172 429		1/4"-20	5/8"	Hex.	D
•448 447		1/4"-20	5/8"	Hex.	F
•172 431		1/4"-20	3/4"	Hex.	D
•172 487		3/8"-16	1"	Hex.	D
172 493		3/8"-24	3/4"	Hex.	D

25.0562 SCREW, MACHINE (BINDING, PAN OR TRUSS HEAD)

PART NO.	UNIT PKG.	THREAD	LENGTH	HEAD	FINISH
•159 612		No. 8-32	5/8"	Pan (cross recessed)	Cadmium or zinc
•456 334		No. 10-24	1/2"	Pan (cross recessed) w/lock washer	Cadmium or zinc
•157 716		1/4"-20	1/2"	Truss (cross recessed)	Cadmium or zinc
•160 536		1/4"-20	5/8"	Pan (cross recessed-common end)	Cadmium or zinc
•273 716		1/4"-20	3/4"	Pan (cone point)	Stainless Steel
•439 448		1/4"-28	7/8"	Pan (cross recessed)	Cadmium or zinc

25.0570 BOLTS, CARRIAGE (COMMON)

PART NO.	UNIT PKG.	THREAD	LENGTH	MATERIAL	FINISH
•455 980		3/8"-16	1"	Steel	Cadmium or zinc
•120 915		3/8"-24	1"	Steel	Cadmium or zinc

SERIES	GROUP NO. & DESCRIPTION	SPECIFICATIONS	NO. USED	PART NO.
	31.0030	**DOOR ASSEMBLY, FRONT, LESS HARDWARE, GLASS & TRIM IN PRIMER**		
57-70		RH	1	471 2283
57-70		LH	1	471 2284
	31.0040	**DOOR ASSEMBLY, REAR, LESS HARDWARE, GLASS & TRIM IN PRIMER**		
57-70		RH	1	471 2285
57-70		LH	1	471 2286
	31.0350	**PANEL, OUTER, FRONT DOOR, IN PRIMER**		
57-70		RH	1	468 9321
57-70		LH	1	468 9322
	31.0360	**PANEL, OUTER, REAR DOOR, IN PRIMER**		
57-70		RH	1	468 9325
57-70		LH	1	468 9326
	31.0580	**MOLDING, DOOR, TRIM, EXTERIOR**		
57-70		RH. On rear door, above stone guard w/Studs. Less louvers	1	468 9078
57-70		LH. On rear door, above stone guard w/Studs. Less louvers	1	468 9079
57-70		RH. Upper. On front door, fender extension	1	468 9001
57-70		LH. Upper. On front door, fender extension	1	468 9002
57-70		RH. Shield on rear door	1	468 9087
57-70		LH. Shield on rear door	1	468 9088
57-70		Louvers, w/Studs	10	468 9939
57-70		RH. Front door, lower	1	471 3843
57-70		LH. Front door, lower	1	471 3844
	31.0590	**CLIP, DOOR TRIM EXTERIOR MOLDING**		
57-70		Front door lower molding	10	471 3908
	31.0596	**NUT, DOOR TRIM MOLDING STUD FASTENER**		
57-70		(★35.1569) All doors	28	●464 4959
57-70		Rear door, louvers	10	470 2201
	31.0597	**WASHER, DOOR TRIM MOLDING SCREW**		
57-70		Rear door fender shield, cup washer	14	431 534
57-70		(★54.5513) Rear door fender shield, sealing	10	●461 1268
	31.0600	**MOLDING, REVEAL, FRONT DOOR WINDOW OPENING, ON OUTSIDE OF DOOR**		
57-70		RH. Lower w/Weatherstrip	1	468 8260
57-70		LH. Lower w/Weatherstrip	1	468 8261
	31.0610	**MOLDING, REVEAL, REAR DOOR WINDOW OPENING, ON OUTSIDE OF DOOR**		
57-70		RH. Lower, w/Weatherstrip	1	468 8262
57-70		LH. Lower, w/Weatherstrip	1	468 8263
	31.0621	**SCREW, REVEAL MOLDING TO DOOR**		
57-70		(★25.0560) No. 8-15 x 3/8" flat hd. tapping screw	22	●441 317
	31.0700	**HINGE ASSEMBLY, FRONT DOOR**		
57-70		RH. Lower	1	470 1096
57-70		LH. Lower	1	470 1097
57-70		RH. Upper	1	470 1094
57-70		LH. Upper	1	470 1095
	31.0710	**HINGE ASSEMBLY, REAR DOOR**		
57-70		RH. Upper	1	469 8625

57-70	LH. Upper	1	469 8626
57-70	RH. Lower	1	468 8317
57-70	LH. Lower	1	468 8318

31.0725 ROD, DOOR HINGE TORQUE CONNECTING

57-70	Rear door	2	470 1352

31.0780 SCREW, DOOR HINGE

57-70	Front door, upper. Hinge to body	4	●471 0531
57-70	Rear door, hinge to door	12	471 4801
57-70	Rear doors, hinge to pillar	12	469 3959
57-70	Front doors, lower hinge to shroud	2	469 3959
57-70	All doors, hinge to body	22	471 4804
57-70	All doors, hinge to door	AR	471 4828

31.0785 NUT, DOOR HINGE SCREW

57-70	All doors, hinge to body	26	●456 3736

31.0940 GLASS ONLY, FRONT DOOR WINDOW

57-70	EZ Eye	2	468 8249

31.0950 GLASS ONLY, REAR DOOR WINDOW

57-70	EZ Eye	2	468 8316

31.0962 PLATE, WEDGE, REAR DOOR WINDOW

57-70	RH. Male	1	468 9347
57-70	LH. Male	1	468 9348
57-70	RH. Female	1	468 9349
57-70	LH. Female	1	468 9350

31.0964 STOP, DOOR WINDOW SASH CHANNEL

57-70	Rear door, lower front	2	423 2501
57-70	Front door, lower	4	469 0507
57-70	Rear door, lower	2	469 0508

31.0965 BUMPER, DOOR WINDOW STOP

57-70	Lower. On support	4	●460 9684
57-70	On adj. plate screw	6	●409 9476

31.0966 SUPPORT, DOOR WINDOW STOP BUMPER

57-70	Front doors	2	468 8985
57-70	Rear doors	2	471 3312

31.0970 CHANNEL, SASH, FRONT DOOR WINDOW GLASS

57-70	RH. Upper	1	423 2570
57-70	LH. Upper	1	423 2571
57-70	RH. Lower & rear	1	423 2574
57-70	LH. Lower & rear	1	423 2575

31.0980 CHANNEL, SASH, REAR DOOR WINDOW GLASS

57-70	RH. Upper	1	423 2492
57-70	LH. Upper	1	423 2493
57-70	RH. Lower and front	1	423 2496
57-70	LH. Lower and front	1	423 2497

31.0981 WEATHERSTRIP, REAR DOOR SASH CHANNEL

57-70	RH. Front	1	423 2840
57-70	LH. Front	1	423 2841

31.0984 BRACE, GUIDE, DOOR WINDOW

57-70	RH. Rear doors. Front to rear guide	1	471 3215
57-70	LH. Rear doors. Front to rear guide	1	471 3216
57-70	Front doors, front to rear guide	2	468 8763

31.0985 GUIDE, DOOR WINDOW

57-70	RH. Front, on front door	1	468 9059
57-70	LH. Front, on front door	1	468 9060

57-70	Center, on front and rear doors	4	468 8883
57-70	RH. Rear, on rear door	1	468 9192
57-70	LH. Rear, on rear door	1	468 9193
57-70	RH. Rear, on front door	1	471 3897
57-70	LH. Rear, on front door	1	471 3898
57-70	RH. Front, on rear door	1	471 3289
57-70	LH. Front, on rear door	1	471 3290

31.0987 BOLT OR STUD, GUIDE, DOOR WINDOW

57-70	Stud, rear door, front and rear guide	8	457 8800
57-70	Front door, to inner panel, upper	2	467 6841
57-70	Front door, front to inner panel, lower	2	468 8981
57-70	Rear door, brace to inner panel	4	468 8981
57-70	To lower sash channel. Square shoulder	4	●468 9522

31.0988 SHOE, DOOR WINDOW CENTER GUIDE

57-70	Rear door	2	469 5750
57-70	Front door	2	467 0263

31.0990 CAM, FRONT DOOR WINDOW REGULATOR

57-70	Front. On sash channel	2	468 8314
57-70	Rear. On sash channel	2	468 8313
57-70	On inner panel	2	468 8310

31.0995 CAM, REAR DOOR WINDOW REGULATOR

57-70	RH. On inner panel	1	468 8311
57-70	LH. On inner panel	1	468 8312
57-70	RH. (★31.0990) On sash channel	1	468 8313
57-70	LH. (★31.0990) On sash channel	1	468 8314

31.1100 CHANNEL, GLASS RUN, FRONT DOOR WINDOW

57-70	RH. w/Weatherstrip, division front sash channel an integral part	1	423 2578
57-70	LH. w/Weatherstrip, division front sash channel an integral part	1	423 2579
57-70	RH. Rear	1	471 3297
57-70	LH. Rear	1	471 3298

31.1140 CHANNEL, GLASS RUN, REAR DOOR WINDOW

57-70	RH. Rear side	1	471 3300
57-70	LH. Rear side	1	471 3301

31.1145 SCREW, DOOR WINDOW GLASS RUN CHANNEL

57-70	To inner panel, upper. No. 10-24 x 11/32", chromium	4	●463 1280
57-70	(★31.0052) To inner panel, lower	4	●466 8216

31.1155 SUPPORT, DOOR WINDOW GUIDE CHANNEL

57-70	Front door, rear	2	471 4005

31.1160 WEATHERSTRIP, DOOR WINDOW GLASS, REAR CHANNEL

57-70	RH. Front door on sash channel, rear	1	469 5322
57-70	LH. Front door on sash channel, rear	1	469 5323

31.1230 WEATHERSTRIP, WINDOW SASH CHANNEL, ON DOOR PANEL OR REVEAL MOLDING

57-70	(★35.2790) Furnished in 10 ft. lengths	AR	●409 8697 ft.
57-70	RH. Rear door, inner glass run	1	468 8464
57-70	LH. Rear door, inner glass run	1	468 8465
57-70	RH. Rear door, on outer panel	1	423 2222
57-70	LH. Rear door, on outer panel	1	423 2223
57-70	Front door, on reveal mldg.	2	423 2218

31.1400 REGULATOR, FRONT DOOR WINDOW

57-70	RH. Electric, less motor	1	423 2150
57-70	LH. Electric, less motor	1	423 2151

31.1410 REGULATOR, REAR DOOR WINDOW

57-70	RH. Electric, less motor	1	423 2134
57-70	LH. Electric, less motor	1	423 2135

31.1416 KIT, WINDOW REGULATOR MOTOR REPAIR

57-70	Consists of 12 tooth gear, pinion, rubber sealing gear cover (an integral part of gear) tube of lubricant and instruction sheet	4	•490 0085

31.1417 MOTOR, DOOR WINDOW REGULATOR, ELECTRIC

57-70	LH front and RH rear door	2	504 7976
57-70	RH front and LH rear door	2	504 7977

31.1419 CONNECTOR, REGULATOR MOTOR WIRE

57-70	(★7.5850) Plastic sleeve, to harness	AR	•529 5456

31.1421 PLATE, MOUNTING, DOOR WINDOW REGULATOR MOTOR

57-70	(★37.0787) w/Bushing	2	•415 4670

31.1500 SWITCH, OPERATING, DOOR WINDOW OR VENTILATOR (ELECTRIC)

57-70	On LH front door (4 buttons) for door windows	1	468 9039
57-70	Rear doors (1 button) for door windows	2	468 8896
57-70	RH front door (2 buttons) window and ventilator	1	468 8891
57-70	LH front door ventilator (2 buttons)	1	468 8890

31.1510 PLATE, ESCUTCHEON, DOOR WINDOW OPERATING SWITCH

57-70	On RH front door	1	468 9065
57-70	On LH front door	1	468 9342
57-70	On rear doors	2	468 9209

31.1512 COVER, DOOR WINDOW SWITCH ESCUTCHEON

57-70	LH front door. Chromium, w/spring Clip	1	469 5531
57-70	Rear doors. Chromium, w/spring Clip	1	469 5532
57-70	RH front door. Chromium, w/spring Clip	1	469 5533

31.1515 CLIP, SWITCH TO ESCUTCHEON PLATE

57-70		20	•415 4886

31.1570 RELAY, CIRCUIT BREAKER, DOOR LOCK

57-70	On floor	1	111 6936

31.1600 LOCK ASSEMBLY, FRONT DOOR

57-70	RH	1	471 3185
57-70	LH	1	471 3186

31.1610 LOCK ASSEMBLY, REAR DOOR

57-70	RH	1	471 3775
57-70	LH	1	471 3776

31.1620 SCREW, LOCK TO DOOR FACING

57-70	To door panel	12	•467 1989

31.1630 SPRING, DOOR LOCK

57-70	RH front door, LH rear door, bellcrank over center	2	•415 8734
57-70	LH front door, RH rear door, bellcrank overcenter	2	•415 8735
57-70	RH front door, LH rear door, multiplier lever	2	423 7120
57-70	LH front door, RH rear door, multiplier lever	2	423 7121
57-70	Handle connecting lever	4	423 7123

31.1660 SOLENOID, FRONT & REAR DOOR ELECTRIC LOCKS

57-70	Rear door, on remote control	2	111 9918
57-70	RH front door, LH rear door. On lock	2	111 9944
57-70	LH front door, RH rear door. On lock	2	111 9945

31.1670 SWITCH, FRONT & REAR DOOR ELECTRIC LOCKS

57-70	Rear doors	2		423 6622

31.1700 PLATE, STRIKER, DOOR LOCK

57-70	RH front door, LH rear door	2		471 3187
57-70	LH front door, RH rear door	2		471 3188

31.1710 SPACER, DOOR LOCK STRIKER PLATE

57-70	RH front door, LH rear door. .04" thick	AR		471 3741
57-70	LH front door, RH rear door. .04" thick	AR		471 3742
57-70	RH front door, LH rear door. .06" thick	AR		471 3739
57-70	LH front door, RH rear door. .06" thick	AR		471 3740

31.1712 SEALING STRIP, ROCKER PANEL, AT LOCK

57-70	Rubber	4		469 8760

31.1730 SCREW, DOOR LOCK STRIKER PLATE

57-70		12		468 8526

31.1755 ROD, DOOR HANDLE LOCKING

57-70	RH. 16" long. Front door lock cylinder to control	1		471 3195
57-70	LH. 16" long. Front door lock cylinder to control	1		471 3196
57-70	RH. 13 1/2" long. Front door handle to remote control	1		471 3191
57-70	LH. 13 1/2" long. Front door handle to remote control	1		471 3192
57-70	RH. 14" long. Rear door handle to control	1		471 3193
57-70	LH. 14" long. Rear door handle to control	1		471 3194

31.1800 LINK, FRONT DOOR LOCK TO REMOTE CONTROL

57-70	23 1/2" long	2		471 3202

31.1810 LINK, REAR DOOR LOCK TO REMOTE CONTROL

57-70	5 1/4" long	2		471 3205

31.1820 LEVER AND FRAME, DOOR CONTROL ROD

57-70	RH. Front door	1		471 4003
57-70	LH. Front door	1		471 4004
57-70	Rear door	2		471 3176

31.1880 CONTROL, REMOTE, FRONT DOOR LOCK

57-70	RH	1		472 7339
57-70	LH	1		472 7340

31.1890 CONTROL, REMOTE, REAR DOOR LOCK

57-70	RH. w/Solenoid	1		472 7341
57-70	LH. w/Solenoid	1		472 7342

31.1897 NUT, REMOTE CONTROL

57-70	Front door lock cylinder to control rod	2	●	468 8190
57-70	All doors, outside handle to control rod	4	●	468 8190
57-70	All doors, lock remote control connecting rod	4	●	468 8190

31.1915 STUD, REAR DOOR LOCK REMOTE CONTROL

57-70	(★31.0987)	2	●	457 8800

31.2110 HANDLE, REMOTE CONTROL

57-70	Knob type	4		468 8400

31.2300 CONTROL, DOOR INSIDE LOCKING DEVICE

57-70	Front doors, w/Switch	2		472 7337
57-70	Rear doors	2		472 7338

31.2330 KNOB, DOOR LOCK INSIDE LOCKING DEVICE

57-70	Rear doors, chromium	2		468 8461
57-70	Front doors, chromium	2		468 8430

31.2331 FERRULE, DOOR LOCKING ROD KNOB

57-70	All doors	4		469 1587

31.2350 ROD, INSIDE LOCKING DEVICE KNOB TO DOOR LOCK

57-70	10 1/2" long. Front doors	2		471 3197
57-70	RH. 10" long. Rear door	1		471 3200
57-70	LH. 10" long. Rear door	1		471 3201

31.2354 CLIP, ANTI-RATTLE, DOOR INSIDE LOCKING RODS

57-70		AR	•	457 6655
57-70	Front door, remote control spring	2		423 4831
57-70	Door locking springs	AR		423 4830
57-70	All doors, lock cylinder to control rod	4		469 0667

31.2400 HANDLE, OUTSIDE, FRONT DOOR LOCK

ASSEMBLY CHART FOR LOCKING TYPE HANDLES

Showing component parts used in assembly.

Locking Handle Complete Less Keys	Locking Handle Less Cylinder	Lock Cylinder Package	Case For Lock Cylinder	Spring Stop Washer	Tension Spring	Retaining Washer	Cylinder Cap
471 3295	423 1494	139 2944	701 0608	423 5670	423 5749	701 0610	701 0609
471 3296	423 1495	139 2944	701 0608	423 5670	423 5749	701 0610	701 0609

NOTE: For tumblers, springs and retainers used in lock cylinder see Groups 25.0052, 25.0053, 25.0054.

57-70	RH, complete	1		471 3295
57-70	RH, less lock cylinder	1		423 1494
57-70	LH, complete	1		471 3296
57-70	LH, less lock cylinder	1		423 1495

31.2410 HANDLE, OUTSIDE, REAR DOOR LOCK

ASSEMBLY CHART FOR PUSH BUTTON NON-LOCKING TYPE HANDLES

Showing Component Parts Used to Make Assembly

Push Button Handle Complete	Handle Less Push Button	Push Button	Tension Spring	Tension Spring Retainer	Sealing Ring	Retaining Washer
471 3305	423 6250	423 3399	423 5749	423 6262	416 8356	423 3403
471 3306	423 6251	423 3399	423 5749	423 6262	416 8356	423 3403

57-70	RH, complete	1		471 3305
57-70	RH, less push button	1		423 6250
57-70	LH, complete	1		471 3306
57-70	LH, less push button	1		423 6251

31.2413 GASKET, OUTSIDE HANDLE TO DOOR

57-70	RH, front door, front, LH, rear door, rear	2		469 1286
57-70	LH, front door, front, RH, rear door, rear	2		469 1287
57-70	Front door, rear, rear door, front	4		469 1285

31.2420 CAP, DUST, DOOR OUTSIDE LOCKING HANDLE

57-70	Front doors	2	•	701 0609

31.2422 CYLINDER, LOCK, DOOR OUTSIDE HANDLE, LESS KEYS

NOTE: For tumblers, springs and retainers see groups 25.0052, 25.0053, 25.0054.

57-70	w/Shaft, uncoded	2	•	139 2944
57-70	w/Shaft, coded	2	•	109 8691

	31.2423 SHAFT, DOOR LOCK CYLINDER AND PUSH BUTTON			
57-70	(★31.2422) w/Cyl. uncoded	2	●139	2944
57-70	(★31.2422) w/Cyl. coded	2	●109	8691
	31.2424 BUTTON, PUSH, REAR DOOR LOCK			
57-70	w/Shaft	2	●423	3399
	31.2425 CASE, DOOR LOCK CYLINDER			
57-70	Front doors. Sleeve	2	●701	0608
	31.2426 RING, PUSH BUTTON SEALING			
57-70		2 or 4	●416	8356
	31.2427 SPRING, TENSION, DOOR LOCK CYLINDER AND PUSH BUTTON			
57-70		4	●423	5749
	31.2428 RETAINER, LOCK CYLINDER AND PUSH BUTTON SPRING			
57-70	Front doors	2	●423	5670
57-70	All doors	4	●423	5670
	31.2429 WASHER, STOP, PUSH BUTTON SPRING			
57-70	Front door	2	●423	2645
	31.2430 PAWL, ACTUATING, DOOR LOCK CYLINDER			
57-70	RH, front door	1	●423	2642
57-70	LH, front door	1	●423	2643
	31.2431 WASHER, RETAINING, PUSH BUTTON			
57-70	Front doors. Lock cylinder detent	2	●701	0610
57-70	Rear doors	2	●423	3403
	31.2435 SUPPORT & LEVER, DOOR OUTSIDE HANDLE			
57-70	RH. Front door	1	423	6432
57-70	LH. Front door	1	423	6433
57-70	RH. Rear door	1	423	6418
57-70	LH. Rear door	1	423	6419
	31.2495 SCREW, OUTSIDE HANDLE TO DOOR PANEL			
57-70		8	451	715
	31.2800 BUMPER, SIDE OF DOOR (RUBBER)			
57-70	Front door, top of ventilator	2	●466	8145
57-70	Front door, at cove	2	469	9999
57-70	On door lock pillar, at rocker sill	4	470	5769
57-70	On door lock striker plate .31" thick	4	471	3733
57-70	On door lock striker plate .44" thick	4	471	3734
57-70	On door lock striker plate .57" thick	4	471	3735
	31.2810 SPACER, DOOR BUMPER			
57-70	Front door, at cove	AR	470	1093
	31.3950 PANEL, BELT FINISH, FRONT DOOR ON INSIDE OF DOOR			
57-70	RH. Gray. w/Cover and Weatherstrip	1	469	5504
57-70	LH. Gray. w/Cover and Weatherstrip	1	469	5505
57-70	RH. Blue. w/Cover and Weatherstrip	1	469	5506
57-70	LH. Blue. w/Cover and Weatherstrip	1	469	5507
57-70	RH. Green. w/Cover and Weatherstrip	1	469	5508
57-70	LH. Green. w/Cover and Weatherstrip	1	469	5509
57-70	RH. Brown. w/Cover and Weatherstrip	1	469	5510
57-70	LH. Brown. w/Cover and Weatherstrip	1	469	5511
57-70	RH. Black. w/Cover and Weatherstrip	1	470	8304
57-70	LH. Black. w/Cover and Weatherstrip	1	470	8305
	31.3960 PANEL, BELT FINISH, REAR DOOR ON INSIDE OF DOOR			
57-70	RH. Dk. Gray. w/Cover and Weatherstrip	1	471	3818
57-70	LH. Dk. Gray. w/Cover and Weatherstrip	1	471	3819

57-70	RH. Dk. Blue. w/Cover and Weatherstrip	1	471 3820
57-70	LH. Dk. Blue. w/Cover and Weatherstrip	1	471 3821
57-70	RH. Black. w/Cover and Weatherstrip	1	471 3826
57-70	LH. Black. w/Cover and Weatherstrip	1	471 3827
57-70	RH. Dk. Green. w/Cover and Weatherstrip	1	471 3822
57-70	LH. Dk. Green. w/Cover and Weatherstrip	1	471 3823
57-70	RH. Dk. Brown. w/Cover and Weatherstrip	1	471 3824
57-70	LH. Dk. Brown. w/Cover and Weatherstrip	1	471 3825

31.3965 SCREW, DOOR BELT FINISH PANEL

57-70		6	466 7286
57-70	(★25.0560) To door panel	28	●161 857

31.4250 WEATHERSTRIP, SIDE ROOF RAIL

57-70	RH. Over front and rear doors	1	469 4711
57-70	LH. Over front and rear doors	1	469 4712
57-70	Center w/Support	2	469 4985

31.4260 RETAINER, SIDE ROOF RAIL WEATHERSTRIP

57-70	RH. Over front and rear doors	1	468 9214
57-70	LH. Over front and rear doors	1	468 9215

31.4265 SCREW, ROOF RAIL WEATHERSTRIP RETAINER

57-70		26	●466 2875

31.4350 WEATHERSTRIP, FRONT DOOR ON EDGE OF DOOR OR BODY OPENING (RUBBER)

NOTE: The listings in this group do not cover fabric covered windhose for doors. When windhose is wanted, order by description, giving engine, style and body numbers, also amount required.

57-70	RH. Front sides and front bottom	1	468 9632
57-70	LH. Front sides and front bottom	1	468 9633
57-70	Auxiliary, on body hinge pillar, above belt line	2	468 9648
57-70	RH. Auxiliary, on hinge pillar, at belt line	1	469 8758
57-70	LH. Auxiliary, on hinge pillar, at belt line	1	469 8759
57-70	RH. On door lock pillar, at belt line	1	471 4162
57-70	LH. On door lock pillar, at belt line	1	471 4163
57-70	RH, upper, on door lock pillar	1	472 1915
57-70	LH, upper, on door lock pillar	1	472 1916

31.4355 RETAINER, FRONT DOOR WEATHERSTRIP

57-70	RH. At lock pillar	1	471 4171
57-70	LH. At lock pillar	1	471 4172

31.4360 WEATHERSTRIP, REAR DOOR, ON EDGE OF DOOR OR BODY OPENING (RUBBER)

NOTE: The listings in this group do not cover the fabric covered windhose for doors. When windhose is wanted, order by description, giving engine, style and body numbers, also amount required.

57-70	RH. On lock pillar, w/Retainer	1	471 4160
57-70	LH. On lock pillar, w/Retainer	1	471 4161
57-70	RH. Rear side and bottom	1	468 9679
57-70	LH. Rear side and bottom	1	468 9680
57-70	RH. On door lock, at belt line	1	471 4158
57-70	LH. On door lock, at belt line	1	471 4159
57-70	RH. Bottom, front	1	471 3337
57-70	LH. Bottom, front	1	471 3338
57-70	On hinge pillar, at belt line	2	472 2363

31.4370 WEATHERSTRIP, BOTTOM OF FRONT DOOR

NOTE: The listings in this group do not cover the fabric covered windhose for doors. When windhose is wanted, order by description, giving engine, style and body numbers, also amount required.

57-70	RH. (★31.4350) Rear bottom and lock pillar	1	468 9634
57-70	LH. (★31.4350) Rear bottom and lock pillar	1	468 9635
57-70	RH. (★31.4350) Front bottom and front side	1	468 9632
57-70	LH. (★31.4350) Front bottom and front side	1	468 9633

31.4380 WEATHERSTRIP, BOTTOM OF REAR DOOR

NOTE: The listings in this group do not cover the fabric covered windhose for doors. When windhose is wanted, order by description, giving engine, style and body numbers, also amount required.

57-70	RH. (★31.4360) Bottom and rear side	1	468	9679
57-70	LH. (★31.4360) Bottom and rear side	1	468	9680
57-70	RH. (★31.4360) Bottom, front	1	471	3337
57-70	LH. (★31.4360) Bottom, front	1	471	3338

31.4390 CLIP, WEATHERSTRIP TO EDGE OF DOOR

57-70	Front door. Hinge pillar and bottom weather-strip	6	●465	3672

31.4395 STRIP, SEALING, DOOR BOTTOM DRAIN HOLES

57-70	Rubber	8	●467	6124

31.4396 FASTENER, SEALING STRIP TO PANEL

57-70		16	●468	5752

31.4410 REAR DECK LID, LESS HARDWARE, IN PRIMER (Specify engine, style and body numbers)

57-70		1	468	8742

31.4555 BOX, REAR DECK LID HINGE

57-70	RH	1	423	2612
57-70	LH	1	423	2613

31.4556 STRAP, REAR DECK LID HINGE

57-70	RH. w/Link	1	423	4124
57-70	LH. w/Link	1	423	2619

31.4559 PIN, REAR DECK LID HINGE

57-70	Link to box	2	●415	1624

31.4562 COVER, REAR DECK LID HINGE

57-70	RH	1	423	4842
57-70	LH	1	423	4843

31.4575 ROD, TORQUE, REAR DECK LID HINGE

57-70	RH	1	468	8482
57-70	LH	1	468	8483

31.4810 PLATE, COVER, REAR DECK LID LOCK

57-70	Inner panel access hole	1	468	6802

31.4850 PIN, REAR DECK LID LOCK GUIDE

57-70	w/support Plate. On deck lid	1	●459	3195

31.4856 PLATE, DECK LID LOCK GUIDE PIN

57-70	Guide, on back panel	1	467	5905

31.4863 CYLINDER LOCK, ASSY., REAR DECK LID, WITH KEYS

57-70	Lock Set. Consists of one (1) coded rear deck lid lock and one (1) coded glove compartment lock cylinder	1	469	4845

31.4930 GASKET, REAR DECK LID LOCK CYLINDER

57-70		1	●458	7931

31.4950 POWER UNIT, REAR DECK LID

57-70	On floor pan at wheelhouse, operating w/Regulator	1	469	2175
57-70	Locking, on deck lid	1	504	7934

31.4951 MOTOR, POWER UNIT, REAR DECK LID

57-70	On floor pan, at wheelhouse	1	504	7947

31.4952 REGULATOR, REAR DECK LID OPERATING

57-70	On floor pan, at wheelhouse	1	423	4186

	31.4954 LINK PIN, REAR DECK LID POWER UNIT			
57-70	Motor to regulator link, 7/8" long	1		470 2788
	31.4955 RETAINER, REAR DECK LID LINK PIN			
57-70	(★34.0156)	1	●463	3318
	31.4960 COVER, POWER UNIT REAR DECK LID CLOSING			
57-70		1	490	1287
	31.4965 SWITCH, REAR DECK LID POWER UNIT			
57-70	Rotary locking	1	423	5142
57-70	Locking limit	1	423	5147
57-70	Opening limit	1	199	8176
	31.4970 LOCK, REAR DECK LID POWER CLOSING			
57-70	w/Solenoid	1	468	6877
	31.4990 SOLENOID, REAR DECK LID POWER LOCK CONTROL			
57-70		1	●111	9958
	31.4995 RELAY, REAR DECK LID MOTOR AND REGULATOR			
57-70	At wheelhouse	1	111	6925
	31.5070 GUARD, REAR DECK LID LOCK			
57-70		1	471	4705
	31.5085 RETAINER, REAR DECK LID LOCK CYLINDER			
57-70	For power control unit	1	●467	8007
57-70	For lock cylinder shaft	1	700	9889
	31.5105 PLATE, REINFORCEMENT, REAR DECK LID POWER CLOSING UNIT			
57-70	w/Bushing, on floor pan at wheelhouse	1	423	4199
	31.5158 LAMP BULB, INDICATOR LIGHT			
57-70	(★25.0040) For deck lid power lock indicator	1	●273	157
	31.5165 SWITCH ASSY., REAR DECK LID POWER OPERATION			
57-70	On instrument panel	1	469	5445
	31.5180 SUPPORT, REAR DECK LID CONTROL SWITCH ON INSTRUMENT PANEL			
57-70		1	469	5004
	31.5200 BREAKER, CIRCUIT, DECK LID POWER AND REMOTE CONTROL UNIT			
57-70	5 amp. On LH shroud panel	1	●467	4659
	31.5225 HARNESS, REAR DECK LID POWER LOCK AND REMOTE CONTROL			
57-70	Also rear speaker	1	469	8823
	31.5300 BUMPER, RUBBER, DECK LID OPENING			
57-70	In gutter, lower	2	●471	6976
57-70	Lower, on lid	2	456	3172
57-70	(★31.2800) On body	4	●457	4349
57-70	On hinge	4	463	7488
57-70	On lid, w/Chromium Insert	2	●471	8696
	31.5370 WEATHERSTRIP, REAR DECK LID			
57-70	In deck lid gutter	1	471	1666
	31.5400 EMBLEM, REAR DECK LID			
57-70	Block letter "R". Bright Anodized	1	146	4999
57-70	Block letter "D". Bright Anodized	2	146	5000
57-70	Block letter "E". Bright Anodized	1	146	5001
57-70	Block letter "A". Bright Anodized	1	146	5002
57-70	Block letter "L". Bright Anodized	1	146	5003
57-70	Block letter "O". Bright Anodized	2	146	5004

31.5410 GASKET, DECK LID EMBLEM

57-70	For block letters; rubber	8	●558 191

31.5411 CLIP, REAR DECK LID LETTERS

57-70	Spring type	8	146 6481

31.7520 GLASS, FRONT DOOR VENTILATOR

57-70	EZ Eye	2	468 8250

31.7530 CHANNEL ASSEMBLY, FRONT DOOR VENTILATOR CONSISTS OF CHROME CHANNEL, WEATHERSTRIP AND FRAME

57-70	RH. Less glass, gutter and regulator	1	468 8339
57-70	LH. Less glass, gutter and regulator	1	468 8340

31.7534 STUD, FRONT DOOR VENTILATOR ADJUSTING

57-70	Lower	4	469 6278

31.7550 SASH CHANNEL ONLY, FRONT DOOR VENTILATOR GLASS

57-70	RH	1	423 2152
57-70	LH	1	423 2153

31.7555 GUTTER, FRONT DOOR VENTILATOR

57-70	RH. On sash channel	1	469 0505
57-70	LH. On sash channel	1	469 0506

31.7560 WEATHERSTRIP, FRONT DOOR VENTILATOR (RUBBER)

57-70	RH. Around ventilator	1	423 2140
57-70	LH. Around ventilator	1	423 2141

31.7565 SCREW, DOOR VENTILATOR WEATHERSTRIP

57-70	To ventilator frame, front	6	●423 6334

31.7670 REGULATOR, FRONT DOOR VENTILATOR

57-70	RH. Electric, less motor	1	469 3052
57-70	LH. Electric, less motor	1	469 3053

31.7672 MOTOR, FRONT DOOR VENTILATOR REGULATOR, ELECTRIC

57-70		2	423 3392

31.7675 CLIP, SPACER, VENTILATOR TEE SHAFT

57-70	In regulator	2	●415 5278

No Page 110

SERIES	GROUP NO. & DESCRIPTION	SPECIFICATIONS	NO. USED	PART NO.
	33.0003 COVER, INSTRUMENT PANEL			
57-70		Gray. Upper	1	469 5513
57-70		Blue. Upper	1	469 5514
57-70		Green. Upper	1	469 5515
57-70		Beige. Upper	1	469 5516
57-70		Black. Upper	1	470 8300
	33.0020 INSTRUMENT PANEL, LESS INSTRUMENTS AND COMPARTMENT DOOR			
57-70		Upper. In primer	1	471 7399
57-70		Gray. Lower	1	470 2678
57-70		Blue. Lower	1	470 2679
57-70		Green. Lower	1	470 2680
57-70		Beige. Lower	1	470 2681
57-70		White. Lower	1	470 3292
	33.0025 GROMMET, INSTRUMENT PANEL TO WINDSHIELD INNER FRAME			
57-70		To support	8	●463 0149
	33.0070 MOLDING, INSTRUMENT PANEL			
57-70		RH. Chromium	1	469 0725
57-70		LH. Chromium	1	469 0726
57-70		Center, Chromium	1	469 1812
57-70		RH. End cap, paint as req'd.	1	471 7240
57-70		LH. End cap, paint as req'd.	1	471 7241
	33.0260 DOOR, INSTRUMENT PANEL ASH TRAY			
57-70		Gray	2	351 0790
57-70		Blue	2	109 8667
57-70		Beige	2	109 8668
57-70		Green	2	109 8669
57-70		White	2	109 8671
	33.0265 PIN, ASH TRAY DOOR			
57-70		Hinge	2	●146 6058
	33.0270 BUMPER, ASH TRAY DOOR TO RADIO GRILLE			
57-70		Hinge stop	2	●146 1748
57-70		Door	4	●145 7615
	33.0280 SPRING, ASH TRAY DOOR			
57-70		To retainer	2	●146 8714
	33.0284 RIVET, ASH TRAY DOOR SPRING			
57-70		To retainer	2	●146 4036
57-70		To door	2	●146 6062
	33.1000 COMPARTMENT BOX, INSTRUMENT PANEL			
57-70		Gray	1	426 8126
57-70		Blue	1	426 8127
57-70		Green	1	426 8128
57-70		Beige	1	426 8129
	33.1060 DOOR, INSTRUMENT PANEL COMPARTMENT, LESS LOCK			
	NOTE: See color chart on page G-4 for paint specifications.			
57-70		Gray	1	470 2608
57-70		Blue	1	470 2609
57-70		Green	1	470 2610
57-70		Beige	1	470 2611
57-70		White w/Green	1	470 3271
57-70		White w/Blue	1	470 3270
57-70		White w/Gray	1	470 3269

33.1093 LOCK CYLINDER, LESS KEYS
(Specify key No. if coded lock cylinder is required)

NOTE: For keys, see Group 25.0057

57-70	Coded	1	●461	5826
57-70	Uncoded	1	●461	5827

33.1100 PLATE, INSTRUMENT PANEL LOCK CYLINDER FINISHING

57-70	On compartment door	1	469	7536

33.1108 KNOB OR HOUSING, INSTRUMENT PANEL COMPARTMENT DOOR, LESS LOCK

57-70	Knob	1	●461	5917

33.1115 RETAINER, COMPARTMENT DOOR LOCK KNOB OR HOUSING

57-70		1	●461	5980

33.1120 HINGE, INSTRUMENT PANEL COMPARTMENT DOOR

57-70	Chromium	1	469	0648

33.1125 SCREW, COMPARTMENT DOOR HINGE

57-70	To instrument panel	5	●458	5972
57-70	To door	7	159	908

33.1150 CHECK LINK, INSTRUMENT PANEL COMPARTMENT DOOR

57-70	RH. Chromium	1	469	0173
57-70	LH. Chromium	1	469	0174

33.1164 RUBBER GROMMET, COMPARTMENT DOOR CHECK LINK

57-70	On check link	1	●467	1566

33.1170 CATCH, INSTRUMENT PANEL COMPARTMENT DOOR

57-70		1	468	9789

33.1200 BUMPER, INSTRUMENT PANEL COMPARTMENT DOOR

57-70		2	●411	9339

33.1300 SWITCH, INSTRUMENT PANEL COMPARTMENT LIGHT

57-70		1	●199	8161

33.1325 CASE, INSTRUMENT PANEL COMPARTMENT VANITY

57-70	Lt. Gray, w/Mirror, Comb & Powder Puff	1	469	8371
57-70	Lt. Blue, w/Mirror, Comb & Powder Puff	1	469	8372
57-70	Lt. Green, w/Mirror, Comb & Powder Puff	1	469	8373
57-70	Beige, w/Mirror, Comb & Powder Puff	1	469	8374

33.1330 CONTAINER OR CUP, INSTRUMENT PANEL COMPARTMENT

57-70	Cigarette container	1	469	2815
57-70	Cup container	1	471	9580
57-70	Cup	6	469	2816

33.1805 SUNSHADE, INTERIOR, LESS SUPPORTS (TRIMMED)

57-70	RH	1	468	9953
57-70	LH	1	468	9954

33.1940 SUPPORT, ON BODY, INTERIOR SUNSHADE SWING ARM

57-70	Chromium	2	468	9952

33.1950 ESCUTCHEON, SUNSHADE SUPPORT TO BODY

57-70	RH. Chromium	1	469	0741
57-70	LH. Chromium	1	469	0742

33.2100 REAR VIEW MIRROR

57-70	Day-Nite, (3-way adj.) On windshield header	1	●146	4717
57-70	LH. On door w/mounting Bracket & Shaft	1	898	490

33.2110 PAD, REAR VIEW MIRROR

57-70	To door	1	●594 7938

33.2112 SCREW, REAR VIEW MIRROR

57-70	To door (1/4-20 x 2")	2	146 7427

33.2114 HANDLE, OUTSIDE REAR VIEW MIRROR

57-70	Left, inner	1	594 8341

33.2118 ESCUTCHEON, REAR VIEW MIRROR

57-70	Inner, on door trim pad	1	470 5042

33.2150 SUPPORT, REAR VIEW MIRROR

57-70		1	471 4793

33.2155 SCREW, MIRROR HINGE

57-70		1	●145 8710

33.2160 WASHER, REAR VIEW MIRROR

57-70	(★12.2355)	1	●410 224
57-70	(★25.0390) Lock washer	1	●138 597

33.2350 ASH TRAY, INSTRUMENT PANEL

57-70		2	146 6060

33.2450 ASH TRAY, REAR DOOR

57-70	On arm rest	2	469 7309

33.2470 RETAINER, REAR DOOR ASH TRAY

57-70	On arm rest w/Ash Tray	2	469 3665

33.2500 RETAINER, OR SOCKET, LIGHTER ON REAR DOORS

57-70	w/Fuse	2	469 6120

33.2503 FUSE, CIGAR LIGHTER

57-70	(★33.2708)	2	●131 8535

33.2510 LIGHTER, CIGAR, ON REAR DOOR

57-70	Knob w/Tip	2	469 7348

33.2915 NOTE BOOK AND PENCIL, COMPARTMENT BOX

57-70	Lt. Gray. In rear seat center arm rest	1	469 8383
57-70	Lt. Blue. In rear seat center arm rest	1	469 8384
57-70	Lt. Green. In rear seat center arm rest	1	469 8385
57-70	Beige. In rear seat center arm rest	1	469 8386
57-70	White. In rear seat center arm rest	1	470 3258
57-70	Black. In rear seat center arm rest	1	470 3259
57-70	Dk. Gray. In rear seat center arm rest	1	471 5086

33.2940 BOTTLE, COMPARTMENT PERFUME

57-70	In rear seat center arm rest, w/perfume	1	470 3991

33.3000 MIRROR, VANITY

57-70	In instrument panel door	1	469 8060
57-70	Lt. Gray. In rear seat center arm rest	1	469 8376
57-70	Lt. Blue. In rear seat center arm rest	1	469 8377
57-70	Lt. Green. In rear seat center arm rest	1	469 8378
57-70	Beige. In rear seat center arm rest	1	469 8379
57-70	White. In rear seat center arm rest	1	470 3256
57-70	Black. In rear seat center arm rest	1	470 3257
57-70	Dark Gray. In rear seat center arm rest	1	471 5085

33.5015 GLASS, DOME LAMP

57-70		4	423 2478

33.5020 REFLECTOR, DOME LAMP

57-70	RH. Less switch and socket	1	423 2476
57-70	LH. Less switch and socket	1	423 2477

33.5021 SOCKET, DOME LAMP

57-70		4	423	4956

33.5250 SWITCH, DOME LAMP

57-70	In door opening, front doors	2	●470	9878
57-70	On roof rail	1	423	2479

33.5275 GASKET, DOOR OPENING LAMP SWITCH

57-70	For all switches retained by screws	AR	●459	8587
57-70	For snap in switches	AR	●470	9880

33.5800 ROBE CORD

57-70	Lt. Gray	1	469	2572
57-70	Medium Blue	1	469	2573
57-70	Beige	1	469	2575
57-70	Medium Green	1	469	2576
57-70	White	1	470	9237
57-70	Black	1	470	9280
57-70	Dk. Gray	1	471	7095

33.5820 SUPPORT BRACKET, ROBE CORD, ON BACK OF FRONT SEAT

57-70	Center, Chromium	1	468	8777

33.5840 ASSIST GRIP, SEAT BACK

57-70	Outer, Chromium	2	468	8635

33.7300 GRILLE, HEATER OUTLET, REAR COMPARTMENT

57-70	RH, on rear seat, Chromium	1	469	5169
57-70	LH, on rear seat, Chromium	1	469	5170

33.7305 CLIP, GRILLE, HEATER OUTLET

57-70	(★31.1515) Rear compartment	8	415	4886

UPHOLSTERY CHART NO. 1 - Style 57-7059X

Always use trim (upholstery) chart when ordering yardage upholstery. When ordering specify group numbers shown in price list.

Trim Code	Description of Cushion Seat Side Bar and Back Rest Material	Part No. of Cushion Seat Side Bar and Back Rest Material	Description of Sidewall Material	Part No. of Sidewall Material	Description of Headlining Material	Part No. of Headlining Material
110	Lt. Gray Mojave Pattern Cloth	1476-T-157. . .425 9622	Dk. Gray Leather	306-T-1357. . .425 9640	Light Gray Cloth	1348-T-157. . .425 9626
	Dark Gray Leather	306-T-1357 . .425 9640	Lt. Gray Leather	300-T-1357. . .425 9634		
111	Lt. Gray Mojave Pattern Cloth	1476-T-157. . .425 9622	Lt. Gray Leather	300-T-1357. . .425 9634	Light Gray Cloth	1348-T-157. . .425 9626
	Lt. Gray Leather	300-T-1357 . .425 9634				
118	Lt. Gray Mojave Pattern Cloth	1476-T-157. . .425 9622	White Leather	341-T-1357. . .427 1438	Light Gray Cloth	1348-T-157. . .425 9626
	White Leather	341-T-1357 . .427 1438	Lt. Gray Leather	300-T-1357. . .425 9634		
120	Lt. Gray Parisienne Pattern Cloth	1310-T-157. . .425 9618	Dk. Gray Leather	306-T-1357. . .425 9640	Light Gray Cloth	1348-T-157. . .425 9626
	Dk. Gray Leather	306-T-1357 . .425 9640	Lt. Gray Leather	300-T-1357. . .425 9634		
121	Lt. Gray Parisienne Pattern Cloth	1310-T-157. . .425 9618	Lt. Gray Leather	300-T-1357. . .425 9634	Light Gray Cloth	1348-T-157. . .425 9626
	Lt. Gray Leather	300-T-1357 . .425 9634				
128	Lt. Gray Parisienne Pattern Cloth	1310-T-157. . .425 9618	White Leather	341-T-1357. . .427 1438	Light Gray Cloth	1348-T-157. . .425 9626
	White Leather	341-T-1357 . .427 1438	Lt. Gray Leather	300-T-1357. . .425 9634		
130	Lt. Gray Bayou Pattern Cloth	1420-T-157. . .425 9614	Dk. Gray Leather	306-T-1357. . .425 9640	Light Gray Cloth	1348-T-157. . .425 9626
	Dk. Gray Leather	306-T-1357 . .425 9640	Lt. Gray Leather	300-T-1357. . .425 9634		
131	Lt. Gray Bayou Pattern Cloth	1420-T-157. . .425 9614	Lt. Gray Leather	300-T-1357. . .425 9634	Light Gray Cloth	1348-T-157. . .425 9626
	Lt. Gray Leather	300-T-1357 . .425 9634				
138	Lt. Gray Bayou Pattern Cloth	1420-T-157. . .425 9614	White Leather	341-T-1357. . .427 1438	Light Gray Cloth	1348-T-157. . .425 9626
	White Leather	341-T-1357 . .427 1438	Lt. Gray Leather	300-T-1357. . .425 9634		
140	Lt. Gray Plain Broadcloth	1305-T-157. . .425 9613	Dk. Gray Leather	306-T-1357. . .425 9640	Light Gray Cloth	1348-T-157. . .425 9626
	Dk. Gray Leather	306-T-1357 . .425 9640	Lt. Gray Leather	300-T-1357. . .425 9634		
141	Lt. Gray Plain Broadcloth	1305-T-157. . .425 9613	Lt. Gray Leather	300-T-1357. . .425 9634	Light Gray Cloth	1348-T-157. . .425 9626
	Lt. Gray Leather	300-T-1357 . .425 9634				
148	Lt. Gray Plain Broadcloth	1305-T-157. . .425 9613	White Leather	341-T-1357. . .427 1438	Light Gray Cloth	1348-T-157. . .425 9626
	White Leather	341-T-1357 . .427 1438	Lt. Gray Leather	300-T-1357. . .425 9634		
150	Lt. Gray Leather	300-T-1357 . .425 9634	Dk. Gray Leather	306-T-1357. . .425 9640	Lt. Gray Coated Fabric	305-T-4012 . .425 9642
	Dk. Gray Leather	306-T-1357 . .425 9640	Lt. Gray Leather	300-T-1357. . .425 9634		
151	Lt. Gray Leather	300-T-1357 . .425 9634	Lt. Gray Leather	300-T-1357. . .425 9634	Lt. Gray Coated Fabric	305-T-4012 . .425 9642
158	Lt. Gray Leather	300-T-1357 . .425 9634	White Leather	341-T-1357. . .427 1438	Lt. Gray Coated Fabric	305-T-4012 . .425 9642
	White Leather	341-T-1357 . .427 1438	Lt. Gray Leather	300-T-1357. . .425 9634		
212	Med. Blue Mojave Pattern Cloth	1477-T-157. . .425 9623	Med. Blue Leather	301-T-1357. . .425 9635	Medium Blue Cloth	1349-T-157. . .425 9627
	Med. Blue Leather	301-T-1357 . .425 9635				
218	Med. Blue Mojave Pattern Cloth	1477-T-157. . .425 9623	White Leather	341-T-1357. . .427 1438	Medium Blue Cloth	1349-T-157. . .425 9627
	White Leather	341-T-1357 . .427 1438	Med. Blue Leather	301-T-1357. . .425 9635		
222	Med. Blue Parisienne Pattern Cloth	1311-T-157. . .425 9619	Med. Blue Leather	301-T-1357. . .425 9635	Medium Blue Cloth	1349-T-157. . .425 9627
	Med. Blue Leather	301-T-1357 . .425 9635				
228	Med. Blue Parisienne Pattern Cloth	1311-T-157. . .425 9619	White Leather	341-T-1357. . .427 1438	Medium Blue Cloth	1349-T-157. . .425 9627
	White Leather	341-T-1357 . .427 1438	Med. Blue Leather	301-T-1357. . .425 9635		
232	Med. Blue Bayou Pattern Cloth	1421-T-157. . .425 9615	Med. Blue Leather	301-T-1357. . .425 9635	Medium Blue Cloth	1349-T-157. . .425 9627
	Med. Blue Leather	301-T-1357 . .425 9635				
238	Med. Blue Bayou Pattern Cloth	1421-T-157. . .425 9615	White Leather	341-T-1357. . .427 1438	Medium Blue Cloth	1349-T-157. . .425 9627
	White Leather	341-T-1357 . .427 1438	Med. Blue Leather	301-T-1357. . .425 9635		

UPHOLSTERY CHART NO. 1 (Cont'd.)

Trim Code	Description of Cushion, Seat Side Bar and Back Rest Material	Part No. of Cushion Seat Side Bar and Back Rest Material	Description of Sidewall Material	Part No. of Sidewall Material	Description of Headlining Material	Part No. of Headlining Material
242	Med. Blue Plain Broadcloth	1300-T-157. . .425 9608	Med. Blue Leather	301-T-1357. . .425 9635	Medium Blue Cloth	1349-T-157. . .425 9627
	Med. Blue Leather	301-T-1357 . .425 9635			Medium Blue Cloth	1349-T-157. . .425 9627
248	Med. Blue Plain Broadcloth	1300-T-157. . .425 9608	White Leather	341-T-1357. . .427 1438	Med. Blue Coated Fabric	305-T-4012 . .425 9644
	White Leather	341-T-1357 . .427 1438	Med. Blue Leather	301-T-1357. . .425 9635	Med. Blue Coated Fabric	305-T-4012 . .425 9644
252	Med. Blue Leather	301-T-1357 . .425 9635	Med. Blue Leather	301-T-1357. . .425 9635	Beige Cloth	1351-T-157. . .425 9629
258	Med. Blue Leather	301-T-1357 . .425 9635	White Leather	341-T-1357. . .427 1438	Beige Cloth	1351-T-157. . .425 9629
	White Leather	341-T-1357 . .427 1438	Med. Blue Leather	301-T-1357. . .425 9635	Beige Cloth	1351-T-157. . .425 9629
414	Beige Mojave Pattern Cloth	1478-T-157. . .425 9624	Beige Leather	303-T-1357. . .425 9637	Beige Cloth	1351-T-157. . .425 9629
	Beige Leather	303-T-1357 . .425 9637			Beige Cloth	1351-T-157. . .425 9629
424	Beige Parisienne Pattern Cloth	1312-T-157. . .425 9620	Beige Leather	303-T-1357. . .425 9637	Beige Coated Fabric	306-T-4012 . .425 9643
	Beige Leather	303-T-1357 . .425 9637			Medium Green Cloth	1350-T-157. . .425 9628
434	Beige Bayou Pattern Cloth	1422-T-157. . .425 9616	Beige Leather	303-T-1357. . .425 9637	Medium Green Cloth	1350-T-157. . .425 9628
	Beige Leather	303-T-1357 . .425 9637			Medium Green Cloth	1350-T-157. . .425 9628
444	Beige Plain Broadcloth	1304-T-157. . .425 9612	Beige Leather	303-T-1357. . .425 9637	Medium Green Cloth	1350-T-157. . .425 9628
	Beige Leather	303-T-1357 . .425 9637			Medium Green Cloth	1350-T-157. . .425 9628
454	Beige Leather	303-T-1357 . .425 9637	Beige Leather	303-T-1357. . .425 9637	Medium Green Cloth	1350-T-157. . .425 9628
616	Med. Green Mojave Pattern Cloth	1479-T-157. . .425 9625	Med. Green Leather	304-T-1357. . .425 9638	Medium Green Cloth	1350-T-157. . .425 9628
	Med. Green Leather	304-T-1357 . .425 9638			Medium Green Cloth	1350-T-157. . .425 9628
618	Med. Green Mojave Pattern Cloth	1479-T-157. . .425 9625	White Leather	341-T-1357. . .427 1438	Medium Green Cloth	1350-T-157. . .425 9628
	White Leather	341-T-1357 . .427 1438	Med. Green Leather	304-T-1357. . .425 9638	Medium Green Cloth	1350-T-157. . .425 9628
626	Med. Green Parisienne Pattern Cloth	1313-T-157. . .425 9621	Med. Green Leather	304-T-1357. . .425 9638	Medium Green Cloth	1350-T-157. . .425 9628
	Med. Green Leather	304-T-1357 . .425 9638			Medium Green Cloth	1350-T-157. . .425 9628
628	Med. Green Parisienne Pattern Cloth	1313-T-157. . .425 9621	White Leather	341-T-1357. . .427 1438	Medium Green Cloth	1350-T-157. . .425 9628
	White Leather	341-T-1357 . .427 1438	Med. Green Leather	304-T-1357. . .425 9638	Medium Green Cloth	1350-T-157. . .425 9628
636	Med. Green Bayou Pattern Cloth	1423-T-157. . .425 9617	Med. Green Leather	304-T-1357. . .425 9638	Medium Green Cloth	1350-T-157. . .425 9628
	Med. Green Leather	304-T-1357 . .425 9638			Medium Green Cloth	1350-T-157. . .425 9628
638	Med. Green Bayou Pattern Cloth	1423-T-157. . .425 9617	White Leather	341-T-1357. . .427 1438	Medium Green Cloth	1350-T-157. . .425 9628
	White Leather	341-T-1357 . .427 1438	Med. Green Leather	304-T-1357. . .425 9638	Medium Green Cloth	1350-T-157. . .425 9628
646	Med. Green Plain Broadcloth	1302-T-157. . .425 9610	Med. Green Leather	304-T-1357. . .425 9638	Medium Green Cloth	1350-T-157. . .425 9628
	Med. Green Leather	304-T-1357 . .425 9638			Medium Green Cloth	1350-T-157. . .425 9628
648	Med. Green Plain Broadcloth	1302-T-157. . .425 9610	White Leather	341-T-1357. . .427 1438	Medium Green Cloth	1350-T-157. . .425 9628
	White Leather	341-T-1357.. .427 1438	Med. Green Leather	304-T-1357. . .425 9638	Med. Green Coated Fabric	309-T-4012 . .425 9645
656	Med. Green Leather	304-T-1357 . .425 9638	Med. Green Leather	304-T-1357. . .425 9638	Med. Green Coated Fabric	309-T-4012 . .425 9645
658	Med. Green Leather	304-T-1357 . .425 9638	White Leather	341-T-1357. . .427 1438	White Coated Fabric	558-T-4012 . .427 1440
	White Leather	341-T-1357 . .427 1438	Med. Green Leather	304-T-1357. . .425 9638	White Coated Fabric	558-T-4012 . .427 1440
858	White Leather	341-T-1357 . .427 1438	White Leather	341-T-1357. . .427 1438	White Coated Fabric	558-T-4012 . .427 1440
859	White Leather	341-T-1357 . .427 1438	Black Leather	340-T-1357. . .427 1437		
	Black Leather	340-T-1357 . .427 1437	Black Leather	340-T-1357. . .427 1437		
958	Black Leather	340-T-1357 . .427 1437	White Leather	341-T-1357. . .427 1438		
	White Leather	341-T-1357 . .427 1438	Black Leather	340-T-1357. . .427 1437		
959	Black Leather	340-T-1357 . .427 1437	Black Leather	340-T-1357. . .427 1437		

SERIES	GROUP NO. & DESCRIPTION	SPECIFICATIONS	NO. USED	PART NO.
	34.0040 SPRING, FRONT SEAT CUSHION			
57-70			1	469 3672
	34.0045 RUBBER PAD, FRONT SEAT CUSHION			
57-70			1	470 4263
	34.0100 SPRING, FRONT SEAT BACK REST			
57-70			1	469 3673
	34.0105 RUBBER PAD, FRONT SEAT BACK			
57-70			1	469 6149
	34.0110 FRAME, FRONT SEAT, BACK			
57-70		Less springs	1	469 6968
	34.0200 REGULATOR, FRONT SEAT ADJUSTER (ELECTRIC)			
57-70		Horizontal, w/Motor, less realy & spinning nuts (Electric - 6-way)	1	504 7971
57-70		Vertical, w/Motor, less relay & spinning nuts (Electric - 6-way)	1	504 7970
	34.0202 RELAY, SEAT ADJUSTER REGULATOR			
57-70		Electric - 6-way	2	469 4361
	34.0203 YOKE, ATTACHING, SEAT ADJUSTER MOTOR AND REGULATOR ASSY. (ELECTRIC)			
57-70			2	●490 0120
	34.0208 NUT, SEAT REGULATOR SPINNING			
57-70		Electric - 6-way	3	470 5361
	34.0209 PIN, SEAT REGULATOR SPINNING NUT STOP			
57-70			5	471 1555
	34.0320 ADJUSTER, FRONT SEAT			
57-70		RH. Electric - 6-way	1	471 6872
57-70		LH. Electric - 6-way	1	471 6873
	34.0323 SCREW, FRONT SEAT ADJUSTER			
57-70		To floor pan	16	459 4386
57-70		To links & supports, front upper (Electric - 6-way)	2	469 4880
57-70		To links & supports, front upper (Electric - 6-way)	2	469 4881
57-70		Cross rod to adjuster tracks, rear	2	471 3887
57-70		Cross rod to adjuster tracks, rear	2	471 3888
57-70		Shoulder type. Rod links to spinning nuts	6	471 1552
	34.0325 CROSS ROD, SEAT ADJUSTER			
57-70		Control rod assy. (Electric - 6-way)	1	469 9700
	34.0326 SPRING, TENSIONER, SEAT ADJUSTER			
57-70		RH. Vertical. Electric - 6-way (Anti-Creep)	1	470 2988
57-70		LH. Horizontal. Electric - 6-way (Anti-Creep)	1	470 2987
57-70		RH. Electric - 6-way (Anti-Chuck)	1	471 3885
57-70		LH. Electric - 6-way (Anti-Chuck)	1	471 3886
	34.0505 MOLDING, FRONT SEAT FINISH			
57-70		RH. Side of seat bottom and back	1	468 8216
57-70		LH. Side of seat bottom and back	1	468 8217

34.0520 SPRING, FRONT SEAT ADJUSTER RETURN

57-70	RH	1	469	4303
57-70	LH	1	469	4304

34.0615 CONTROL, SEAT, RELAY & RESPONSE SWITCH

57-70	Cut-off switch an integral part	1	469	8738

34.0620 SWITCH, OPERATING FRONT SEAT

57-70	LH. Dial selector seat control in front door arm rest. Electric - 6-way	1	470	1884
57-70	In cushion bottom	1	469	5491
57-70	Door jamb. On front hinge pillar	2	471	4547

34.0623 GASKET, SEAT DOOR JAMB SWITCH

57-70		2	471	4548

34.0635 LENS, DIAL SEAT CONTROL SWITCH

57-70	Electric - 6-way	1	470	2981

34.2320 SPRING, REAR SEAT CUSHION

57-70	RH	1	469	3674
57-70	LH	1	469	3675

34.2325 RUBBER PAD, REAR SEAT CUSHION

57-70		2	469	6146

34.2350 FINISH MOLDING, REAR SEAT

57-70	Bottom side	2	468	8177

34.2670 SPRING, REAR SEAT BACK REST

57-70	RH	1	469	3676
57-70	LH	1	469	3677

34.2675 RUBBER PAD, REAR SEAT BACK

57-70		1	469	6720

34.3100 FRAME, FRONT SEAT CENTER ARM REST

57-70		1	468	7960

34.3130 RUBBER PAD, FRONT SEAT CENTER ARM REST

57-70		1	469	6150

34.3750 ARM REST, FRONT DOOR TRIMMED

Specify engine, style, body & trim combination numbers.

57-70	RH	1	427	1352
57-70	LH	1	427	1353

34.3753 ARM REST, REAR DOOR TRIMMED

Specify engine, style, body & trim combination numbers.

57-70	RH	1	427	1571
57-70	LH	1	427	1572

34.4060 CARPET, FRONT FLOOR

Specify engine, style, body & trim combination numbers.

57-70	Lambskin	1	427	1411
57-70	Pile fabric	1	427	1407

34.4080 GROMMET, DIMMER SWITCH, FLOOR CARPET

57-70		1	•411	7340

34.4160 TRIM COVER, TOE KICK, BACK OF FRONT SEAT

Specify engine, style, body & trim combination numbers.

57-70		1	427	1370

34.4200 CARPET, REAR FLOOR

Specify engine, style, body & trim combination numbers.

57-70	RH. Lambskin	1	427	1413
57-70	LH. Lambskin	1	427	1414
57-70	RH. Pile fabric	1	427	1409
57-70	LH. Pile fabric	1	427	1410

34.4240 CARPET, ROCKER, REAR FLOOR

Specify engine, style, body & trim combination numbers.

57-70	RH. Dk. Gray Lambskin	1	469	6076
57-70	LH. Dk. Gray Lambskin	1	469	6077
57-70	RH. Dk. Blue Lambskin	1	469	6080
57-70	LH. Dk. Blue Lambskin	1	469	6081
57-70	RH. Dk. Brown Lambskin	1	469	6082
57-70	LH. Dk. Brown Lambskin	1	469	6083
57-70	RH. Dk. Green Lambskin	1	469	6086
57-70	LH. Dk. Green Lambskin	1	469	6087
57-70	RH. Black	1	470	9245
57-70	LH. Black	1	470	9246
57-70	RH. Pile fabric	1	427	1358
57-70	LH. Pile fabric	1	427	1359

34.4280 CARPET, REAR FLOOR TUNNEL

Specify engine, style, body & trim combination numbers.

57-70	Lambskin	1	427	1412
57-70	Pile Fabric	1	427	1408

34.4340 SUPPORT, FLOOR CARPET AT SIDE OF SCUFF PLATE

57-70	RH, front	1	471	3864
57-70	LH, front	1	471	3865
57-70	RH, rear	1	471	3866
57-70	LH, rear	1	471	3867
57-70	RH, center	1	471	3868
57-70	LH, center	1	471	3869

34.5550 TRIM PANEL, SIDE OF COWL, LESS MOLDING

Specify engine, style, body & trim combination numbers.

57-70	RH. w/trim Cover	1	427	1346
57-70	LH. w/trim Cover	1	427	1347

34.5560 TRIM COVER, SIDE OF COWL PANEL AND MOLDING

Specify engine, style, body & trim combination numbers.

57-70	RH	1	427	1349
57-70	LH	1	427	1350

34.5570 RETAINER, COWL TRIM PANEL

57-70		4	469	9754

34.6010 MOLDING, COWL TRIM PAD

57-70	RH. Heater grille an integral part	1	469	9638
57-70	LH. Heater grille an integral part	1	469	9639

34.8015 TRIM PANEL, FRONT DOOR

Specify engine, style, body & trim combination numbers.

57-70	RH. Lower, less molding. Leather covered	1	427	1403
57-70	LH. Lower, less molding. Leather covered	1	427	1404
57-70	RH. Gray, upper, less arm rest	1	469	3396
57-70	LH. Gray, upper, less arm rest	1	469	3397
57-70	RH. Blue, upper, less arm rest	1	470	3036
57-70	LH. Upper, less arm rest	1	470	3037
57-70	RH. Beige, upper, less arm rest	1	470	3042
57-70	LH. Beige, upper, less arm rest	1	470	3043
57-70	RH. Green, upper, less arm rest	1	470	3040
57-70	LH. Green, upper, less arm rest	1	470	3041
57-70	RH. White, upper, less arm rest	1	471	5352
57-70	LH. White, upper, less arm rest	1	471	5353

34.8045 TRIM PANEL, REAR DOOR

Specify engine, style, body & trim combination numbers.

57-70	RH. Lower, less molding. Leather covered	1	427	1405
57-70	LH. Lower, less molding. Leather covered	1	427	1406
57-70	RH. Gray, upper, less arm rest	1	469	3654
57-70	LH. Gray, upper, less arm rest	1	469	3655
57-70	RH. Blue, upper, less arm rest	1	470	3046

57-70	LH. Blue, upper, less arm rest	1	470	3047
57-70	RH. Beige, upper, less arm rest	1	470	3052
57-70	LH. Beige, upper, less arm rest	1	470	3053
57-70	RH. Green, upper, less arm rest	1	470	3050
57-70	LH. Green, upper, less arm rest	1	470	3051
57-70	RH. White, upper, less arm rest	1	471	5356
57-70	LH. White, upper, less arm rest	1	471	5357

34.8055 MOLDING, FINISH, REAR DOOR TRIM PAD

57-70	Lower trim panel	2	469	0056

34.8056 RETAINER, DOOR TRIM MOLDING

57-70	Front door	20	469	3522
57-70	Rear door	16	469	3522

34.8065 RETAINER, DOOR TRIM PANEL

57-70	Front door, lower	8	469	0085
57-70	Rear door, lower	4	469	0085
57-70	Rear door, lower rear	2	469	0085

34.8200 HEADLINING (MADE UP) LESS SUPPORT WIRES

Specify engine, style, body & trim combination numbers.

57-70	Cloth trim	1	427	1344
57-70	Leather trim	1	427	1345

34.8500 TRIM COVER, FRONT SEAT CUSHION (MADE UP)

Specify engine, style, body & trim combination numbers.

57-70	Cloth trim	1	427	1363
57-70	Leather trim	1	427	1362

34.8510 TRIM COVER, FRONT SEAT BACK REST (MADE UP)

Specify engine, style, body & trim combination numbers.

57-70	Cloth trim	1	427	1361
57-70	Leather trim	1	427	1360

34.8515 TRIM COVER, FRONT SEAT CENTER ARM REST

Specify engine, style, body & trim combination numbers.

57-70	Cloth trim	1	427	1371
57-70	Leather trim	1	427	1372

34.8540 TRIM COVER, FRONT SEAT SIDE BAR (MADE UP)

Specify engine, style, body & trim combination numbers.

57-70	RH	1	427	1366
57-70	LH	1	427	1367

34.8550 TRIM COVER, REAR SEAT CUSHION (MADE UP)

Specify engine, style, body & trim combination numbers.

57-70	Cloth trim	2	427	1382
57-70	Leather trim	2	427	1381

34.8553 TRIM COVER, REAR SEAT BACK REST (MADE UP)

Specify engine, style, body & trim combination numbers.

57-70	RH. Cloth trim	1	427	1379
57-70	LH. Cloth trim	1	427	1380
57-70	RH. Leather trim	1	427	1377
57-70	LH. Leather trim	1	427	1378

34.8555 TRIM COVER, REAR SEAT CENTER ARM REST

Specify engine, style, body & trim combination numbers.

57-70	Less compartment cover	1	427	1387
57-70	Compartment cover	1	427	1389

34.8560 TRIM COVER, REAR SEAT SIDE BAR (MADE UP)

Specify engine, style, body & trim combination numbers.

57-70	RH, outer	1	427	1385
57-70	LH, outer	1	427	1386
57-70	RH, inner	1	427	1383
57-70	LH, inner	1	427	1384

34.8570 TRIM COVER, REAR SEAT TUNNEL FILLER BOARD

Specify engine, style, body & trim combination numbers.

57-70		1	427	1390

34.8600 TRIM, TONNEAU SIDE OF FRONT SEAT BACK (MADE UP)

Specify engine, style, body & trim combination numbers.

57-70	Cloth trim	1	427	1373
57-70	Leather trim	1	427	1374

34.8700 TRIM COVER, CENTER BODY PILLAR

Specify engine, style, body & trim combination numbers.

57-70	RH. Leather covered	1	427	2493
57-70	LH. Leather covered	1	427	2494
57-70	RH. Gray plastic	1	471	6315
57-70	LH. Gray plastic	1	471	6316
57-70	RH. Blue plastic	1	471	6317
57-70	LH. Blue plastic	1	471	6318
57-70	RH. Beige plastic	1	471	6319
57-70	LH. Beige plastic	1	471	6320
57-70	RH. Green plastic	1	471	6321
57-70	LH. Green plastic	1	471	6322
57-70	RH. Black plastic	1	471	6323
57-70	LH. Black plastic	1	471	6324

34.8745 TRIM PANEL, REAR QUARTER

Specify engine, style, body & trim combination numbers.

57-70	RH. Gray, upper	1	469	3662
57-70	LH. Gray, upper	1	469	3663
57-70	RH. Blue, upper	1	470	3056
57-70	LH. Blue, upper	1	470	3057
57-70	RH. Beige, upper	1	470	3062
57-70	LH. Beige, upper	1	470	3063
57-70	RH. Green, upper	1	470	3060
57-70	LH. Green, upper	1	470	3061
57-70	RH. Upper	1	471	5360
57-70	LH. Upper	1	471	5361
57-70	RH, lower. Leather covered	1	427	1354
57-70	LH, lower. Leather covered	1	427	1355

34.9000 TRIM, REAR SEAT BACK COMPARTMENT

Specify engine, style, body & trim combination numbers.

57-70	Shelf trim	1	427	1402

34.9500 TRIM, LINING REAR DECK COMPARTMENT (MADE UP)

Specify engine, style, body & trim combination numbers.

57-70	Floor pan, front	1	427	1423
57-70	Floor pan, center	1	427	1424
57-70	Floor pan, rear	1	427	1425
57-70	Floor pan, side, RH front	1	427	1426
57-70	Floor pan, side, LH front	1	427	1427
57-70	Floor pan, side, RH center	1	427	1428
57-70	Floor pan, side, LH center	1	427	1429
57-70	Floor pan, side, RH rear	1	427	1430
57-70	Floor pan, side, LH rear	1	427	1431
57-70	Wall, front	1	427	1418
57-70	At wheelhouse, RH	1	427	1419
57-70	At wheelhouse, LH	1	427	1420
57-70	Wall, side, RH	1	427	1417
57-70	Wall, side, outer, LH	1	427	1415
57-70	Wall, side, inner, LH	1	427	1416
57-70	Deck lid hinge box, RH	1	427	1421
57-70	Deck lid hinge box, LH	1	427	1422
57-70	Deck lid	1	427	1432
57-70	Cover spare tire	1	427	1399
57-70	Luggage guard	1	427	1400
57-70	Rear end panel, RH	1	427	1433
57-70	Rear end panel, LH	1	427	1434

34.9510 LINING MATERIAL, REAR DECK COMPARTMENT CARPET TYPE MATERIAL

Order as required. Cut to size and make up locally.

57-70	Dk. Gray	425	9630 yd.
57-70	Dk. Blue	425	9631 yd.
57-70	Dk. Brown	425	9632 yd.
57-70	Dk. Green	425	9633 yd.
57-70	Black	427	1439 yd.

34.9550 BUTTONS, SEAT CUSHIONS AND BACKS, W/JIFFY LOOPS

Specify engine, style, body and trim combination numbers.

57-70	Leather covered	30	427	1375
57-70	Cloth covered	30	427	1376

SERIES	GROUP NO. & DESCRIPTION	SPECIFICATIONS	NO. USED	PART NO.
	35.0005 COWL ASSEMBLY (BODY FRONT END)			
57-70		w/hinge pillars and windshield upper frame	1	469 1799
	35.0010 BRACE, DASH TO FRAME			
57-70		RH, inner	1	468 5853
57-70		LH, inner	1	468 7787
57-70		RH, center	1	467 5760
57-70		LH, center	1	467 5761
	35.0015 PANEL, COWL SIDE			
57-70		RH, lower section	1	469 0496
57-70		LH, lower section	1	469 0497
	35.0050 WEATHERSTRIP, HOOD OR FENDER TO COWL			
57-70		Hood to cowl	1	468 9677
57-70		RH. Sponge rubber seal, upper fender to cowl	1	470 3663
57-70		LH. Sponge rubber seal, upper fender to cowl	1	470 3664
	35.0060 RETAINER, WEATHERSTRIP TO COWL			
57-70		Button	8	●458 3318
	35.0100 PILLAR, FRONT BODY HINGE			
57-70		RH. Assy., includes windshield side frame, less lower cowl panel	1	468 6823
57-70		LH. Assy., includes windshield side frame, less lower cowl panel	1	468 6824
	35.0105 REINFORCEMENT, FRONT HINGE PILLAR			
57-70		RH. At upper hinge	1	469 5156
57-70		LH. At upper hinge	1	469 5157
	35.0160 FRAME, WINDSHIELD			
57-70		Inner, upper	1	468 6814
	35.0730 COVER, DASH AIR DUCT			
57-70		LH. Less heater outlet and insulator	1	●469 2861
	35.0735 GASKET, DASH AIR DUCT COVER			
57-70		LH	1	468 9767
	35.0737 HOSE, DRAIN, DASH AIR DUCT			
57-70		Outer	2	●470 4941
57-70		LH, inner	1	●469 9838
	35.0975 PANEL, REAR QUARTER, HINGE PILLAR SECTION			
57-70		RH, hinge pillar	1	468 8843
57-70		LH, hinge pillar	1	468 8844
57-70		RH, filler, quarter panel to hinge pillar	1	468 8243
57-70		LH, filler, quarter panel to hinge pillar	1	468 8244
	35.0990 WHEELHOUSE SECTION, QUARTER SIDE PANEL			
57-70		RH (★35.1015) w/inner Quarter Panel	1	468 6446
57-70		LH (★35.1015) w/inner Quarter Panel	1	468 6447
	35.0995 PLATE, BAFFLE, REAR QUARTER PANEL			
57-70		RH, front w/Seal. To wheelhouse	1	468 6450
57-70		LH, front w/Seal. To wheelhouse	1	468 6451
	35.0997 SUPPORT, REAR QUARTER BAFFLE PLATE			
57-70		RH, w/Nuts	1	469 2277
57-70		LH, w/Nuts	1	468 9385

35.1015 PANEL, REAR QUARTER SIDE

57-70	RH, outer assy. w/hinge pillar, front and rear extensions; less inner panel, gas tank filler door and wheelhouse panel	1	469 4887
57-70	LH, outer assy. w/hinge pillar, front and rear extensions; less inner panel, gas tank filler door and wheelhouse panel	1	469 4888
57-70	RH, inner, front, upper extension	1	468 3593
57-70	LH, inner, front, upper extension	1	468 3594
57-70	RH, inner, front, lower extension	1	468 5719
57-70	LH, inner, front, lower extension	1	468 5720
57-70	RH, inner, w/Wheelhouse	1	468 6446
57-70	LH, inner, w/Wheelhouse	1	468 6447

35.1017 PANEL, REAR QUARTER SIDE, LOWER REAR CORNER

57-70	RH, inner, below tail lamp	1	468 6990
57-70	LH, inner, below tail lamp	1	468 6991
57-70	RH, filler, to bumper	1	469 0858
57-70	LH, filler, to bumper	1	469 0859

35.1018 PANEL, REAR QUARTER SIDE, UPPER REAR

57-70	RH, inner, w/Gutter. In front of tail lamp	1	467 5832
57-70	LH, inner, w/Gutter. In front of tail lamp	1	467 5833

35.1030 STRIKER, WHEEL SHIELD LOCKING

57-70	On rear fender	2	●462 6599

35.1031 DOOR, GAS TANK FILLER

57-70	w/Hinge	1	469 0599

35.1033 BUMPER, GAS TANK FILLER DOOR

57-70		2	●408 7774

35.1034 SUPPORT, GAS TANK FILLER DOOR HINGE

57-70		1	469 0317

35.1035 PANEL, BODY BACK AND REAR END PANEL

57-70	Back window, inner	1	468 5934
57-70	Below deck lid, center lower extension, in primer	1	146 5350
57-70	Below deck lid, upper, w/Gutter and Reinforcement	1	468 6765

35.1037 SUPPORT, REAR END PANEL

57-70	RH, strut, lower extension, below deck lid	1	351 1126
57-70	LH, strut, lower extension, below deck lid	1	351 1125

35.1038 SCREW, REAR END PANEL SUPPORT

57-70	(★25.0500) Extension panel strut to body brace	4	●120 854
57-70	(★25.0562) Strut to extension panel	2	●157 716

35.1040 PAN, FLOOR, REAR COMPARTMENT

57-70		1	471 1947

35.1045 SHELF, PACKAGE, REAR SEAT BACK

57-70	w/rear deck upper Panel	1	469 7650

35.1075 GUTTER ON BODY, REAR DECK LID

57-70	RH. Upper corner	1	468 2271
57-70	LH. Upper corner	1	468 2272
57-70	RH. Lower corner	1	468 2273
57-70	LH. Lower corner	1	468 2274

35.1200 PANEL, ROOF, TURRET TOP

57-70	w/rear quarter Extensions	1	468 5911

35.1205 INSULATOR, ROOF PANEL

57-70	Front	2	●469 6468

35.1235 PANEL, COVER OR ROCKER, BODY MAIN SIDE SILL

57-70	RH, inner	1	471 4517
57-70	LH, inner	1	471 4518
57-70	RH, outer	1	471 2420
57-70	LH, outer	1	471 2421

35.1237 PLATE, MAIN SIDE SILL PANEL END

57-70	RH, rear w/wheelshield anchor Plate	1	469 2383
57-70	LH, rear w/wheelshield anchor Plate	1	469 2384
57-70	Rear, sealing	2	146 6184

35.1240 EXTENSION, ROCKER PANEL, BODY MAIN SIDE SILL

57-70	RH, outer front	1	468 5932
57-70	LH, outer front	1	468 5933
57-70	RH, outer, front reinforcement	1	468 5961
57-70	LH, outer, front reinforcement	1	468 5962

35.1255 PLATE, SCUFF, DOOR SILL

57-70	RH, front	1	471 2412
57-70	LH, front	1	471 2413
57-70	RH, rear	1	471 2414
57-70	LH, rear	1	471 2415

35.1257 SCREW, DOOR SILL SCUFF PLATE

57-70	No. 8-14 x 1/2" flat hd. cross recessed, sheet metal screw. Chromium	12	●161 416

35.1258 RETAINER, DOOR SILL SCUFF PLATE

57-70		4	471 3846

35.1270 MOLDING, MAIN SIDE SILL COVER PANEL

57-70	RH, w/retaining Plates	1	471 3568
57-70	LH, w/retaining Plates	1	471 3569

35.1290 RETAINER, MOLDING TO COVER PANEL

57-70	To front fender	2	146 8083

35.1295 SCREW, MOLDING OR RETAINER, TO SILL

57-70	(★25.0560) Sill molding to body	34	●164 354

35.1400 MOLDING, TRIM, BODY CENTER PILLAR

57-70	RH, upper, inner. Chromium	1	471 4502
57-70	LH, upper, inner. Chromium	1	471 4503
57-70	RH, lower, inner. Chromium	1	471 4176
57-70	LH, lower, inner. Chromium	1	471 4177

35.1402 SPACER, CENTER PILLAR TRIM MOLDING

57-70	Inner, rubber	12	471 4790

35.1403 CAP, FINISHING, CENTER PILLAR

57-70	Plastic	2	472 2630

35.1580 MOLDING, REAR QUARTER AND BACK BELT LINE

57-70	Below back window	1	468 7659

35.1585 RETAINER, BELT LINE MOLDING

57-70	Clip w/Stud, lower front, below back window	2	470 2954
57-70	Clip w/Stud, center and rear lower, below back window	4	470 2206
57-70	Spring clip, w/Stud, below back window	5	456 2227

35.1590 NUT, REAR QUARTER BELT LINE MOLDING RETAINER

57-70	Spring nut, below back window	4	467 2958
57-70	(★35.1569) Lower front, below back window	4	●464 4959

35.1595 WASHER, BELT LINE MOLDING

57-70	(★35.1567) Rubber	5	●462 9829
57-70	(★31.0597) Cup	5	●458 7792

35.1605 EMBLEM, REAR QUARTER PANEL

57-70	"Gasoline" on gas tank filler door	1	146 5160

35.1607 RETAINER, REAR QUARTER PANEL EMBLEM

57-70	(★10.0050) Spring nut, gas tank door name plate	2	●445 160

35.1620 MOLDING, REAR QUARTER OR FENDER TRIM, OUTER

57-70	Rear fender crown	2	468 7038
57-70	Lower, above wheel opening molding	2	468 7661

35.1625 RETAINER, REAR QUARTER OR FENDER TRIM MOLDING

57-70	Plate, top of fin molding	2	●466 0799
57-70	(★31.0575) Retainer, lower molding, front	2	●457 6240

35.1810 MOLDING, DRIP, SIDE OF ROOF

57-70	RH, w/reveal Molding. Chromium	1	468 9222
57-70	LH, w/reveal Molding. Chromium	1	468 9223

35.1818 CLIP, ROOF DRIP MOLDING

57-70	Clip w/Bolt	2	469 4706

35.1820 WASHER, ROOF DRIP MOLDING SCREW

57-70	(★35.1567) Rubber	2	●462 9829
57-70	(★31.0597) Cup	2	●458 7792

35.5070 PILLAR, CENTER BODY

57-70	RH	1	471 1772
57-70	LH	1	471 1773

35.5460 RAIL, SIDE ROOF

57-70	RH, outer	1	468 5586
57-70	LH, outer	1	468 5587
57-70	RH, inner	1	468 5974
57-70	LH, inner	1	468 5975

35.5470 MOLDING, FINISH, SIDE ROOF RAIL, INNER

57-70	RH. Chromium	1	469 5087
57-70	LH. Chromium	1	469 5088
57-70	RH, front, bead. Chromium	1	471 3852
57-70	LH, front, bead. Chromium	1	471 3853
57-70	RH, rear, bead. Chromium	1	471 3850
57-70	LH, rear, bead. Chromium	1	471 3851

35.5472 RETAINER, ROOF RAIL FINISH MOLDING

57-70	(★37.1507) Clip, for bead molding	18	471 3882

35.5473 SCREW, SIDE ROOF RAIL FINISH MOLDING

57-70	(★38.2860)	10	●148 095

35.5510 BOW, ROOF

57-70		1	467 5881

35.5580 COVER, TRANSMISSION ACCESS HOLE, IN FLOOR PAN

57-70	Bell housing bolt	2	●145 6237

35.8090 HARNESS, WINDOW AND SEAT ADJUSTER CONTROL WIRING

57-70	Window, seat adj. and door lock	1	471 1774

35.9460 CONDUIT, DOOR WINDOW FLEXIBLE TUBE AND LIFT SWITCH WIRE

57-70	RH, front door	1	469 0303
57-70	LH, front door	1	469 0304
57-70	RH, rear door	1	469 0305
57-70	LH, rear door	1	469 0306

35.9464 GUIDE, DOOR HINGE PILLAR CONDUIT

57-70	Front door	2	469 0501

35.9465 PLATE, DOOR HINGE PILLAR CONDUIT

57-70	Guide anchor, front door	2		469 5344

35.9467 COVER, BODY PILLAR CONDUIT HOLE

57-70	RH, hinge type, on rear body pillar	1		469 0503
57-70	LH, hinge type, on rear body pillar	1		469 0504

35.9469 BOLT, DOOR HINGE PILLAR CONDUIT

57-70	(★31.0052) Front doors	4		●466 8216

No Page 128

GROUP 36 CONVERTIBLE TOPS—ROOF COVERINGS

NO LISTINGS

No Page 130

SERIES	GROUP NO. & DESCRIPTION	SPECIFICATIONS	NO. USED	PART NO.
	37.1050 PANEL, BELT FINISH, REAR QUARTER WINDOW			
57-70		RH. Dk. Gray w/Dk. Gray Cover	1	471 3829
57-70		LH. Dk. Gray w/Dk. Gray Cover	1	471 3830
57-70		RH. Dk. Blue w/Dk. Blue Cover	1	471 3831
57-70		LH. Dk. Blue w/Dk. Blue Cover	1	471 3832
57-70		RH. Dk. Green w/Dk. Green Cover	1	471 3833
57-70		LH. Dk. Green w/Dk. Green Cover	1	471 3834
57-70		RH. Brown w/Brown Cover	1	471 3835
57-70		LH. Brown w/Brown Cover	1	471 3836
57-70		RH. Black w/Black Cover	1	471 3837
57-70		LH. Black w/Black Cover	1	471 3838
	37.1220 GLASS, LESS CHANNEL, BACK WINDOW			
57-70		E Z Eye	1	468 5832
	37.1290 WEATHERSTRIP, BACK WINDOW GLASS			
57-70			1	468 6876
	37.1500 MOLDING, GARNISH, BACK WINDOW, INNER			
57-70		Chromium, upper	1	469 5097
57-70		Chromium, lower	1	469 5099
57-70		RH. Chromium, side	1	469 5101
57-70		LH. Chromium, side	1	469 5102
	37.1505 MOLDING, FINISH, BACK WINDOW, INNER			
57-70		RH. Chromium, side, bead to roof rail	1	471 3847
57-70		LH. Chromium, side, bead to roof rail	1	471 3848
57-70		Chromium, upper, bead	1	471 3849
	37.1507 RETAINER, BACK WINDOW FINISH MOLDING			
57-70		Clip, garnish bead molding	27	471 3882
	37.1510 SCREW, GARNISH MOLDING			
57-70		Side. (★31.3820)	2	●145 417
57-70		Upper. (★31.3820)	8	●145 417
57-70		Lower. (★37.1060)	7	●145 419
	37.1520 MOLDING, BACK WINDOW OUTER			
57-70		RH, Chromium, upper, side and lower	1	468 7662
57-70		LH, Chromium, upper, side and lower	1	468 7663
	37.1525 CLIP, BACK WINDOW OUTER MOLDING			
57-70			7	●465 7731
	37.1550 PLATE, ESCUTCHEON, BACK WINDOW OUTER MOLDING JOINT			
57-70		Chromium, upper	1	468 7664
57-70		Chromium, lower	1	468 7665

No Page 132

SERIES	GROUP NO. & DESCRIPTION	SPECIFICATIONS	NO. USED	PART NO.
	38.0040 GLASS, WINDSHIELD			
57-70		EZ Eye	1	468 5914
	38.0045 MOLDING, OUTER, WINDSHIELD RETAINING (METAL)			
57-70		RH, upper	1	468 8847
57-70		LH, upper	1	468 8848
57-70		RH, lower	1	468 8978
57-70		LH, lower	1	468 8979
	38.0047 GRILLE, SHROUD TOP VENTILATOR			
57-70		Chromium, w/Screens and Supports	1	468 6420
	38.0070 CLIP, WINDSHIELD OUTER MOLDING			
57-70		Upper, w/Bolt	8	469 1199
57-70		Rear side, lower	2	469 9705
57-70		Front side, lower	2	469 9706
57-70		Front, lower	2	469 9707
	38.0090 RETAINER, WINDSHIELD OUTER MOLDING			
57-70		Lower, center	1	469 4382
	38.0135 WEATHERSTRIP, WINDSHIELD			
57-70			1	468 8352
	38.0165 ESCUTCHEON PLATE, WINDSHIELD OUTER MOLDING JOINT			
57-70		Upper, chromium	1	468 9337
57-70		Lower, chromium	1	468 9338
	38.2850 MOLDING, GARNISH, WINDSHIELD			
57-70		RH, Gray. Lower, side w/Trim Cover	1	469 5518
57-70		LH, Gray. Lower, side w/Trim Cover	1	469 5519
57-70		RH, Blue. Lower, side w/Trim Cover	1	469 5520
57-70		LH, Blue. Lower, side w/Trim Cover	1	469 5521
57-70		RH, Green. Lower, side w/Trim Cover	1	469 5522
57-70		LH, Green. Lower, side w/Trim Cover	1	469 5523
57-70		RH, Brown. Lower, side w/Trim Cover	1	469 5524
57-70		LH, Brown. Lower, side w/Trim Cover	1	469 5525
57-70		RH, Black. Lower, side w/Trim Cover	1	470 8301
57-70		LH, Black. Lower, side w/Trim Cover	1	470 8302
57-70		Gray. Lower, center w/Trim Cover	1	469 5527
57-70		Blue. Lower, center w/Trim Cover	1	469 5528
57-70		Green. Lower, center w/Trim Cover	1	469 5529
57-70		Brown. Lower, center w/Trim Cover	1	469 5530
57-70		Black. Lower, center w/Trim Cover	1	470 8303
57-70		Upper, chromium	1	471 3229
57-70		RH, side, chromium	1	471 3230
57-70		LH, side, chromium	1	471 3231
	38.2860 SCREW, GARNISH, MOLDING TO WINDSHIELD OPENING			
57-70		Upper, sheet metal type 8 x 5/8"	7	●145 417
57-70		(★35.0137) Side	6	●446 578
57-70		(★31.3820) Lower, center	4	●168 496
57-70		(★37.1060) Side	4	●145 419
	38.2873 GROMMET, WINDSHIELD GARNISH MOLDING			
57-70		Lower, side, on instrument panel	2	470 1357
	38.2880 PLATE, ESCUTCHEON WINDSHIELD GARNISH MOLDING			
57-70		RH, Gray. Lower	1	471 7637
57-70		LH, Gray. Lower	1	471 7638
57-70		RH, Blue. Lower	1	471 7639
57-70		LH, Blue. Lower	1	471 7640
57-70		RH, Green. Lower	1	471 7641

57-70	LH, Green. Lower	1	471 7642
57-70	RH, Brown. Lower	1	471 7643
57-70	LH, Brown. Lower	1	471 7644
57-70	RH, Black. Lower	1	471 7645
57-70	LH, Black. Lower	1	471 7646

38.4100 OUTLET, WINDSHIELD DEFROSTER

57-70	RH, side	1	468 9667
57-70	LH, side	1	468 9668

38.5400 MOTOR, WINDSHIELD WIPER (VACUUM TYPE)

57-70	Less auxiliary drive (Trico CPS 1-2)	1	146 8322

38.5410 GASKET, WINDSHIELD WIPER MOTOR

57-70		1	●468 9357

38.5465 DRIVE, AUXILIARY, WINDSHIELD WIPER MOTOR

57-70	(Trico 88180-30J)	1	471 1599

38.5470 SCREW, AUXILIARY DRIVE, TO WINDSHIELD WIPER MOTOR

57-70		2	274 478

38.5515 GASKET, WINDSHIELD WIPER TRANSMISSION TO COWL

57-70	To windshield frame	2	468 9356

38.5550 TRANSMISSION ASSEMBLY, WINDSHIELD WIPER

57-70	RH (Trico 88140-10J) w/cables	1	468 9090
57-70	LH (Trico 88141-10J) w/cables	1	468 9091

38.5555 RETAINER, WINDSHIELD WIPER TRANSMISSION

57-70	RH (Trico 89078-9) w/Springs	1	472 1478
57-70	LH (Trico 89078-8) w/Springs	1	472 1479

38.5575 CAM, WINDSHIELD WIPER ARM, ON TRANSMISSION

57-70	RH (Trico 88815-8)	1	●146 7312
57-70	LH (Trico 88816-8)	1	●146 7311

38.5580 NUT, TRANSMISSION TO REVEAL MOLDING

57-70	Slotted, Chromium	2	●463 6163

38.5770 ESCUTCHEON, WINDSHIELD WIPER TRANSMISSION

57-70	RH, Chromium, w/windshield washer Jet	1	146 6467
57-70	LH, Chromium, w/windshield washer Jet	1	146 6468

38.5771 GROMMET, WINDSHIELD WIPER ESCUTCHEON

57-70		2	●146 6964

38.6000 ARM, WINDSHIELD WIPER BALDE

57-70	RH (Trico 89286-1)	1	●146 7310
57-70	LH (Trico 89285-1)	1	●146 7309

38.6005 SHOE, BEARING, WIPER ARM CAM

57-70	(Trico 88849-2)	2	●146 8717

38.6070 VALVE, CONTROL WINDSHIELD WIPER

57-70	(Trico 88341-10) Double check valve	1	●146 4610
57-70	(Trico 89290-1) Assembly w/Cables	1	470 3808

38.6080 GROMMET, WINDSHIELD WIPER CONTROL CABLE

57-70	(★13.0705)	1	146 6207

38.6200 KNOB, WIPER CONTROL VALVE

57-70	(★38.6070) (Trico 89290-1) Assembly w/Cables	1	470 3808

38.6210 ESCUTCHEON, WIPER CONTROL VALVE

57-70	(★38.6070) (Trico 89290-1) Assembly w/Cables	1	470 3808

38.6350 HOSE, WINDSHIELD WIPER

57-70	7/32" I.D. Valve to engine	AR	●109 8356 ft.

	38.6600 BLADE, WINDSHIELD WIPER			
57-70	(Trico 89480-55) 13" lg.		2	●146 8411
	38.6810 SOLVENT, WINDSHIELD WASHER			
	(★51.0170) All season mixture			●146 3379
	38.6815 PUMP, WINDSHIELD WASHER			
57-70	(Trico B88841-4EW) Includes cover		1	●117 3798
	38.6820 BOTTLE, STORAGE			
57-70	(Trico 82895)		1	●145 6147
	38.6828 BRACKET, MOUNTING			
57-70	For bottle		1	●116 8197
	38.6830 BOLT, MOUNTING BRACKET			
57-70	(★25.0560) Strap to bracket		AR	●166 689
	38.6840 NOZZLE, SPRAY, WINDSHIELD WASHER			
57-70			2	●371 8638
	38.6842 GROMMET, FOR HOSE			
57-70	(★13.0705) In cowl			●145 6006
	38.6844 HOSE, WINDSHIELD WASHER (Specify length required)			
57-70	1/8" I.D.		AR	●109 7559 ft.
57-70	3/16" I.D.		AR	●109 7560 ft.
57-70	(★38.6350) 7/32" I.D.		AR	●109 8356 ft.
57-70	To control, 31" long		1	●470 3986
	38.6846 TEE, WINDSHIELD WASHER			
57-70	In hose, between nozzle		1	●146 7235
	38.6852 KNOB AND BUTTON ASSEMBLY			
57-70	(★38.6070) (Trico 89290-1) Assembly w/Cables		1	470 3808
	38.6880 COORDINATOR, W/S WASHER			
57-70	(Trico 89100-11) Motor to washer, (adapter an integral part)		1	●146 8320
	38.6885 KIT, WINDSHIELD WIPER CO-ORDINATOR			
57-70	Consists of clamp & screw		1	146 8478
	38.6894 SCREW, CO-ORDINATOR TO MOTOR			
57-70	(Trico 86633-18)		1	●117 9088
	38.6895 NUT, CO-ORDINATOR TO MOTOR			
57-70	(Trico 88418)		1	●146 8319

No Page 136

SERIES	GROUP NO. & DESCRIPTION	SPECIFICATIONS	NO. USED	PART NO.
	51.0100 BLUE CORAL			
				●140 6636
	51.0105 SEALER, BLUE CORAL			
		Jar		●141 8458
		1/2 lb. can		●141 8459
	51.0110 POLISH, BODY			
		Pint		●885 707
		Gallon		●885 708
	51.0120 CLEANER, CHROMIUM			
		Pint		●885 709
	51.0130 CLEANER, FABRIC			
		Pint		●#146 9571
		Gallon		●#146 9572
	51.0135 CLEANER, UPHOLSTERY			
		Kar Kleen, 22 3/4 oz. jar		●145 9851
		Kar Kleen, 8 oz. container		●146 7967
	51.0140 CLEANER AND INHIBITOR, COOLING SYSTEM			
		Inhibitor, with lubricant		●145 5754
	51.0160 CLEANER, CADILLAC, WHITE SIDEWALL TIRES			
		Gallon		●146 3421
		Pint		●146 3422
	51.0170 SOLVENT, WINDSHIELD WASHER			
		All season mixture		●#146 3379
	51.0300 FRAME, LICENSE PLATE			
57-70		(★14.1947) Complete	1 or 2	351 0965
	51.0490 MAT, FLOOR			
57-70		Black. Pkg. Front floor contour mats. Includes RH and LH side	1	●146 7350
57-70		Green. Pkg. Front floor contour mats. Includes RH and LH side	1	●146 7351
57-70		Blue. Pkg. Front floor contour mats. Includes RH and LH side		●146 7352
57-70		White. Pkg. Front floor contour mats. Includes RH and LH side	1	●146 7353
57-70		Black. Rear floor	1	●146 5186
57-70		Green. Rear floor	1	●146 5187
57-70		Blue. Rear floor	1	●146 5188
57-70		White. Rear floor	1	●146 5189
	51.0680 BELT, PKG., SEAT			
57-70		Beige belt assy., w/attaching Bolt, Nut, Washer and Seal	AR	●146 8424
57-70		White belt assy., w/attaching Bolt, Nut, Washer and Seal	AR	●146 5595
57-70		Gray belt assy., w/attaching Bolt, Nut, Washer and Seal	AR	●146 5596
57-70		Blue belt assy., w/attaching Bolt, Nut, Washer and Seal	AR	●146 5597
57-70		Green belt assy., w/attaching Bolt, Nut, Washer and Seal	AR	●146 5598
57-70		Black belt assy., w/attaching Bolt, Nut, Washer and Seal	AR	●146 5600
57-70		Red belt assy., w/attaching Bolt, Nut, Washer and Seal	AR	●146 5601

NOTE: #Inflammable material; cannot be routed for postal or air shipment.

No Page 138

SERIES	GROUP NO. & DESCRIPTION	SPECIFICATIONS	NO. USED	PART NO.
	53.0110 FOG LAMP			
57-70		RH. Fog, signal and parking lamp	1	898 226
57-70		LH. Fog, signal and parking lamp	1	898 225
	53.0111 SCREW, FOG LAMP MOUNTING			
57-70		Tapping hex. hd., 1/4"-20 x 1/2"	6	456 289
	53.0131 SCREW, FOG LAMP LENS			
57-70		(★14.1748)	8	594 6946
	53.0135 LENS, FOG LAMPS			
57-70		RH. Also for park and directional signal lamp	1	594 7620
57-70		LH. Also for park and directional signal lamp	1	594 7619
	53.0136 GASKET, FOG LAMP LENS			
57-70			2	594 7599
	53.0140 REFLECTOR, FOG LAMP			
57-70		RH	1	594 7618
57-70		LH	1	594 7617
	53.0149 PLATE, REFLECTOR RETAINING SCREW			
57-70			2	●594 5803
	53.0155 WIRE ASSY., FOG LAMP			
57-70		w/Terminals and Connectors	2	594 7922
	53.0160 BULB, FOG LAMP			
57-70		(★25.0040) 3 C.P., parking bulb	2	●142 450
57-70		(★25.0040) 35 W.-32 C.P. fog & signal lamp	2	●455 902
	53.0161 CAP, FOG LAMP BULB			
57-70			2	●594 5104
	53.0165 SWITCH, FOG LAMP			
57-70		Less knob and nut	1	146 6999
	53.0166 KNOB, FOG LIGHT CONTROL			
57-70		w/spring Clip	1	●146 6977
	53.0170 BRACKET, FOG LAMP SWITCH MOUNTING			
57-70			1	146 1719
	53.0171 NUT, LIGHT SWITCH MOUNTING			
57-70		(★14.2012)	1	●146 6868
	53.0175 NUT, FOG LIGHT SWITCH MOUNTING BRACKET			
57-70		Spec. 3/8"-24	1	●146 0973
	53.0240 AMPLIFIER ASSY., HEADLAMP BEAM CONTROL			
57-70		Less wiring	1	●594 6698
	53.0246 WIRE ASSY., AMPLIFIER			
57-70			1	●594 8216
	53.0250 GASKET, AMPLIFIER COVER			
57-70			1	●594 3337
	53.0257 POTENTIOMETER, AMPLIFIER			
57-70			2	●594 6564
	53.0260 TUBE, AMPLIFIER UNIT			
57-70		(★55.0050) Amplifier	1	●122 0825
57-70		Ballast	1	●594 4299

53.0265 CONTROL, BALLAST TUBE, AMPLIFIER UNIT

57-70	Rheostat		1	●594 3297

53.0270 TRANSFORMER, AMPLIFIER UNIT

57-70			1	●594 4300

53.0271 TRANSFORMER, AMPLIFIER UNIT

57-70			1	●594 6568

53.0272 RELAY, AMPLIFIER UNIT

57-70	Sensitive		1	●594 6565

53.0851 MAT, FRONT FLOOR CONTOUR

NOTE: See Group 51.0490 for floor mats in sets.

57-70	RH. Black		1	●146 7358
57-70	LH. Black		1	●146 7354
57-70	RH. Green		1	●146 7359
57-70	LH. Green		1	●146 7355
57-70	RH. Blue		1	●146 7360
57-70	LH. Blue		1	●146 7356
57-70	RH. White		1	●146 7361
57-70	LH. White		1	●146 7357

SERIES	GROUP NO. & DESCRIPTION	SPECIFICATIONS	NO. USED	PART NO.
	54.0115 HEATER ASSEMBLIES			
57-70		RH. Under seat	1	313 6771
57-70		LH. Under seat	1	313 6770
57-70		LH. Cowl unit	1	313 7877
	54.0120 CORE, UNDERSEAT HEATER			
57-70		RH	1	313 6801
57-70		LH	1	313 6802
	54.0125 MOTOR, UNDERSEAT BLOWER			
57-70			2	504 7956
	54.0126 FAN, UNDERSEAT HEATER			
57-70			2	●312 9498
	54.0129 BULB, HEATER CONTROL			
57-70		(★25.0040) 2 C.P. No. 57X	1	●273 157
57-70		(★25.0040) 2 C.P. No. 1891	1	●456 985
	54.0130 CONTROL ASSY., HEATER			
57-70			1	●146 6269
	54.0132 SWITCH,HEATER CONTROL			
57-70			1	●146 9148
	54.0133 SWITCH, UNDERSEAT HEATER			
57-70			1	146 7341
57-70		Rear seat	1	470 2196
	54.0138 RESISTOR, HEATER BLOWER MOTOR			
57-70		LH motor	1	●193 7379
	54.0139 FUSE, HEATER			
57-70		(★25.0035) 20 amp.	1	●106 653
	54.0141 BLOWER, COWL HEATER			
57-70		LH	1	●313 6928
	54.0142 CORE, COWL HEATER			
57-70		LH	1	313 7911
	54.0144 MOTOR, COWL HEATER BLOWER			
57-70		LH	1	504 7940
	54.0146 FAN, BLOWER			
57-70		LH	1	●313 4895
	54.0149 LEVER, HEATER VALVE			
57-70			1	●313 8438
	54.0150 VALVE, THERMOSTATIC, HEATER TEMPERATURE CONTROL			
57-70		Ranco valve. LH heater	1	313 7884
	54.0156 CABLE, CONTROL			
57-70		For w/s defroster valve	1	●470 1661
57-70		LH. For defroster heater valve	1	●470 1660
	54.0158 HOSE, DEFROSTER OR FRESH AIR			
57-70		RH	1	●471 8776
57-70		LH	1	●471 8777
	54.0160 HOSE, WATER			
57-70		1 3/32" O.D. x 3/4 I.D.	AR	ft ●109 8633

54.0162 CLAMP, HEATER HOSE

57-70	(3 3/16" Nominal dia.) For w/s defroster hose	4	●471 6839
57-70	(1 1/32" Nominal dia.)	12	●145 8199
57-70	(1 1/4" Nominal dia.) For water hose	9	●146 4960
57-70	(3 7/8" dia.) For w/s defroster hose	2	●451 240

54.0164 SPRING, REINFORCING HOSE

57-70	RH. Heater hose (14" lg.)	1	●146 7431

54.0165 CLIP, HEATER HOSE RETAINING

57-70	To dash brace	2	●146 7555
57-70	To No. 2 cross bar	3	146 7581

54.0172 NIPPLE, "Y", TEE OR ELBOW, HEATER HOSE

57-70	Nipple, water pump inlet (2 1/2" lg.)	1	●146 7286
57-70	Nipple, water pump outlet (7" lg.)	1	●146 7289
57-70	Tee, water pump outlet nipple	1	●146 7290

54.0175 CONNECTOR, BLOWER TO HEATER

57-70		1	146 6657

54.0176 PIPE, UNDER SEAT HEATER

57-70	Inlet, front. RH heater	1	146 7667
57-70	Inlet, rear. RH heater	1	146 7666
57-70	Outlet. LH heater	1	146 7599

54.0177 SLEEVE, UNDER SEAT HEATER PIPE

57-70		1	146 7672

54.0178 PIPE, WATER PUMP HEATER HOSE

57-70	For inlet hose	1	●146 7455
57-70	For outlet hose	1	●146 7456

54.0179 CLIP, UNDER SEAT HEATER PIPE

57-70	Double clip	1	146 7640
57-70	Single clip	3	146 7595
57-70	Closed clip (3/4" dia.)	1	120 528
57-70	Closed clip (1" dia.)	1	120 530

54.0180 CLAMP, HEATER HOSE PIPE RETAINING

57-70	To seat adj. support bracket	1	●146 7465

54.0181 BRACKET, UNDER SEAT HEATER PIPE CLAMP

57-70		1	146 7586

54.0182 BRACKET, UNDER SEAT HEATER PIPE TO CROSS BAR

57-70		1	146 7658

54.0183 SUPPORT, HEATER PIPES

57-70	(3 3/4" lg.) To gen. mtg. bolt	1	351 0995

54.0187 DUCT ASSY., CROSS CAR HEATER

57-70		1	●146 6889

54.0192 DUCT ASSY., SHROUD SIDE HEATER

57-70	RH	1	470 1346
57-70	LH	1	470 1345

54.0197 CONNECTOR, DASH AIR DUCT COVER TO HEATER BLOWER

57-70	Hose	1	●146 6659

54.0198 CONNECTOR, CROSS CAR DUCT TO COWL SIDE DUCT

57-70	Hose	1	●146 6737

54.0200 HOSE, CROSS CAR HEATER DUCT

57-70		1	●146 6618

54.0210 CLAMP, AIR DUCT COVER TO HEATER BLOWER CONNECTION

57-70	(5 1/8" I.D.) To LH heater blower connection	2	●274 154

54.0215 GASKET, SHROUD SIDE HEATER OPENING			
57-70	LH. To panel	2	●469 8271
54.0260 WASHER, HEATER AND DEFROSTER CABLE PINS			
57-70	Shake proof	2	●312 6659
54.0270 BRACE, HEATER BLOWER TO HEATER			
57-70		1	146 6858
54.0280 WIRE ASSY., UNDERSEAT HEATER FEED			
57-70		1	296 6968
54.1005 OIL, AIR CONDITIONER COMPRESSOR			
57-70	1 qt. jar (525 viscosity)	AR	●541 6939
54.1010 OIL, AIR CONDITIONER EVACUATING PUMP			
57-70	1 qt. jar (75 viscosity)	AR	●541 6935
54.1015 PASTE (GASOILA), AIR CONDITIONER FLARE JOINTS			
57-70	3 1/2" oz. tube	AR	●587 7416
54.1025 DETECTOR, GAS & AIR LEAK			
57-70	Air cond., 4 oz. bottle	1	●146 0845
54.1050 COMPRESSOR ASSY., AIR CONDITIONER			
57-70	Complete less pulley and clutch (crated in returnable crate)	1	●591 0224
54.1060 SUPPORT, COMPRESSOR			
57-70	Front. Air cond.	1	●146 5579
54.1063 SCREW, SUPPORT TO CRANKCASE			
57-70	(★25.0500) Hex. 3/8"-16 x 2"	1	●122 181
54.1068 STUD, COMPRESSOR			
57-70	(★8.4438) 3/8"-16 x 1/2" (2 1/16") 3/8"-24 x 5/8". Support bracket to cyl. head	1	●103 198
54.1090 SUPPORT, COMPRESSOR, REAR			
57-70	Air cond.	1	●146 5956
54.1091 SCREW, REAR SUPPORT TO COMPRESSOR			
57-70	(★25.0500) Hex. hd. 5/16"-18 x 3/4"	2	●120 741
54.1112 BRACKET, COMPRESSOR ADJUSTING			
57-70	Front. Air cond.	1	●146 5953
57-70	Rear. Air cond.	1	●146 5954
54.1113 SCREW, COMPRESSOR BRACKET			
57-70	(★25.0500) Hex. hd., 5/16"-24 x 5/8"	3	●123 473
57-70	(★25.0500) Hex. hd., 3/8"-16 x 1 1/4"	4	●179 841
54.1114 NUT			
57-70	(★25.0080) 3/8"-16	2	●120 377
54.1119 PULLEY, AIR CONDITIONER COMPRESSOR			
57-70	w/Bearing	1	●591 3625
54.1133 RING, COMPRESSOR PULLEY			
57-70	Bearing retaining	1	●591 6837
54.1138 SEAL ASSY., AIR CONDITIONER COMPRESSOR SHAFT			
57-70	w/"O" Rings, Retainers and Seal Pin	1	●587 6740
54.1146 PIN, COMPRESSOR SEAL SEAT MOUNTING			
57-70		1	●591 8307
54.1147 SCREW, COMPRESSOR SEAL HOUSING MOUNTING			
57-70	Air cond.	6	●439 983

54.1153 VALVE ASSY., PRESSURE RELIEF, AIR CONDITIONER COMPRESSOR

57-70 ..... 1 ●591 1708

54.1158 GASKET, COMPRESSOR PRESSURE RELIEF VALVE

57-70 ..... Copper ..... 1 ●640 044

54.1165 "O" RING, PRESSURE RELIEF VALVE MOUNTING

57-70 ..... (★54.4611) Air cond. ..... 2 ●588 7997

54.1170 VALVE ASSY., EXPANSION, AIR CONDITIONER COMPRESSOR

57-70 ..... 1 ●591 1030

54.1175 SCREEN, FILTER, COMPRESSOR EXPANSION VALVE

57-70 ..... 1 ●591 3540

54.1250 COVER, CLUTCH PULLEY

57-70 ..... Rear ring. Air cond. ..... 1 ●591 6841

54.1255 SCREW, CLUTCH COVER MOUNTING

57-70 ..... w/Washer. Air cond. ..... 6 ●591 3122

54.1260 SHIM, COMPRESSOR CLUTCH MOUNTING

57-70 ..... Package ..... 1 ●587 6742

54.1265 PLATE & COUNTERWEIGHT ASSY., COMPRESSOR CLUTCH

57-70 ..... Front. Air cond. ..... 1 ●591 3710

54.1267 PLATE & ARMATURE ASSY., COMPRESSOR CLUTCH

57-70 ..... Rear. Air cond. ..... 1 ●591 3707

54.1272 SPACER, CLUTCH PLATE HUB TO PULLEY BEARING

57-70 ..... Air cond. ..... 1 ●591 8343

54.1275 BALL, COMPRESSOR CLUTCH PLATE ACTUATING

57-70 ..... Air cond. For replacement, 3 balls should be used ..... 3 ●591 9632

54.1277 SPRING, COMPRESSOR CLUTCH PLATE ACTUATING

57-70 ..... Air cond. ..... 3 ●591 8904

54.1288 BEARING, COMPRESSOR PULLEY

57-70 ..... Air cond. ..... 1 ●591 2761

54.1291 WASHER, COMPRESSOR PULLEY, AIR CONDITIONER

57-70 ..... Lock ..... 1 ●591 8358
57-70 ..... Felt ..... 1 ●591 8346
57-70 ..... Steel ..... 1 ●591 8341

54.1296 NUT, PULLEY MOUNTING

57-70 ..... Air cond. ..... 1 ●639 795

54.1305 COIL, COMPRESSOR CLUTCH ACTUATING

57-70 ..... Air cond. ..... 1 ●591 2343

54.1317 PACKAGE, RETAINER, COMPRESSOR CLUTCH COIL

57-70 ..... Includes Retainer, Gaskets and attaching Screws. Air cond. ..... 1 ●587 6681

54.1325 KEY, WOODRUFF, COMPRESSOR CLUTCH

57-70 ..... Air cond. ..... 1 ●591 6332

54.1335 SEAL, COMPRESSOR OIL DRAIN HOLE

57-70 ..... Air cond. ..... 1 ●591 8627

54.1340 PLATES KIT, COMP. REED VALVE REPLACEMENT

57-70 ..... Air cond. ..... 1 ●363 0901

	54.1360 "O" RING, COMP. REED VALVE PLATE MTG.			
57-70	(★54.4611) Air cond.		2	●588 7997
	54.1370 HEAD, AIR COND. COMPRESSOR			
57-70			1	●591 7306
	54.1371 BOLT, COMPRESSOR HEAD MOUNTING			
57-70	(★54.4440)		6	●591 5222
	54.1375 GASKET, COMPRESSOR HEAD MOUNTING			
57-70	Air cond.		1	●591 6279
	54.1380 SCREEN AND SPACER ASSY., COMPRESSOR			
57-70	Air cond.		1	●591 2065
	54.1505 CONDENSER, AIR CONDITIONER			
57-70			1	852 5248
	54.1520 SCREW, AIR CONDITIONER CONDENSER MOUNTING			
57-70	(★25.0500) Hex. hd., 5/16"-18 x 3/4"		4	●122 007
	54.1521 NUT			
57-70	(★6.1326) 5/16"-18, clinch type		4	●271 037
	54.3008 SCREW, AIR COND. EVAPORATOR MOUNTING			
57-70	Tapping, 1/4"-20 x 1", w/lock Washer		4	●146 6933
	54.3010 WASHER, EVAPORATOR MOUNTING SCREW			
57-70	(★6.1327)		4	●145 6008
	54.3020 VALVE, EXPANSION, AIR COND. EVAPORATOR			
57-70	(★54.1170)		1	●591 1030
	54.3575 HOSE, AIR COND. EVAPORATOR DRAIN			
57-70	Tube		1	●313 9525
	54.3577 CLAMP, EVAPORATOR DRAIN TUBE			
57-70			1	●313 5649
	54.3650 CORE, TANK AND FITTING ASSY. EVAPORATOR			
57-70			1	●852 5770
	54.3665 CASE AND FITTING ASSY., EVAPORATOR			
57-70	Inlet		1	●313 7862
57-70	Outlet		1	●313 7860
	54.4005 DEHYDRATOR, AIR CONDITIONER			
57-70	w/Receiver		1	●146 6994
	54.4007 SCREW, DEHYDRATOR AND RECEIVER			
57-70	(★25.0500) Hex. hd. 5/16"-18 x 3/4"		2	●122 007
	54.4420 PIPE, COMPRESSOR TO BY-PASS VALVE			
57-70			1	●351 0959
	54.4425 PIPE OR HOSE, DISCHARGE, COMPRESSOR TO CONDENSER			
57-70	Hose		1	●146 7066
	54.4525 PIPE OR HOSE, RECEIVER TO SIGHT GLASS			
57-70	Hose		1	●146 7065
	54.4535 GLASS, SIGHT, LIQUID LINE			
57-70	Air cond.		1	●313 5920
	54.4538 GASKET, AIR CONDITIONER SIGHT GLASS			
57-70			2	●146 8607
	54.4608 VALVE ASSY., COMPRESSOR SUCTION & DISCHARGE			
57-70	Air cond.		1	●591 3703

	54.4635 CORE, VALVE COMPRESSOR SUCTION & DISCHARGE			
57-70	(★54.1163) Air cond.	2	●113 8041	
	54.5610 MOTOR, BLOWER, AIR COND.			
57-70	On dash	1	●504 7938	
	54.5620 FAN, BLOWER MOTOR			
57-70		1	●313 7749	
	54.5645 RESISTOR, AIR CONDITIONER BLOWER MOTOR			
57-70		1	●193 7378	
	54.5651 HOSE, AIR COND. BLOWER TO EVAP.			
57-70		1	●146 6622	
	54.5654 CLAMP, AIR COND. HOSE			
57-70	To blower	1	●146 7056	
57-70	(4 9/16" dia.) Evap. hose	1	●273 897	
57-70	Comp. to condenser hose	1	●852 3755	
57-70	Receiver to sight glass hose	1	●313 4192	
	54.5718 BOOT, EVAP. TO AIR DUCT			
57-70		1	146 7044	
	54.5719 CLAMP, EVAP. AIR DUCT BOOT			
57-70	(4 3/4" dia.)	2	●273 898	
	54.5725 HOSE, EVAP. AIR OUTLET			
57-70	RH (8" lg.) To floor air outlet	1	●146 7015	
57-70	LH (45" lg.) To floor air outlet	1	●146 7014	
	54.5730 CLAMP, EVAP. AIR OUTLET HOSE			
57-70	(1 3/8" dia.)	2	●451 206	
	54.5735 CLIP, EVAP. AIR OUTLET HOSE			
57-70	To LH floor	1	●146 6857	
	54.5785 COVER, AIR DUCT			
57-70	RH. Air cond.	1	●313 8108	
	54.5798 DUCT, INST. PANEL AIR OUTLET			
57-70	Air cond.	1	469 9893	
	54.5800 STUD, INSTRUMENT PANEL AIR CONDITIONER DUCT			
57-70	To extension	2	●470 2858	
57-70	To extension	1	●470 2859	
	54.5803 STRIP, INST. PANEL AIR COND. DUCT SEAL			
57-70	Felt insulator	1	471 6183	
	54.5825 OUTLET, AIR, FRONT FLOOR			
57-70	RH	1	●146 7002	
57-70	LH	1	146 7000	
	54.5845 OUTLET, INST. PANEL, AIR COND.			
57-70	RH	1	●469 5130	
57-70	LH	1	●469 5131	
57-70	Center	1	●469 5132	
	54.6375 DOOR ASSY., INST. PANEL AIR COND.			
57-70	Center. Black	1	●470 9693	
57-70	RH. In primer	1	470 9689	
57-70	LH. In primer	1	470 9690	
	54.6427 SCREW, AIR CONDITIONER CONTROL MOUNTING			
57-70	(★35.0753) Oval cr. recess hd., No. 10-24 x 2	2	●146 6569	
	54.6428 NUT			
57-70	(★35.0754) Type "J", No. 10-24	2	●146 7332	

	54.6430 WASHER, AIR CONDITIONER CONTROL CABLE		
57-70	(★54.0260)	4	●312 6659
	54.6445 SWITCH, INSTRUMENT PANEL CONTROL		
57-70	Plunger		●146 8996
57-70			●146 9149
	54.6475 VALVE ASSY., BY-PASS, AIR COND. CONTROL		
57-70		1	●199 8810
	54.6480 CABLE ASSY., AIR COND. CONTROL		
57-70	To evap. air valve	1	●146 7478
57-70	To by-pass valve	1	●146 7477
	54.6487 GUIDE, BY-PASS VALVE CONTROL CABLE TO COMPRESSOR		
57-70		1	●146 7556
	54.6488 SCREW, CONTROL CABLE GUIDE		
57-70	(★25.0500) Hex. hd., 5/16-24 x 1/2"	2	●123 350
	54.7005 FUSE, AIR CONDITIONER CONTROL		
57-70	(★25.0035) 25 amp.	1	●455 844

No Page148

SERIES	GROUP NO. & DESCRIPTION	SPECIFICATIONS	NO. USED	PART NO.
	55.0014 SUPPORT, RADIO POWER UNIT			
57-70			1	351 0935
	55.0018 BRACKET, RADIO TUNER MOUNTING			
57-70			1	●351 0674
	55.0021 NUT, RADIO MOUNTING			
57-70		Tuner mounting	2	●146 6057
57-70		Power unit to support. Special J type, 1/4"-20	1	146 7642
	55.0022 BUSHING, RADIO MOUNTING			
57-70		Tuner mounting, outer	1	●146 6651
57-70		Tuner mounting, inner	1	●146 9317
	55.0025 CONDENSER, RADIO			
57-70		(★7.1340) On ignition coil	1	●191 2757
57-70		.5 MFD Capacitor. On voltage regulator	1	●191 7580
57-70		(★7.0375) On generator	1	192 4466
	55.0035 COLLECTOR, STATIC, FRONT WHEEL			
57-70			2	●724 0138
	55.0045 ESCUTCHEON			
57-70		Tuner unit	1	726 9138
57-70		Speaker control	1	146 6870
57-70		Tone control	1	146 6869
	55.0049 SEAL, RADIO ESCUTCHEON			
57-70		(★14.2019) Tone and speaker escutcheon	2	●146 8167
	55.0050 TRANSISTORS, RADIO			
57-70		(1N-295) Diode	4	726 9746
57-70		(2N-109) Relay & Driver	1	726 9748
57-70		(2N-149) I.F.	3	726 9745
57-70		(2N-149) Osc.	1	726 9845
57-70		(2N-149A) Mixer	1	726 9844
57-70		(2N-150) R.F.	1	726 9749
57-70		(X97B) I.F.	1	726 9747
57-70		(X97C) A.G.C.	1	726 9847
57-70		(X97D) Det.	1	726 9846
	55.0051 SOCKETS			
57-70		Antenna	1	●723 9475
57-70		Foot switch	1	725 7318
57-70		Transistor	10	122 1016
	55.0052 GRILLE, RADIO, FRONT SPEAKER			
57-70			1	●146 6132
	55.0054 CREST, RADIO SPEAKER GRILLE			
57-70			1	146 8022
	55.0055 SPEAKER, RADIO			
57-70		Front	1	726 8625
	55.0058 SPACER, SPEAKER TO HOUSING			
57-70			1	●146 6640
	55.0060 CONTROL, VOLUME			
57-70		Volume, tone and switch	1	726 9483
	55.0061 CONTROL, TONE, RADIO			
57-70		Speaker	1	726 9482
	55.0070 TRANSFORMER			
57-70		Interstage	1	726 9339

57-70	Input	1	726 9336
57-70	Output	1	726 8193

55.0075 COIL, RADIO

57-70	Series choke. Antenna	1	●725 5738
57-70	R.F. and antenna	2	●122 1050
57-70	Hash and speaker choke	3	●121 7846
57-70	Oscillator	1	122 1053
57-70	Antenna	1	122 1059
57-70	1st I.F. Coil primary assy.	1	122 1001
57-70	1st I.F. Coil secondary assy.	1	122 1003
57-70	2nd I.F. Coil assy.	1	122 1005
57-70	3rd I.F. Coil assy.	1	122 1007
57-70	4th I.F. Coil primary assy.	1	122 1009
57-70	4th I.F. Coil secondary assy.	1	122 1011
57-70	Choke, filter	1	726 5642
57-70	Choke, A lead	1	725 8554

55.0077 GROMMET, RADIO COIL

57-70	Antenna and R.F. coil	2	●725 8565
57-70	Oscillator coil	1	●725 8564

55.0080 CONDENSERS

57-70	.000039 mfd.	1	●121 7736
57-70	Spark plate pkg.	1	●122 0308
57-70	Antenna trimmer	1	726 9656
57-70	1 mfd. 50 volt. Tubular	19	726 9776

55.0090 SELECTOR, STATION, RADIO

57-70	Push button. Front plate & slide assy. Pre-selector radio	1	●122 0974

55.0095 DIAL, CALIBRATED

57-70		1	●122 0980

55.0096 GLASS, DIAL, PLAIN

57-70		1	●726 9448

55.0097 RETAINER, DIAL GLASS

57-70	Spring	2	●726 6950

55.0099 LAMP, DIAL LIGHT

57-70	(★25.0040) 2 C.P.	1	●456 985

55.0100 KNOB, RADIO CONTROL

57-70	Speaker and tone control	2	●146 6056
57-70		2	●146 6639

55.0102 SPRING, RADIO CONTROL KNOB

57-70	Radio control	1	●146 7073

55.0104 PLATE, BEARING, ANTENNA OPERATING SWITCH

57-70		1	●726 9455

55.0105 SWITCHES, RADIO

57-70	Sensitivity	1	726 9755
57-70	Switch pkg., station selector	2	122 0983
57-70	Antenna override	2	122 0982
57-70	Power and treadle solenoid	2	726 8030

55.0107 SPRINGS, MISCELLANEOUS, RADIO

57-70	Clutch	1	●122 0977
57-70	Power solenoid plunger	1	●726 8017
57-70	Power solenoid return	1	●726 9614
57-70	Treadle solenoid return	1	●726 8009
57-70	Push button slide return (set of 5)	1	●122 0975

55.0108 SOLENOID, RADIO

57-70	Power	1	●726 8040
57-70	Treadle	1	●726 8050

55.0109 RELAY

57-70	Gear train operating	1	726 9296
57-70	4 section switch	1	726 3471

55.0115 CORE, IRON, RADIO

57-70	Tuning	1	●726 8687

55.0119 BAR, CORE GUIDE

57-70		1	●726 8626

55.0121 PLUNGER, POWER AND TREADLE SOLENOID

57-70		2	●726 8659

55.0123 LEVER ASSY., RADIO

57-70	Power	1	●122 0970
57-70	Treadle	1	●122 0971

55.0125 SHAFT, MANUAL, RADIO

57-70		1	726 9438

55.0126 SHAFT, DRIVE, RADIO

57-70	w/Gears	1	●122 0979

55.0127 PULLEY, MANUAL AND DRIVE SHAFT

57-70		2	●726 9368

55.0128 BELT, MANUAL DRIVE, RADIO

57-70		1	●726 9454

55.0129 GEAR TRAIN, RADIO

57-70		1	●726 8700

55.0131 CONNECTOR

57-70	Front speaker lead	1	●122 0996
57-70	Rear speaker lead	1	●122 0997

55.0135 FUSE, RADIO

57-70	(★25.0035) 7 1/2 amp.	1	●455 640

55.0136 BULB, RADIO

57-70	(★25.0040) 2 C.P. Radio escutcheon light	2	●273 157
57-70	(★25.0040) Pilot light	1	●274 020

55.0170 POINTER, RADIO

57-70		1	●122 0999

55.0188 DISC, CLUTCH, RADIO

57-70		1	●122 0973

55.0191 MECHANISM PACKAGE, RADIO CLUTCH

57-70	Consists of Cam, Lever, Gear and Bushing	1	●122 1062

55.0197 ROLLER, RADIO CLUTCH LEVER

57-70		1	●726 8037

55.0201 BUMPER, CLUTCH LEVER ROLLER

57-70		1	●726 7981

55.0210 HOUSING, RADIO FRONT SPEAKER

57-70		1	146 6133

55.0211 SCREW, SPEAKER HOUSING

57-70	Tapping, washer recess hd., No. 10-12 x 3/8"	4	●411 6816

55.0215 BRACKET, RADIO FRONT SPEAKER HOUSING

57-70	Upper	1	●146 6778
57-70	Lower	1	●146 6779

55.0217 SCREW, SPEAKER HOUSING BRACKET

57-70	(★10.0069) Tapping, hex. hd., 1/4"-20 x 7/8"	4	●146 2581

55.0221 PAD, RADIO SPEAKER HOUSING

57-70	RH		1	146 7583
57-70	LH		1	146 7582

55.0231 COVER ASSY., RADIO SPEAKER HOUSING

57-70			1	146 7678

55.0305 SPEAKER, RADIO

57-70	Rear seat		1	726 8635

55.0306 GRILLE, REAR SEAT RADIO SPEAKER

57-70			1	469 2262

55.0505 ANTENNA

57-70	Electric, less installation parts		1	146 6466

55.0510 BRACKET, ANTENNA MOUNTING

57-70	w/Ferrule and Grommet		1	351 1034

55.0515 CABLE, ANTENNA LEAD-IN

57-70	Antenna to radio			●146 8250

55.0519 GASKET, ANTENNA LEAD-IN CABLE

57-70			1	●146 6035
57-70	For plug receptacle		1	●146 8567

55.0520 GROMMET, ANTENNA LEAD-IN CABLE

57-70	(★54.6482)		1	●146 6516

55.0521 RECEPTACLE, PLUG, ANTENNA LEAD-IN CABLE

57-70			1	●146 8555

55.0523 CLIP, CONTACT, ANTENNA LEAD-IN CABLE

57-70	In main tube		1	●569 794

55.0524 BUSHING, INSULATING, ANTENNA LEAD-IN CABLE

57-70	In main tube		1	●569 793

55.0550 TUBE ASSY., ANTENNA

57-70	For antenna mast		1	146 8557

55.0552 INSULATOR, ANTENNA ROD, TOP

57-70	Bushing		1	●146 6040

55.0555 GROMMET, ANTENNA MAIN TUBE

57-70	Top		1	146 8559

55.0556 STRAP, GROUND, ANTENNA MAIN TUBE

57-70			1	●146 8560

55.0560 ROD, ANTENNA

57-70	Mast assy., consists of tube, lower bushing, nylon, rod and ball		1	146 8556

55.0575 ESCUTCHEON, ANTENNA OPENING IN FENDER

57-70			1	●146 7068

55.0578 WASHER, ANTENNA ESCUTCHEON

57-70	Plain		1	●146 7564
57-70	Lock washer		1	146 8565

55.0579 INSERT, ANTENNA ESCUTCHEON

57-70			1	●146 7623

55.0601 BUSHING, LOWER, ANTENNA MAST

57-70	Insulating		1	●146 6041

55.0603 GROMMET, ANTENNA ROD LOWER BUSHING SEAL

57-70			1	●522 045

55.0605 WASHER, ANTENNA MAST LOWER BUSHING STOP

57-70	Brass		1	●146 6029

55.0607 INSERT, ANTENNA, MAST LOWER BUSHING

57-70			1	●146 6042

55.0610 FUSE, ELECTRIC ANTENNA FEED

57-70	(★25.0035) 14 amp.		1	●147 685

55.0620 RELAY, ANTENNA

57-70			1	111 6797

55.0650 MOTOR ASSY., ELECTRIC ANTENNA

57-70			1	●146 8624

55.0655 WORM, SHAFT, ANTENNA MOTOR AND GEAR

57-70			1	●569 003

55.0660 BALL, ANTENNA MOTOR WORM

57-70			1	●146 6032

55.0665 COUPLING, FLEXIBLE, ANTENNA MOTOR AND WORM

57-70			1	●569 007

55.0675 GEAR AND PULLEY ASSY., ANTENNA DRIVE

57-70			1	●569 010

55.0680 HOUSING ASSY., ANTENNA MOTOR DRIVE GEAR

57-70			1	146 8558

55.0685 SEAL, RING, ANTENNA MOTOR TO HOUSING

57-70			1	●146 6034

55.0690 WICK, FELT, ANTENNA GEAR

57-70			1	●146 6033

55.0695 LINER, PRESSURE, ANTENNA GEAR

57-70			1	●569 005

55.0701 SPRING, ANTENNA PRESSURE LINER

57-70			1	●569 004

55.0711 RETAINER, ANTENNA NYLON CORD

57-70			1	●363 0905

55.0716 SHIM, ANTENNA GEAR AND CORD RETAINER

57-70	.015 thk.		2	●146 6030
57-70	.030 thk.		4	●146 6039

55.0726 COVER AND BEARING ASSY., ANTENNA

57-70			1	●569 002

No Page 155

1957-70 SERIES CADILLAC ELDORADO BROUGHAM PARTS AND ACCESSORIES NUMERICAL PRICE LIST

This price list contains all of the new 1957-70 series parts not previously listed, arranged numerically by part number. The following symbols are used throughout this list for reference purposes:

△ . . . . . Parts Stocked at Oakland (California) Warehouse
x . . . . . Parts Not Eligible for Wholesale Compensation

GENERAL PARTS SECTION—PRICES

The "Distributor-Dealer Prices" shown herein are the prices at which the Distributor issuing this Price List sells replacement parts to Dealers operating under him.

The "List Prices" shown in this price list are suggested prices only for sales to consumers.

ISSUED BY:

This Parts Price List is effective April 1, 1957
Prices are subject to change without notice.

No Page 156

PARTS AND ACCESSORIES NUMERICAL PRICE LIST

MASTER GROUP NO.	PART NAME		PART NO.	LIST PRICE	DIST.— DEALER PRICE	WHLSE. COMP.
17.2320	Drain	Δ	114 981	.45	.23	.06
4.5255	Connector	Δ	115 149	.75	.45	.11
54.0179	Clip	Δ	120 528	.10	.06	.02
54.0179	Clip	Δ	120 530	.10	.06	.02
25.0500	Screw	Δ	122 077	.15	.09	.02
25.0500	Screw	Δ	124 058	.15	.09	.02
25.0500	Screw		124 064	.15	.09	.02
7.0084	Key	Δ	124 548	.05	.03	.01
17.2265	Clip		145 539	.10	.06	.02
25.0535	Screw	Δ	155 348	.02	.01	-
25.0562	Screw	Δ	159 612	.03	.02	.01
33.1125	Screw		159 908	.03	.02	.01
25.0560	Screw	Δ	161 872	.05	.03	.01
17.2276	Screw		162 659	.05	.03	.01
25.0560	Screw	Δ	162 903	.03	.02	.01
25.0560	Screw	Δ	166 781	.05	.03	.01
17.2292	Screw		172 380	.10	.06	.02
17.1545	Screw	Δ	181 713	.15	.09	.02
17.2276	Screw		187 838	.02	.01	-
25.0500	Screw	Δ	220 594	.20	.12	.03
10.0114	Nut	Δ	271 482	.03	.02	.01
11.0765	Screw		273 644	.12	.07	.02
11.0765	Screw		273 645	.10	.06	.02
38.5470	Screw		274 478	.10	.06	.02
31.0597	Washer		431 534	.03	.02	.01
7.0080	Nut		443 344	.15	.09	.02
8.3565	Adapter	Δ	443 998	.45	.27	.07
11.0796	Washer	Δ	446 230	.05	.03	.01
17.1463	Washer		446 248	.06	.04	.01
31.2495	Screw		451 715	.05	.03	.01
18.0247	Pin		454 736			
18.0118	Screw	Δ	454 869	.06	.04	.01
25.0500	Screw		454 921	.07	.04	.01
25.0500	Bolt		454 922			
17.1415	Bolt	Δ	455 034	.25	.15	.04
18.0247	Pin		455 106			
17.2050	Retainer		455 277	.06	.04	.01
17.2050	Retainer		455 563	.05	.03	.01
53.0111	Screw		456 289	.10	.06	.02
25.0562	Screw	Δ	456 334	.05	.03	.01
8.2957	Gasket	Δ	519 458	.06	.04	.01
18.0010	Wheel		761 080	25.95	15.57	3.89
18.0010	Wheel		761 081	25.95	15.57	3.89
18.0010	Wheel		761 082	25.95	15.57	3.89
18.0010	Wheel		761 083	25.95	15.57	3.89
18.0010	Wheel		761 084	25.95	15.57	3.89
18.0010	Wheel		761 085	25.95	15.57	3.89
17.1457	Seal	Δ	761 276	.85	.51	.13
17.1535	Ball Joint	Δ	761 525	11.60	6.96	1.74
17.1537	Seal	Δ	761 530	1.25	.75	.19
17.1455	Ball Joint	Δ	761 531	12.40	7.44	1.86
18.0010	Wheel		762 121	25.95	15.57	3.89
18.0010	Wheel	Δ	762 122	25.95	15.57	3.89
6.1565	Adapter		859 151			
53.0110	Fog Lamp		898 225	33.00	19.80	5.94
53.0110	Fog Lamp		898 226	33.00	19.80	5.94
14.1670	Rear Lamp	Δ	898 280	6.30	3.78	1.13
14.1350	Lamp	Δ	898 281	6.95	4.17	1.25
14.1670	Lamp	Δ	898 288	15.15	9.09	2.73
14.1918	Lamp	Δ	898 289	4.90	2.94	.88
14.1918	Lamp	Δ	898 290	4.90	2.94	.88
33.2100	Mirror		898 490	10.35	6.21	1.86
7.0068	Bearing	Δ	908 605	6.15	3.08	.92
7.0068	Bearing	Δ	954 685	3.40	1.70	.51
33.0260	Door		109 8667	6.75	4.05	1.01
33.0260	Door		109 8668	6.75	4.05	1.01
33.0260	Door		109 8669	6.75	4.05	1.01
33.0260	Door		109 8671	6.75	4.05	1.01
17.2250	Pipe	Δ	109 8687	1.75	1.05	.26
17.2250	Pipe	Δ	109 8688	2.30	1.38	.35
17.2250	Pipe	Δ	109 8689	2.30	1.38	.35
17.2250	Pipe	Δ	109 8693	7.75	4.65	1.16
17.2250	Pipe	Δ	109 8694	3.55	2.13	.53
17.2250	Pipe	Δ	109 8695	1.45	.87	.22
17.2250	Pipe	Δ	109 8696	1.50	.90	.23
7.0012	Generator	Δ	110 6989	190.00	114.00	33.63
7.2050	Starter		110 7668	70.00	42.00	12.39
55.0620	Relay		111 6797	5.85	3.51	1.04
7.0482	Relay	Δ	111 6918	4.65	2.56	.77
7.0472	Relay	Δ	111 6924	13.25	7.95	2.35
31.4995	Relay	Δ	111 6925	39.50	23.70	6.99
7.2981	Relay	Δ	111 6927	5.85	3.51	1.04
17.1895	Relay	Δ	111 6931	14.75	8.85	2.61
31.1570	Relay	Δ	111 6936	39.50	23.70	6.99
7.2986	Relay	Δ	111 6938	5.85	3.51	1.04
7.0460	Regulator	Δ	111 9175	21.75	13.05	3.85
18.0242	Solenoid		111 9917	9.15	5.49	1.62
31.1660	Solenoid	Δ	111 9918	24.00	14.40	4.25
7.1960	Relay	Δ	111 9924	30.00	18.00	5.31
31.1660	Solenoid	Δ	111 9944	9.95	5.97	1.76
31.1660	Solenoid	Δ	111 9945	9.95	5.97	1.76
55.0105	Switch		122 0982	.85	.51	.15
55.0105	Switch		122 0983	1.00	.60	.18
55.0075	Coil		122 1001	2.75	1.65	.50
55.0075	Coil		122 1003	3.00	1.80	.60
55.0075	Coil		122 1005	3.00	1.80	.60
55.0075	Coil		122 1007	3.00	1.80	.60
55.0075	Coil		122 1009	3.50	2.10	.70
55.0075	Coil		122 1011	3.50	2.10	.70
55.0051	Socket		122 1016	.65	.39	.12
55.0075	Coil		122 1053			
55.0075	Coil		122 1059			
11.0782	Bar	Δ	146 4626	225.00	146.25	x
11.0782	Bar	Δ	146 4627	112.50	73.13	x
11.0782	Bar	Δ	146 4628	112.50	73.13	x
11.0782	Bar	Δ	146 4629	215.00	139.75	x
11.0782	Bar	Δ	146 4630	215.00	139.75	x
11.0759	Guard	Δ	146 4634	30.00	19.50	x
11.0472	Cross Mem.		146 4800			
11.1500	Support		146 4895	3.75	2.25	.56
31.5400	Emblem		146 4999	1.50	.90	.23
31.5400	Emblem	Δ	146 5000	1.50	.90	.23
31.5400	Emblem	Δ	146 5001	1.50	.90	.23
31.5400	Emblem	Δ	146 5002	1.50	.90	.23
31.5400	Emblem	Δ	146 5003	1.50	.90	.23
31.5400	Emblem	Δ	146 5004	1.50	.90	.23
10.0784	Deflector	Δ	146 5048	2.25	1.35	.34
10.0784	Deflector	Δ	146 5049	2.25	1.35	.34

MASTER GROUP NO.	PART NAME		PART NO.	LIST PRICE	DIST.—DEALER PRICE	WHLSE. COMP.
11.0763	Support		146 5111	1.95	1.17	.29
14.2268	Lens		146 5148	.20	.12	.03
14.1943	Plug*	Δ	146 5158	.25	.15	.04
35.1605	Emblem	Δ	146 5160	1.25	.75	.19
11.0763	Support		146 5294	2.25	1.35	.34
11.0763	Support		146 5295	2.25	1.35	.34
35.1035	Panel		146 5350	6.50	3.90	.98
11.0792	Bar	Δ	146 5365	4.50	2.70	x
11.0792	Bar	Δ	146 5366	4.50	2.70	x
17.2060	Seal	Δ	146 5477	.30	.18	.05
14.1920	Nut		146 5482	.05	.03	.01
14.1672	Nut		146 5484	.06	.04	.01
13.0033	Emblem	Δ	146 5510	7.25	4.35	1.09
17.2030	Seat	Δ	146 5514	.75	.45	.11
17.2040	Bearing	Δ	146 5515	.75	.45	.11
17.2060	Seal	Δ	146 5521	.60	.36	.09
17.2200	Bushing	Δ	146 5530	.10	.06	.02
11.1990	Diaphragm	Δ	146 5555	12.50	7.50	1.50
11.1990	Diaphragm	Δ	146 5556	12.50	7.50	1.50
11.2020	Plate		146 5557	6.50	3.90	.98
13.0096	Pin	Δ	146 5581	.15	.09	.04
13.0096	Pin	Δ	146 5585	.15	.09	.04
13.0095	Strap	Δ	146 5588	1.45	.87	.22
13.0211	Spring		146 5590	.85	.51	.13
17.0141	Bumper		146 5625	.60	.36	.09
18.0175	Cover		146 5648	3.50	2.10	.53
18.0175	Cover		146 5649	4.95	2.97	.74
11.0759	Guard	Δ	146 5665	37.50	24.38	x
13.0097	Cup	Δ	146 5681	.25	.15	.03
18.0117	Plate		146 5688	.15	.09	.02
34.3980	Seal		146 5689	.95	.57	.14
1.0010	Arm	Δ	146 5692	14.95	8.97	2.24
1.0010	Arm	Δ	146 5693	14.95	8.97	2.24
34.3980	Grommet		146 5716	.55	.33	.08
34.3980	Ring		146 5717	.75	.45	.11
17.0147	Bracket		146 5724	.30	.18	.05
17.2020	Plate		146 5725	7.50	4.50	1.13
17.2000	Dome		146 5746	10.25	6.15	1.23
17.2000	Dome		146 5747	10.25	6.15	1.23
18.0177	Antisqueak		146 5809	.55	.33	.08
20.2200	Rod		146 5836	.95	.57	.14
17.1425	Bracket		146 5845	.60	.36	.09
17.1445	Shim	Δ	146 5858	.09	.05	.01
17.1445	Shim	Δ	146 5859	.20	.12	.03
17.1445	Shim	Δ	146 5860	.30	.18	.05
20.2175	Indicator		146 5932	.75	.45	.11
14.1945	Clip	Δ	146 5935	.20	.12	.03
12.2268	Rod		146 5939	.65	.39	.10
12.3255	Screw		146 5944	.25	.15	.04
10.0817	Rod	Δ	146 5957	.40	.24	.06
12.3185	Gasket	Δ	146 5985	.07	.04	.01
12.3305	Extension		146 5986	7.95	4.77	1.19
10.0038	Plate	Δ	146 5988	.35	.21	.05
10.0033	Molding	Δ	146 5990	9.75	5.85	1.46
10.0033	Molding	Δ	146 5991	9.75	5.85	1.46
12.3252	Support		146 5996	1.85	1.11	.28
12.3252	Support		146 5997	1.85	1.11	.28
11.0794	Bracket		146 6000	2.25	1.46	x
11.0794	Bracket		146 6001	2.25	1.46	x
6.1318	Fin		146 6007	2.50	1.50	x
6.1318	Fin		146 6008	2.25	1.35	x
6.1318	Fin		146 6010	2.25	1.35	x
6.1318	Fin		146 6011	1.95	1.17	x
6.1318	Fin		146 6012	4.50	2.70	x
6.1318	Fin		146 6013	4.45	2.67	x
6.1318	Fin		146 6014	4.95	2.97	x
6.1318	Fin		146 6015	4.95	2.97	x
6.1318	Fin		146 6016	5.25	3.15	x
6.1318	Fin		146 6017	5.25	3.15	x
22.0010	Wheel	Δ	146 6047	165.00	107.25	16.09
55.0100	Knob		146 6055	.95	.57	.14
7.3163	Knob	Δ	146 6059	1.60	.96	.25
33.2350	Ash Tray		146 6060	2.00	1.20	.30
18.0117	Plate		146 6079	.15	.09	.02
10.0821	Bracket		146 6085	3.95	2.37	.59
10.0821	Bracket		146 6086	5.25	3.15	.79
10.0110	Molding	Δ	146 6087	2.85	1.71	.43
14.0321	Seal		146 6089	.65	.39	.10
11.0792	Bar	Δ	146 6093	3.85	2.31	.58
11.0792	Bar	Δ	146 6094	3.85	2.31	.58
55.0210	Housing		146 6133	5.95	3.57	.89
2.0871	Shaft		146 6163			
4.4005	Bracket		146 6183	1.85	1.11	.28
35.1237	Plate		146 6184	.20	.12	.03
10.0785	Brace		146 6191	.85	.51	.13
10.0785	Brace		146 6192	.85	.51	.13
13.0705	Grommet		146 6207	.30	.18	.05
3.1355	Clock	Δ	146 6215	31.25	18.75	4.69
4.4030	Cable	Δ	146 6259	1.35	.81	.30
17.0141	Bumper		146 6265	.65	.39	.10
14.2091	Lever	Δ	146 6278	.35	.21	.05
7.2960	Clamp	Δ	146 6293	1.50	.90	.23
7.2965	Gasket	Δ	146 6295	3.30	1.98	.50
7.2955	Cover	Δ	146 6297	5.85	3.51	.88
4.5884	Pipe		146 6301	.90	.54	.14
4.5884	Pipe		146 6303	1.20	.72	.18
4.5887	Pipe		146 6304	3.65	2.41	.60
4.5887	Pipe		146 6305	2.40	1.44	.36
4.5890	Pipe		146 6311	1.40	.84	.21
4.5890	Pipe		146 6312	1.10	.66	.17
10.0824	Seal		146 6321	1.25	.75	.19
10.0824	Seal		146 6322	1.25	.75	.19
10.0824	Seal		146 6323	.40	.24	.06
10.0824	Seal		146 6324	.40	.24	.06
10.0824	Seal		146 6325	.50	.30	.08
10.0824	Seal		146 6326	.50	.30	.08
4.5005	Cylinder	Δ	146 6332	51.50	30.90	7.73
4.3125	Cable	Δ	146 6341	3.95	2.37	.59
7.3880	Ring		146 6364	13.00	7.80	1.95
9.0270	Pipe	Δ	146 6387	7.95	4.37	1.09
9.0270	Pipe	Δ	146 6388	6.75	3.71	.93
10.0033	Molding	Δ	146 6395	5.25	3.15	.79
10.0033	Molding	Δ	146 6396	5.25	3.15	.79
13.0495	Lock	Δ	146 6436	4.25	2.55	.64

PARTS AND ACCESSORIES NUMERICAL PRICE LIST

MASTER GROUP NO.	PART NAME		PART NO.	LIST PRICE	DIST.— DEALER PRICE	WHLSE. COMP.
10.0818	Clip	Δ	146 6447	.10	.06	.02
10.0818	Clip	Δ	146 6448	.10	.06	.02
55.0505	Antenna		146 6466	25.65	15.39	3.85
38.5770	Escutcheon		146 6467	2.10	1.26	.32
38.5770	Escutcheon	Δ	146 6468	2.10	1.26	.32
17.2190	Link	Δ	146 6475	.45	.27	.07
17.2190	Link	Δ	146 6476	.50	.30	.08
17.0147	Bracket		146 6550	.60	.36	.09
10.0110	Molding	Δ	146 6566	.90	.54	.14
11.0762	Cap	Δ	146 6583	3.95	2.37	.59
22.0515	Hub Cap	Δ	146 6608	9.25	6.01	x
9.0283	Pipe	Δ	146 6631	.65	.36	.09
9.0222	Pipe		146 6636	6.25	3.75	.94
54.0175	Connector	Δ	146 6657	.95	.57	.14
4.3137	Grommet	Δ	146 6664	.15	.09	.02
7.3897	Emblem	Δ	146 6690	3.45	2.07	.52
9.0222	Pipe		146 6717	6.25	3.75	.94
6.1320	Clip		146 6758	.15	.09	.02
6.1318	Fin		146 6761	4.50	2.70	x
12.1152	Stud		146 6764	.40	.24	.06
4.5450	Body		146 6775	3.25	1.95	.49
10.0038	Clip	Δ	146 6821	.05	.03	.01
7.0016	Link	Δ	146 6849	3.95	2.57	x
7.0013	Bracket	Δ	146 6850	2.75	1.65	.41
54.5735	Clip		146 6857	.10	.06	.02
54.0270	Brace		146 6858	.20	.12	.03
6.0337	Belt	Δ	146 6864	3.85	1.93	.48
14.2295	Lens	Δ	146 6935	.40	.24	.06
14.2301	Bezel	Δ	146 6936	.75	.45	.11
13.0710	Spring		146 6937	1.10	.66	.17
13.0700	Cable	Δ	146 6938	2.35	1.41	.35
53.0165	Switch		146 6999	2.85	1.71	.43
54.5825	Outlet	Δ	146 7000	5.25	3.15	.79
14.2020	Rod		146 7035	1.45	.87	.22
54.5718	Boot	Δ	146 7044	3.00	1.80	.45
17.1995	Retainer	Δ	146 7071	1.10	.66	.17
14.2034	Housing		146 7081	.95	.57	.14
10.0026	Support		146 7093	1.25	.75	.19
10.0026	Support		146 7094	1.25	.75	.19
7.5410	Grommet		146 7144	.40	.24	.06
10.0122	Retainer	Δ	146 7146	.75	.45	.11
17.2270	Nut	Δ	146 7164	.15	.09	.02
17.2180	Spacer	Δ	146 7173	.15	.09	.02
17.2180	Spacer	Δ	146 7174	.10	.06	.02
18.0189	Bumper		146 7193	.10	.06	.02
13.0591	Hook		146 7215	.75	.45	.11
9.0303	Brace		146 7216	.65	.39	.10
17.2350	Hose	Δ	146 7256	2.95	1.77	.44
17.2280	Seal	Δ	146 7287	.10	.06	.02
17.1880	Pipe	Δ	146 7313	.95	.57	.14
17.1880	Pipe	Δ	146 7314	.85	.51	.13
17.2285	Tee		146 7325	4.00	2.40	.60
9.0230	Adapter	Δ	146 7329	2.45	1.47	.37
7.2924	Shield		146 7330	.30	.18	.05
18.0246	Support		146 7333			
9.0270	Pipe	Δ	146 7335	9.95	5.47	1.37
9.0270	Pipe	Δ	146 7336	9.95	5.47	1.37
18.0244	Lever		146 7340			
54.0133	Switch	Δ	146 7341	2.45	1.47	.37
12.2033	Shield	Δ	146 7384	1.75	1.05	.26
17.1820	Bracket	Δ	146 7406	.85	.51	.13
12.1136	Cross		146 7426	.45	.27	.07
33.2112	Screw		146 7427	.05	.03	.01
10.0097	Hose		146 7433	.40	.24	.06
14.2285	Light	Δ	146 7447	2.00	1.20	.30
10.0038	Clip	Δ	146 7457	.10	.06	.02
7.2830	Clip	Δ	146 7485	.10	.06	.02
7.2830	Clip	Δ	146 7487	.10	.06	.02
7.2813	Sleeve		146 7489	.25	.15	.04
4.5884	Pipe		146 7496	.75	.45	.11
7.5860	Clip		146 7571	.10	.06	.02
17.0141	Bumper		146 7577	.70	.42	.11
54.0165	Clip	Δ	146 7581	.20	.12	.03
55.0221	Pad		146 7582	1.05	.63	.16
55.0221	Pad		146 7583	1.05	.63	.16
54.0181	Bracket	Δ	146 7586	.75	.45	.11
54.0179	Clip	Δ	146 7595	.10	.06	.02
10.0821	Bracket		146 7597	.40	.24	.06
10.0821	Bracket		146 7598	.40	.24	.06
54.0176	Pipe	Δ	146 7599	7.50	4.50	1.13
3.0240	Retainer		146 7602	.40	.24	.06
4.5040	Head	Δ	146 7629	2.75	1.65	.41
4.5015	Bolt	Δ	146 7636	.65	.39	.10
4.5015	Bolt	Δ	146 7638	.50	.30	.08
54.0179	Clip	Δ	146 7640	.25	.09	.02
55.0021	Nut		146 7642	.10	.06	.02
54.0182	Bracket	Δ	146 7658	.50	.30	.08
54.0176	Pipe	Δ	146 7666	7.50	4.50	1.13
54.0176	Pipe	Δ	146 7667	6.45	3.87	.97
54.0177	Sleeve		146 7672	.35	.21	.05
55.0231	Cover		146 7678	.30	.18	.05
12.2700	Pipe	Δ	146 7696	.45	.27	.07
10.0068	Bracket		146 7727	.90	.54	.14
4.4090	Rod		146 7732	2.40	1.44	.36
17.2278	Plate		146 7739	.15	.09	.02
17.2275	Guard		146 7742	5.25	3.15	.79
10.0120	Seal	Δ	146 7744	1.85	1.11	.28
17.2275	Guard		146 7755	10.25	6.15	1.54
17.2275	Guard		146 7763	1.75	.88	.22
7.2814	Clamp	Δ	146 7786	.15	.09	.02
17.2300	Tank	Δ	146 7806	24.95	14.97	3.74
11.0470	Member		146 7837	32.50	19.50	x
11.0621	Cross Mem.		146 7846	12.95	7.77	1.94
11.0010	Frame		146 7882	415.00	269.75	x
17.2015	Bracket	Δ	146 7892	3.50	2.10	.53
17.2015	Bracket	Δ	146 7893	3.50	2.10	.53
17.1200	Stabilizer		146 7900	6.50	3.90	.98
38.6844	Hose		146 7907	2.50	1.50	.38
17.2265	Clip	Δ	146 7909	.35	.21	.05
11.0792	Bar	Δ	146 7929	3.50	2.10	.53
11.0792	Bar	Δ	146 7930	3.50	2.10	.53
17.2015	Bracket	Δ	146 7937	3.50	2.10	.53
17.2015	Bracket	Δ	146 7938	3.50	2.10	.53
10.0049	Name Plate	Δ	146 7985	.65	.39	.10

PARTS AND ACCESSORIES NUMERICAL PRICE LIST

MASTER GROUP NO.	PART NAME		PART NO.	LIST PRICE	DIST.— DEALER PRICE	WHLSE. COMP.
7.5740	Clip	Δ	146 7988	.10	.06	.02
11.0575	Cross Mem.		146 8021	10.75	6.45	1.61
55.0053	Crest	Δ	146 8022	.95	.57	.14
22.2310	Rod		146 8031	.75	.45	.11
22.2324	Nut		146 8032	1.05	.63	.16
10.0021	Seal		146 8039	2.75	1.65	.41
10.0021	Seal		146 8040	2.75	1.65	.41
12.4128	Switch	Δ	146 8046	3.50	2.10	x
12.3955	Pump	Δ	146 8047	78.25	46.95	x
12.1218	Spacer		146 8051	.20	.12	.03
12.3989	Cover		146 8073	1.35	.81	.20
12.3966	Reinf.	Δ	146 8074	5.50	3.30	.83
12.3970	Gasket	Δ	146 8075	.20	.12	.03
10.0033	Molding	Δ	146 8076	9.75	5.85	1.46
10.0333	Molding	Δ	146 8077	9.75	5.85	1.46
10.0038	Plate	Δ	146 8083	.45	.27	.07
20.0927	Knob		146 8170	.70	.42	.11
20.0927			146 8171	.70	.42	.11
20.0927	Knob		146 8173	.70	.42	.11
20.0927	Knob		146 8174	.70	.42	.11
17.2265	Clip		146 8249	.05	.03	.01
7.5630	Block		146 8314	.90	.54	.14
38.5400	Motor	Δ	146 8322	11.75	7.05	1.76
4.5900	Tee		146 8496	1.10	.66	.17
9.0012	Muffler	Δ	146 8527	13.50	7.43	1.86
11.0786	Reinf.	Δ	146 8529	1.25	.75	.19
55.0560	Rod	Δ	146 8556	11.75	7.05	1.76
55.0550	Tube	Δ	146 8557	5.25	3.15	.79
55.0680	Housing	Δ	146 8558	6.00	3.60	.90
55.0555	Grommet	Δ	146 8559	1.50	.90	.23
55.0578	Washer		146 8565			
17.2265	Clip		146 8569	.10	.06	.02
7.2930	Shield		146 8670	.10	.06	.02
9.0013	Baffle	Δ	146 8671	.10	.06	.02
12.4155	Support		146 8710			
12.2815	Pipe		146 8711	.75	.45	.11
14.2172	Knob		146 8913			
14.2172	Knob		146 8914			
14.2172	Knob		146 8915			
14.2172	Knob		146 8916			
14.2172	Knob		146 8917			
7.3050	Ammeter	Δ	150 1811	12.40	7.44	2.23
3.1840	Insulator		150 1818	.45	.27	.08
8.3563	Unit	Δ	150 8566	67.50	40.50	12.15
3.1840	Insulator	Δ	150 8606	.65	.39	.12
8.3560	Switch	Δ	150 8624	2.40	1.44	.43
17.2310	Switch	Δ	150 8641	18.85	11.31	3.39
6.1498	Gauge	Δ	151 3301	37.25	22.35	6.70
6.1560	Gauge	Δ	151 3402	12.95	7.77	2.33
12.3165	Float	Δ	151 8565	37.80	22.68	6.80
3.1840	Insulator		151 8654	.65	.39	.12
8.3550	Gauge	Δ	151 8655	28.85	17.31	5.19
12.3195	Unit	Δ	151 8656	14.80	8.88	2.66
12.1210	Elbow		155 2989			
3.1460	Body		158 4584	30.71	18.43	5.53
3.1815	Dial		158 4622	7.65	4.59	1.38
3.1815	Dial		158 4628	8.15	4.89	1.47
3.1440	Cap		158 4631	3.75	2.25	.67
3.1440	Cap		158 4634	3.75	2.25	.67
3.1463	Body		158 4642	12.25	7.35	2.20
3.1463	Body		158 4643	11.90	7.14	2.14
7.0118	Gasket	Δ	183 5457	.08	.05	.02
7.0082	Washer	Δ	187 2618	.10	.06	.02
7.0241	Brush	Δ	190 6911	1.60	.96	.27
7.0355	Holder	Δ	190 9989	1.90	1.14	.34
7.0355	Holder	Δ	190 9993	1.90	1.14	.34
7.0226	Brushing	Δ	190 9995	.09	.05	.02
7.0043	Band	Δ	191 0011	.75	.45	.13
7.0118	Gasket	Δ	191 0014	.13	.08	.03
7.0264	Spring	Δ	191 0033	.22	.13	.05
7.0090	Collar	Δ	191 0035	.50	.30	.09
7.0038	Fan	Δ	191 0036	2.30	1.38	.41
7.0054	Frame	Δ	191 4501	9.50	5.70	1.68
7.0375	Condenser	Δ	192 4466			
7.0206	Coil	Δ	193 5137	10.25	6.15	1.81
7.0206	Coil	Δ	193 5138	10.25	6.15	1.81
7.0172	Armature	Δ	193 6778	95.00	57.00	16.81
7.2775	Plunger	Δ	193 6810	1.35	.81	.24
7.2780	Boot	Δ	193 6817	3.35	2.01	.59
7.2213	Boot	Δ	193 6818	2.40	1.44	.43
7.2290	Housing	Δ	193 6819	20.00	12.00	3.54
7.0023	Pulley	Δ	193 7183	7.85	4.71	1.39
7.0054	Frame	Δ	193 7468	8.95	5.37	1.59
14.2010	Switch	Δ	199 5078	5.15	3.09	.91
20.2195	Switch	Δ	199 8170	9.15	5.49	1.62
31.4965	Switch	Δ	199 8176	1.00	.60	.18
7.2920	Block	Δ	199 8817	.60	.36	.11
7.3265	Horn	Δ	199 9589	17.45	10.47	3.09
7.2804	Cable	Δ	296 6630	13.95	9.07	x
7.2910	Strap	Δ	296 6631	4.25	2.55	.64
7.2808	Cable	Δ	296 6632	4.50	2.70	.68
7.2820	Strap	Δ	296 6633	2.40	1.44	.36
54.0280	Wire		296 6968	1.50	.90	.23
7.5730	Harness		296 7251	103.75	67.44	x
54.0115	Heater		313 6770	57.50	34.50	8.63
54.0115	Heater		313 6771	57.50	34.50	8.63
54.0120	Core		313 6801	12.80	7.68	1.92
54.0120	Core		313 6802	12.25	7.35	1.84
6.0736	Core	Δ	313 6992	83.95	50.37	12.59
54.0115	Heater		313 7877	48.50	29.10	7.28
54.0150	Valve	Δ	313 7884	16.50	9.90	2.48
54.0142	Core		313 7911	27.50	16.50	4.12
10.0010	Fender	Δ	351 0582	110.00	66.00	x
10.0010	Fender	Δ	351 0583	110.00	66.00	x
13.0030	Panel	Δ	351 0588	94.85	56.91	14.23
6.0759	Support		351 0598	29.50	19.18	x
10.0820	Shield		351 0599	79.50	47.70	x
10.0820	Shield		351 0600	79.50	47.70	x
13.0091	Hinge	Δ	351 0664	11.95	7.17	1.79
13.0091	Hinge	Δ	351 0665	11.95	7.17	1.79
13.0093	Box		351 0666	5.95	3.57	.89
13.0093	Box		351 0667	5.95	3.57	.89
4.4005	Bracket		351 0680	3.25	1.95	.49

PARTS AND ACCESSORIES NUMERICAL PRICE LIST

MASTER GROUP NO.	PART NAME		PART NO.	LIST PRICE	DIST.—DEALER PRICE	WHLSE. COMP.
7.1370	Bracket		351 0681	1.95	1.17	.29
17.1980	Piston	Δ	351 0694	8.75	5.25	1.31
18.0116	Bracket		351 0698	1.40	.84	.21
18.0116	Bracket		351 0699	1.25	.75	.19
17.1980	Piston	Δ	351 0713	10.95	6.57	1.64
17.1400	Link		351 0721			
17.1500	Yoke		351 0722			
18.0100	Jacket		351 0731	14.50	8.70	2.18
20.2150	Shaft		351 0734	15.75	9.45	2.36
14.0731	Retainer	Δ	351 0760	2.85	1.71	.43
14.0731	Retainer	Δ	351 0761	2.85	1.71	.43
14.1939	Clamp		351 0771	.75	.45	.11
14.1939	Clamp		351 0772	.75	.45	.11
33.0260	Door	Δ	351 0790	6.75	4.05	1.01
6.1253	Grille	Δ	351 0807	93.50	56.10	x
11.0814	Escutcheon	Δ	351 0816	3.50	2.28	x
10.0033	Molding	Δ	351 0817	7.95	4.77	1.19
2.0960	Bracket		351 0819	4.25	2.55	.64
12.1850	Pedal	Δ	351 0833	7.95	4.77	1.19
10.0067	Plate		351 0836	10.25	6.66	x
10.0067	Plate		351 0837	10.25	6.66	x
10.0067	Plate		351 0838	7.75	4.65	1.16
10.0067	Plate		351 0839	7.75	4.65	1.16
10.0067	Plate		351 0840	9.75	5.85	1.46
10.0067	Plate		351 0841	9.75	5.85	1.46
2.0010	Axle Hsng.		351 0850	95.50	57.30	14.33
10.0067	Plate		351 0860	5.95	3.57	.89
10.0067	Plate		351 0861	5.95	3.57	.89
10.0092	Box		351 0862	6.25	3.75	.94
17.2000	Dome		351 0877	12.95	7.77	1.94
6.1263	Support	Δ	351 0911	.40	.24	.06
6.1263	Support	Δ	351 0912	.40	.24	.06
6.1318	Fin	Δ	351 0913	1.95	1.17	x
6.1318	Fin	Δ	351 0914	6.50	3.90	x
6.1318	Fin	Δ	351 0915	5.25	3.15	x
6.1318	Fin	Δ	351 0916	2.65	1.59	x
6.1263	Support	Δ	351 0921	.45	.27	.07
6.1263	Support	Δ	351 0922	.45	.27	.07
55.0014	Support		351 0935	.65	.39	.10
14.1978	Plate	Δ	351 0936	9.95	6.47	x
7.2955	Frame		351 0940	4.50	2.70	.68
9.0293	Support	Δ	351 0943	1.25	.75	.19
9.0293	Support	Δ	351 0944	1.25	.75	.19
7.3277	Support		351 0962	4.25	2.55	.64
17.2000	Dome		351 0964	12.95	7.77	1.94
14.1947	Frame	Δ	351 0965			
9.0293	Support	Δ	351 0967	1.35	.81	.20
10.0067	Plate		351 0980	2.85	1.71	.43
10.0067	Plate		351 0981	2.85	1.71	.43
54.0183	Support	Δ	351 0995	.45	.27	.07
55.0510	Bracket	Δ	351 1034	1.25	.75	.19
9.0293	Support	Δ	351 1038	.75	.45	.11
9.0293	Support	Δ	351 1039	.75	.45	.11
14.0320	Door	Δ	351 1048	16.50	10.73	x
14.0320	Door	Δ	351 1049	16.50	10.73	x
10.0040	Ventltr.	Δ	351 1107			
10.0040	Ventltr.	Δ	351 1108			
9.0293	Support	Δ	351 1113	1.25	.75	.19
9.0293	Support	Δ	351 1114	1.25	.75	.19
35.1037	Support		351 1125	1.95	1.17	.29
35.1037	Support		351 1126	1.95	1.17	.29
10.0100	Panel	Δ	351 1240			
6.1318	Fin		351 1335			
2.0289	Diff.		351 1383	183.00	109.80	18.67
	Allowance			57.15	34.29	
	Less Allowance			125.85	75.51	18.67
12.3250	Fuel Tank	Δ	363 0757	42.50	25.50	3.83
8.2283	Cyl. Head	Δ	363 0766	73.95	44.37	11.09
8.0025	Crankcase		363 0794	285.00	185.25	x
8.0025	Crankcase		363 0796	345.00	224.25	28.03
11.0471	Bracket		363 0920			
11.0471	Bracket		363 0921			
17.2303	Bolt	Δ	372 2133	.15	.09	.02
31.2400	Handle	Δ	423 1494	5.95	3.57	x
31.2400	Handle	Δ	423 1495	5.95	3.57	x
31.1410	Regulator	Δ	423 2134	23.00	13.80	3.45
31.1410	Regulator	Δ	423 2135	23.00	13.80	3.45
31.7560	Weathrstrp.	Δ	423 2140	4.35	2.61	.65
31.7560	Weathrstrp.	Δ	423 2141	4.35	2.61	.65
31.1400	Regulator		423 2150	22.00	13.20	3.30
31.1400	Regulator	Δ	423 2151	22.00	13.20	3.30
31.7550	Channel	Δ	423 2152	10.50	6.83	x
31.7550	Channel	Δ	423 2153	10.50	6.83	x
31.1230	Weathrstrp.		423 2218	1.30	.78	.20
31.1230	Weathrstrp.	Δ	423 2222	1.35	.81	.20
31.1230	Weathrstrp.	Δ	423 2223	1.35	.81	.20
33.5020	Reflector	Δ	423 2476	8.50	5.10	1.28
33.5020	Reflector	Δ	423 2477	8.50	5.10	1.28
33.5015	Glass		423 2478	1.75	1.05	.26
33.5250	Switch	Δ	423 2479	.70	.42	.11
31.0980	Channel		423 2492	22.25	13.35	3.34
31.0980	Channel		423 2493	22.25	13.35	3.34
31.0980	Channel		423 2496	34.95	20.97	5.24
31.0980	Channel		423 2497	34.95	20.97	5.24
31.0964	Stop		423 2501	.70	.42	.11
31.0970	Channel		423 2570	17.50	10.50	2.63
31.0970	Channel		423 2571	17.50	10.50	2.63
31.0970	Channel		423 2574	31.50	18.90	4.73
31.0970	Channel		423 2575	31.50	18.90	4.73
31.1100	Channel		423 2578	11.75	7.64	x
31.1100	Channel		423 2579	11.75	7.64	x
31.4555	Box		423 2612	13.50	8.78	x
31.4555	Box		423 2613	13.50	8.78	x
31.4556	Strap		423 2619	13.50	8.78	x
31.0981	Weathrstrp.		423 2840	4.50	2.70	.68
31.0981	Weathrstrp.		423 2841	4.50	2.70	.68
31.7672	Motor	Δ	423 3392	20.50	12.30	x
31.4556	Strap		423 4124	13.50	8.78	x
31.4952	Regulator	Δ	423 4186	70.95	46.12	x
31.5105	Plate		423 4199	3.25	1.95	.49
31.4951	Motor		423 4201			
31.2354	Clip		423 4831	.06	.04	.01
31.4562	Cover		423 4842	1.75	1.05	.26
31.4562	Cover		423 4843	1.75	1.05	.26
33.5021	Socket		423 4956	1.35	.81	.20
31.4965	Switch	Δ	423 5142	4.25	2.55	.64
31.4965	Switch	Δ	423 5147	10.25	6.15	1.54
31.2410	Handle	Δ	423 6250	5.95	3.57	x
31.2410	Handle	Δ	423 6251	5.95	3.57	x
31.2435	Support		423 6418	2.95	1.92	x

PARTS AND ACCESSORIES NUMERICAL PRICE LIST

MASTER GROUP NO.	PART NAME	PART NO.	LIST PRICE	DIST.—DEALER PRICE	WHLSE. COMP.
31.2435	Support	423 6419	2.95	1.92	x
31.2435	Support	423 6432	4.75	3.09	x
31.2435	Support	423 6433	4.75	3.09	x
31.1670	Switch	Δ 423 6622	3.25	1.95	.49
31.1630	Spring	423 7120	.20	.12	.03
31.1630	Spring	423 7121	.20	.12	.03
31.1630	Spring	423 7123	.35	.21	.05
34.0001	Cloth	425 9608 yd.	78.85	49.30	x
34.0001	Cloth	425 9610 yd.	75.85	49.30	x
34.0001	Cloth	425 9611			
34.0001	Cloth	425 9612 yd.	75.85	49.30	x
34.0001	Cloth	425 9613 yd.	75.85	49.30	x
34.0001	Cloth	425 9614 yd.	61.00	39.65	x
34.0001	Cloth	425 9615 yd.	61.00	39.65	x
34.0001	Cloth	425 9616 yd.	61.00	39.65	x
34.0001	Cloth	425 9617 yd.	61.00	39.65	x
34.0001	Cloth	425 9618 yd.	75.85	49.30	x
34.0001	Cloth	425 9619 yd.	75.85	49.30	x
34.0001	Cloth	425 9620 yd.	75.85	49.30	x
34.0001	Cloth	425 9621 yd.	75.85	49.30	x
34.0001	Cloth	425 9622 yd.	57.50	34.50	8.63
34.0001	Cloth	425 9623 yd.	57.50	34.50	8.63
34.0001	Cloth	425 9624 yd.	57.50	34.50	8.63
34.0001	Cloth	425 9625 yd.	57.50	34.50	8.63
34.0001	Cloth	425 9626 yd.	38.75	23.25	5.81
34.0001	Cloth	425 9627 yd.	38.75	23.25	5.81
34.0001	Cloth	425 9628 yd.	38.75	23.25	5.81
34.0001	Cloth	425 9629 yd.	38.75	23.25	5.81
34.9510	Lining	425 9630 yd.	32.50	19.50	4.88
34.9510	Lining	425 9631 yd.	32.50	19.50	4.88
34.9510	Lining	425 9632 yd.	32.50	19.50	4.88
34.9510	Lining	425 9633 yd.	32.50	19.50	4.88
34.0005	Lea. Sq. Ft.	425 9634	4.50	2.70	.68
34.0005	Lea. Sq. Ft.	425 9635	4.50	2.70	.68
34.0005	Lea. Sq. Ft.	425 9636	4.50	2.70	.68
34.0005	Lea. Sq. Ft.	425 9637	4.50	2.70	.68
34.0005	Lea. Sq. Ft.	425 9638	4.50	2.70	.68
34.0005	Lea. Sq. Ft.	425 9639	4.50	2.70	.68
34.0005	Lea. Sq. Ft.	425 9640	4.50	2.70	.68
34.0005	Lea. Sq. Ft.	425 9641	4.50	2.70	.68
34.0004	Fabric	425 9642 yd.	8.95	5.37	1.34
34.0004	Fabric	425 9643 yd.	8.95	5.37	1.34
34.0004	Fabric	425 9644 yd.	8.95	5.37	1.34
34.0004	Fabric	425 9645 yd.	8.95	5.37	1.34
33.1000	Compt. Box	426 8126			
33.1000	Compt. Box	426 8127			
33.1000	Compt. Box	426 8128			
33.1000	Compt. Box	426 8129			
34.8200	Headlining	427 1344	65.00	42.25	x
34.8200	Headlining	427 1345	45.50	27.30	6.83
34.5550	Trim Panel	427 1346	27.50	16.50	4.13
34.5550	Trim Panel	427 1347	27.50	16.50	4.13
34.5560	Trim Cover	427 1349	14.50	8.70	2.18
34.5560	Trim Cover	427 1350	14.50	8.70	2.18
34.3750	Arm Rest	427 1352	23.95	14.37	x
34.3750	Arm Rest	427 1353	33.50	20.10	x
34.8745	Trim Panel	427 1354	17.50	10.50	2.63
34.8745	Trim Panel	427 1355	17.50	10.50	2.63
34.4240	Carpet	427 1358	20.00	12.00	x
34.4240	Carpet	427 1359	20.00	12.00	x
34.8510	Trim Cover	427 1360	110.00	71.50	x
34.8510	Trim Cover	427 1361	140.00	91.00	x
34.8500	Trim Cover	427 1362	120.00	72.00	x
34.8500	Trim Cover	427 1363	135.00	81.00	x
34.8540	Trim Cover	427 1366	33.00	21.45	x
34.8540	Trim Cover	427 1367	33.00	21.45	x
34.4160	Trim Cover	427 1370	7.95	4.77	1.19
34.8515	Trim Cover	427 1371	36.50	23.73	x
34.8515	Trim Cover	427 1372	26.50	17.23	x
34.8600	Trim	427 1373	79.50	47.70	x
34.8600	Trim	427 1374	59.50	35.70	x
34.9550	Button	427 1375	.45	.27	.07
34.9550	Button	427 1376	.35	.21	.05
34.8553	Trim Cover	427 1377	47.50	28.50	x
34.8553	Trim Cover	427 1378	47.50	28.50	x
34.8553	Trim Cover	427 1379	67.50	40.50	x
34.8553	Trim Cover	427 1380	67.50	40.50	x
34.8550	Trim Cover	427 1381	95.00	57.00	x
34.8550	Trim Cover	427 1382	115.00	69.00	x
34.8560	Trim Cover	427 1383	31.50	18.90	x
34.8560	Trim Cover	427 1384	31.50	18.90	x
34.8560	Trim Cover	427 1385	31.50	18.90	x
34.8560	Trim Cover	427 1386	31.50	18.90	x
34.8555	Trim Cover	427 1387	24.50	14.70	x
34.8555	Trim Cover	427 1389	8.25	4.95	x
34.8570	Trim Cover	427 1390	20.50	12.30	x
34.9500	Trim	427 1399	27.50	16.50	x
34.9500	Trim	427 1400	4.15	2.49	x
34.9000	Trim	427 1402	20.25	12.15	3.04
34.8015	Trim Panel	427 1403	37.50	24.38	x
34.8015	Trim Panel	427 1404	37.50	24.38	x
34.8045	Trim Panel	427 1405	34.50	20.70	5.18
34.8045	Trim Panel	427 1406	34.50	20.70	5.18
34.4060	Carpet	427 1407	80.00	48.00	x
34.4280	Carpet	427 1408			
34.4200	Carpet	427 1409	20.00	12.00	x
34.4200	Carpet	427 1410	20.00	12.00	x
34.4060	Carpet	427 1411	245.00	159.25	x
34.4280	Carpet	427 1412			
34.4200	Carpet	427 1413			
34.4200	Carpet	427 1414			
34.9500	Trim	427 1415	35.75	21.45	x
34.9500	Trim	427 1416	7.25	4.35	x
34.9500	Trim	427 1417	7.25	4.35	x
34.9500	Trim	427 1418	7.95	4.77	x
34.9500	Trim	427 1419	4.15	2.49	x
34.9500	Trim	427 1420	4.75	2.85	x
34.9500	Trim	427 1421			
34.9500	Trim	427 1422			
34.9500	Trim	427 1423	15.50	9.30	x
34.9500	Trim	427 1424	14.75	8.85	x
34.9500	Trim	427 1425	8.95	5.37	x
34.9500	Trim	427 1426	5.50	3.30	x
34.9500	Trim	427 1427	5.50	3.30	x
34.9500	Trim	427 1428	5.25	3.15	x
34.9500	Trim	427 1429	4.50	2.70	x

PARTS AND ACCESSORIES NUMERICAL PRICE LIST

MASTER GROUP NO.	PART NAME	PART NO.	LIST PRICE	DIST.— DEALER PRICE	WHLSE. COMP.
34.9500	Trim	427 1430	3.25	1.95	x
34.9500	Trim	427 1431	2.05	1.23	x
34.9500	Trim	427 1432	42.75	25.65	x
34.9500	Trim	427 1433	5.25	3.15	x
34.9500	Trim	427 1434	4.25	2.55	x
34.0005	Lea. Sq. Ft.	427 1437	5.25	3.15	.79
34.0005	Lea. Sq. Ft.	427 1438	5.25	3.15	.79
34.9510	Lining	427 1439 yd.	32.50	19.50	4.88
34.0004	Fabric	427 1440 yd.	9.75	5.85	1.46
34.0004	Trim	427 1443 yd.	9.75	5.85	1.46
34.0004	Trim	427 1444 yd.	9.75	5.85	1.46
34.3753	Arm Rest	427 1571	18.50	11.10	2.78
34.3753	Arm Rest	427 1572	18.50	11.10	2.78
34.8700	Trim Cover	427 2493			
34.8700	Trim Cover	427 2494			
35.1585	Retainer	456 2227	.10	.06	.02
31.5300	Bumper	456 3172	.50	.30	.08
31.0987	Stud	457 8800	.10	.06	.02
34.0323	Screw	459 4386	.10	.06	.02
31.5300	Bumper	463 7488			
31.3965	Screw	466 7286	.08	.05	.01
35.1590	Retainer	467 2958	.08	10/.48	10/.12
35.0010	Brace	467 5760	10.50	6.30	1.58
35.0010	Brace	467 5761	10.50	6.30	1.58
35.1018	Panel	467 5832	24.50	14.70	3.68
35.1018	Panel	467 5833	24.50	14.70	3.68
35.5510	Roof Bow	467 5881	6.75	4.05	1.01
31.4856	Plate	467 5905	.40	.24	.06
31.0987	Stud	467 6841	.15	.09	.02
35.1075	Gutter Δ	468 2271	3.95	2.37	.59
35.1075	Gutter Δ	468 2272	3.95	2.37	.59
35.1075	Gutter	468 2273	2.90	1.74	.44
35.1075	Gutter	468 2274	2.90	1.74	.44
35.1015	Panel	468 3593	10.75	6.45	1.61
35.1015	Panel	468 3594	10.75	6.45	1.61
35.5460	Rail	468 5586	9.25	5.55	1.39
35.5460	Rail	468 5587	9.25	5.55	1.39
35.1015	Panel	468 5719	12.75	7.65	1.91
35.1015	Panel	468 5720	12.75	7.65	1.91
37.1220	Glass Δ	468 5832	75.00	48.75	x
35.0010	Brace	468 5853	3.00	1.80	.45
35.1200	Panel	468 5911	450.00	292.50	x
38.0040	Glass Δ	468 5914	270.00	175.50	x
35.1240	Extension	468 5932	5.75	3.45	.86
35.1240	Extension	468 5933	5.75	3.45	.86
35.1035	Panel	468 5934	22.75	13.65	3.41
35.1240	Extension	468 5961	27.50	16.50	4.13
35.1240	Extension	468 5962	27.50	16.50	4.13
35.5460	Rail	468 5974	54.75	32.85	8.21
35.5460	Rail	468 5975	54.75	32.85	8.21
38.0047	Grille Δ	468 6420	121.00	78.65	x
35.1015	Panel	468 6446	79.50	47.70	x
35.1015	Panel	468 6447	79.50	47.70	x
35.0995	Plate	468 6450	15.25	9.15	2.29
35.0995	Plate	468 6451	15.25	9.15	2.29
35.1035	Panel	468 6765	49.50	32.18	x
31.4810	Plate	468 6802	3.25	1.95	.49
35.0160	Frame	468 6814	18.00	11.70	x
35.0100	Pillar	468 6823	55.00	33.00	x
35.0100	Pillar	468 6824	55.00	33.00	x
37.1290	Weathrstrp. Δ	468 6876	8.65	5.19	1.30
31.4970	Lock Δ	468 6877	54.50	32.70	8.18
34.0110	Frame	468 6968	85.00	55.25	x
35.1017	Panel	468 6990	17.50	10.50	2.63
35.1017	Panel	468 6991	17.50	10.50	2.63
35.1620	Molding Δ	468 7038	13.50	8.10	2.03
35.1580	Molding	468 7659	24.50	14.70	3.68
35.1620	Molding Δ	468 7661	9.80	5.88	1.47
37.1520	Molding Δ	468 7662	25.50	15.30	3.06
37.1520	Molding Δ	468 7663	25.50	15.30	3.06
37.1550	Escutcheon Δ	468 7664	2.00	1.20	.30
37.1550	Escutcheon Δ	468 7665	2.00	1.20	.30
35.0010	Brace	468 7787	2.50	1.50	.38
34.3100	Frame	468 7960	16.25	9.75	2.44
34.2350	Molding Δ	468 8177	7.25	4.35	1.09
34.0505	Molding	468 8216	15.95	9.57	2.39
34.0505	Molding	468 8217	15.95	9.57	2.39
35.0975	Panel	468 8243	2.75	1.65	.41
35.0975	Panel	468 8244	2.75	1.65	.41
31.0940	Glass Δ	468 8249	14.25	8.55	2.14
31.7520	Glass Δ	468 8250	3.50	2.10	.53
31.0600	Molding Δ	468 8260	9.50	5.70	1.43
31.0600	Molding Δ	468 8261	9.50	5.70	1.43
31.0610	Molding Δ	468 8262	10.50	6.30	1.58
31.0610	Molding Δ	468 8263	10.50	6.30	1.58
31.0990	Cam Δ	468 8310	.95	.62	x
31.0995	Cam Δ	468 8311	.75	.49	x
31.0995	Cam Δ	468 8312	.75	.49	x
31.0990	Cam Δ	468 8313	.50	.30	.08
31.0990	Cam Δ	468 8314	.40	.24	.06
31.0950	Glass Δ	468 8316	18.75	11.25	2.81
31.0710	Hinge	468 8317	89.50	58.18	x
31.0710	Hinge	468 8318	89.50	58.18	x
31.7530	Channel Δ	468 8339	52.25	31.35	7.84
31.7530	Channel Δ	468 8340	52.25	31.35	7.84
38.0135	Weathrstrp. Δ	468 8352	13.50	8.10	2.03
31.2110	Knob	468 8400	2.50	1.63	x
31.2330	Knob	468 8430	1.90	1.14	.29
31.2330	Handle	468 8461	2.00	1.20	.30
31.1230	Weathrstrp. Δ	468 8464	1.00	.60	.15
31.1230	Weathrstrp. Δ	468 8465	1.00	.60	.15
31.4575	Rod	468 8482	3.60	2.16	.54
31.4575	Rod	468 8483	3.60	2.16	.54
31.1730	Screw Δ	468 8526	.15	.09	.02
31.0710	Hinge	468 8625	72.00	54.00	x
31.0710	Hinge	468 8626	72.00	54.00	x
33.5830	Escutcheon	468 8635	3.60	2.16	.54
31.4410	Lid	468 8742	129.75	84.34	x
31.0984	Brace	468 8763	1.75	1.05	.26
33.5820	Bracket	468 8777	7.50	4.50	1.13
35.0975	Panel	468 8843	38.25	22.95	x
35.0975	Panel	468 8844	38.25	22.95	x
38.0045	Molding	468 8847	17.50	10.50	2.63
38.0045	Molding	468 8848	17.50	10.50	2.63
31.0985	Guide	468 8883	1.70	1.11	x
31.1500	Switch Δ	468 8890	6.95	4.17	1.04

PARTS AND ACCESSORIES NUMERICAL PRICE LIST

MASTER GROUP NO.	PART NAME		PART NO	LIST PRICE	DIST.—DEALER PRICE	WHLSE. COMP.
31.1500	Switch	Δ	468 8891	6.95	4.17	1.04
31.1500	Switch	Δ	468 8896	3.25	1.95	.49
38.0045	Molding	Δ	468 8978	11.50	6.90	1.73
38.0045	Molding	Δ	468 8979	11.50	6.90	1.73
31.0987	Stud		468 8981	.15	.09	.02
31.0966	Support	Δ	468 8985	2.50	1.50	.38
31.4950	Power Unit		468 8988	61.50	36.90	9.23
31.0580	Molding	Δ	468 9001	10.50	6.30	1.58
31.0580	Molding		468 9002	10.50	6.30	1.58
31.1500	Switch	Δ	468 9039	12.65	7.59	1.90
31.0985	Guide	Δ	468 9059	4.75	3.09	x
31.0985	Guide	Δ	468 9060	4.75	3.09	x
31.1510	Plate		468 9065	11.00	6.60	1.65
31.0580	Molding	Δ	468 9078	9.25	5.55	1.39
31.0580	Molding	Δ	468 9079	9.25	5.55	1.39
31.0580	Molding	Δ	468 9087	28.50	17.10	4.28
31.0580	Molding	Δ	468 9088	28.50	17.10	4.28
38.5550	Trans.	Δ	468 9090	12.25	7.35	1.84
38.5550	Trans.	Δ	468 9091	12.25	7.35	1.84
31.0985	Guide	Δ	468 9192	3.80	2.28	.57
31.0985	Guide	Δ	468 9193	3.80	2.28	.57
34.2660	Frame		468 9196	57.50	37.38	x
34.2660	Frame		468 9197	57.50	37.38	x
31.1510	Plate		468 9209	6.15	4.00	x
31.4260	Retainer	Δ	468 9214	7.00	4.20	1.05
31.4260	Retainer	Δ	468 9215	7.00	4.20	1.05
35.1810	Molding		468 9222	29.50	17.70	4.43
35.1810	Molding		468 9223	29.50	17.70	4.43
31.0350	Panel	Δ	468 9321	39.95	23.97	5.99
31.0350	Panel	Δ	468 9322	39.95	23.97	5.99
31.0360	Panel	Δ	468 9325	42.50	25.50	6.38
31.0360	Panel	Δ	468 9326	42.50	25.50	6.38
38.0165	Plate	Δ	468 9337	2.25	1.35	.34
38.0165	Plate	Δ	468 9338	2.25	1.35	.34
31.1510	Plate		468 9342	9.50	6.18	x
31.0962	Plate	Δ	468 9347	1.35	.81	x
31.0962	Plate	Δ	468 9348	1.35	.81	x
31.0962	Plate	Δ	468 9349	1.45	.87	x
31.0962	Plate	Δ	468 9350	1.45	.87	x
38.5515	Gasket	Δ	468 9356	.15	.09	.02
35.0997	Support		468 9385	3.50	2.10	.53
31.4350	Weathrstrp.	Δ	468 9632	6.50	3.90	.98
31.4350	Weathrstrp.	Δ	468 9633	6.50	3.90	.98
31.4350	Weathrstrp.	Δ	468 9648	1.75	1.05	.26
38.4100	Outlet		468 9667	2.25	1.35	.34
38.4100	Outlet		468 9668	2.25	1.35	.34
35.0050	Weathrstrp.		468 9677	2.35	1.41	.35
35.0737	Hose		468 9678	.35	.21	.05
31.4360	Weathrstrp.	Δ	468 9679	3.00	1.80	.45
31.4360	Weathrstrp.	Δ	468 9680	3.00	1.80	.45
33.1170	Catch		468 9789	.80	.48	.12
31.0580	Molding	Δ	468 9939	1.75	1.05	.26
33.1940	Support	Δ	468 9952	18.50	11.10	2.78
33.1805	Sunshade		468 9953	51.50	33.48	x
33.1805	Sunshade		468 9954	51.50	33.48	x
34.8025	Molding		469 0054	80.00	52.00	7.80
34.8055	Molding		469 0056	36.50	23.73	x
34.8065	Retainer		469 0085	.40	.24	.06
33.1150	Link		469 0173	5.00	3.00	.75
33.1150	Link		469 0174	5.00	3.00	.75
35.9460	Conduit		469 0303	4.50	2.70	.68
35.9460	Conduit		469 0304	4.50	2.70	.68
35.9460	Conduit		469 0305	2.25	1.35	.34
35.9460	Conduit		469 0306	2.25	1.35	.34
35.1034	Support		469 0317	6.80	4.08	1.02
35.0015	Panel		469 0496	12.50	8.13	x
35.0015	Panel		469 0497	12.50	8.13	x
35.9464	Guide		469 0501	1.25	.75	.19
35.9467	Cover		469 0503	4.25	2.55	.64
35.9467	Cover		469 0504	4.25	2.55	.64
31.7555	Gutter		469 0505	1.30	.78	.20
31.7555	Gutter		469 0506	1.30	.78	.20
31.0964	Stop		469 0507	1.40	.84	.21
31.0964	Stop		469 0508	.75	.45	.11
35.1031	Door		469 0599	15.00	9.00	2.25
33.1120	Hinge		469 0648	15.50	10.08	x
31.2354	Clip		469 0667	.75	.45	.11
33.0070	Molding	Δ	469 0725	2.10	1.26	.32
33.0070	Molding	Δ	469 0726	2.10	1.26	.32
33.1950	Escutcheon		469 0741	2.95	1.77	.44
33.1950	Escutcheon		469 0742	2.95	1.77	.44
35.1017	Panel		469 0858	.95	.57	.14
35.1017	Panel		469 0859	.95	.57	.14
38.0070	Clip	Δ	469 1199	.15	.09	.02
31.2413	Gasket	Δ	469 1285	.10	.06	.02
31.2413	Gasket	Δ	469 1286	.08	.05	.01
31.2413	Gasket	Δ	469 1287	.08	.05	.01
31.2331	Ferrule		469 1587	1.35	.81	.20
35.0005	Cowl		469 1799	195.00	126.75	x
33.0070	Molding	Δ	469 1812	26.00	15.60	3.90
31.4950	Power Unit		469 2175	97.50	63.38	x
55.0306	Grille		469 2262	32.50	19.50	4.88
34.4010	Insulator		469 2274	22.50	13.50	3.38
35.0997	Support		469 2277	2.60	1.56	.39
35.1237	Plate		469 2383	11.25	6.75	1.69
35.1237	Plate		469 2384	11.25	6.75	1.69
33.5800	Robe Cord		469 2572	14.25	8.55	2.14
33.5800	Robe Cord		469 2573	14.25	8.55	2.14
33.5800	Robe Cord		469 2575	14.25	8.55	2.14
33.5800	Robe Cord		469 2576	14.25	8.55	2.14
33.1330	Container		469 2815	3.25	1.95	.49
33.1330	Container		469 2816	30.25	19.66	x
31.7670	Regulator		469 3052			
31.7670	Regulator		469 3053			
34.8015	Panel		469 3396			
34.8015	Panel		469 3397			
34.3760	Plate		469 3408	4.50	2.70	.68
34.3760	Plate		469 3409	4.50	2.70	.68
34.8056	Retainer		469 3522	1.00	.60	.15
34.3760	Plate		469 3622	2.45	1.47	.37
34.3760	Plate		469 3623	2.45	1.47	.37
34.8045	Panel		469 3654			
34.8045	Panel		469 3655			

PARTS AND ACCESSORIES NUMERICAL PRICE LIST

MASTER GROUP NO.	PART NAME		PART NO	LIST PRICE	DIST.— DEALER PRICE	WHLSE. COMP.
34.8745	Panel		469 3662			
34.8745	Panel		469 3663			
33.2470	Retainer	Δ	469 3665	5.00	3.00	.75
34.0040	Spring		469 3672	66.50	39.90	x
34.0100	Spring		469 3673	55.00	33.00	x
34.2320	Spring		469 3674	32.50	19.50	x
34.2320	Spring		469 3675	32.50	19.50	x
34.2670	Spring		469 3676	36.50	21.90	x
34.2670	Spring		469 3677	36.50	21.90	x
31.0780	Screw	Δ	469 3959	.15	.09	.02
34.0520	Spring		469 4303	3.45	2.07	.52
34.0520	Spring		469 4304	3.45	2.07	.52
34.0202	Relay	Δ	469 4361	5.95	3.57	.89
38.0090	Retainer		469 4382	.15	.09	.02
35.1818	Clip		469 4706	.30	.18	.05
31.4250	Weathrstrp.	Δ	469 4711	15.25	9.15	2.29
31.4250	Weathrstrp.	Δ	469 4712	15.25	9.15	2.29
31.4863	Lock		469 4845			
34.0323	Screw		469 4880	2.25	1.35	.34
34.0323	Screw		469 4881	.80	.48	.12
35.1015	Panel		469 4887	151.50	98.48	x
35.1015	Panel		469 4888	151.50	98.48	x
31.4250	Weathrstrp.	Δ	469 4985	2.25	1.35	.34
31.5180	Support	Δ	469 5004	3.15	1.89	.47
35.5470	Molding		469 5087			
35.5470	Molding		469 5088			
37.1500	Molding		469 5097			
37.1500	Molding		469 5099			
37.1500	Molding		469 5101			
37.1500	Molding		469 5102			
35.0105	Reinf.		469 5156	6.50	3.90	.98
35.0105	Reinf.		469 5157	6.50	3.90	.98
33.7300	Grille		469 5169	29.95	19.47	x
33.7300	Grille		469 5170	29.95	19.47	x
31.1160	Weathrstrp.		469 5322	5.25	3.15	.79
31.1160	Weathrstrp.		469 5323	5.25	3.15	.79
35.9465	Plate		469 5344	2.35	1.41	.35
31.5165	Switch	Δ	469 5445	7.35	4.41	1.10
34.0620	Switch	Δ	469 5491	13.95	8.37	2.09
31.3950	Panel		469 5504	25.50	15.30	3.83
31.3950	Panel		469 5505	25.50	15.30	3.83
31.3950	Panel		469 5506	25.50	15.30	3.83
31.3950	Panel		469 5507	25.50	15.30	3.83
31.3950	Panel		469 5508	25.50	15.30	3.83
31.3950	Panel		469 5509	25.50	15.30	3.83
31.3950	Panel		469 5510	25.50	15.30	3.83
31.3950	Panel		469 5511	25.50	15.30	3.83
33.0003	Cover		469 5513	48.95	29.37	7.34
33.0003	Cover		469 5514	48.95	29.37	7.34
33.0003	Cover		469 5515	48.95	29.37	7.34
33.0003	Cover		469 5516	48.95	29.37	7.34
38.2850	Molding		469 5518	10.75	6.45	1.61
38.2850	Molding		469 5519	10.75	6.45	1.61
38.2850	Molding		469 5520	10.75	6.45	1.61
38.2850	Molding		469 5521	10.75	6.45	1.61
38.2850	Molding		469 5522	10.75	6.45	1.61
38.2850	Molding		469 5523	10.75	6.45	1.61
38.2850	Molding		469 5524	10.75	6.45	1.61
38.2850	Molding		469 5525	10.75	6.45	1.61
38.2850	Molding		469 5527	21.50	12.90	3.23
38.2850	Molding		469 5528	21.50	12.90	3.23
38.2850	Molding		469 5529	21.50	12.90	3.23
38.2850	Molding		469 5530	21.50	12.90	3.23
31.1512	Cover		469 5531	7.85	4.71	1.18
31.1512	Cover		469 5532	6.50	3.90	.98
31.1512	Cover		469 5533	6.75	4.05	1.01
31.0988	Shoe	Δ	469 5750	.70	.42	.11
34.4240	Carpet		469 6076			
34.4240	Carpet		469 6077			
34.4240	Carpet		469 6080			
34.4240	Carpet		469 6081			
34.4240	Carpet		469 6082			
34.4240	Carpet		469 6083			
34.4240	Carpet		469 6086			
34.4240	Carpet		469 6087			
33.2500	Retainer		469 6120	3.00	1.80	.45
34.3120	Spring		469 6124	15.50	9.30	2.33
34.2325	Pad		469 6146	24.95	14.97	3.74
34.0105	Pad		469 6149	34.95	20.97	5.24
34.3130	Pad		469 6150	10.95	6.57	1.64
31.7534	Stud		469 6278	.60	.36	.09
34.2675	Pad		469 6720	19.95	11.97	2.99
33.2450	Ash Tray		469 7309	5.25	3.15	.79
33.2510	Lighter		469 7348	4.75	2.85	.71
33.1100	Plate		469 7536	.80	.48	.12
35.1045	Shelf		469 7650	49.50	29.70	7.43
33.3000	Mirror		469 8060	59.50	38.68	x
33.1325	Case		469 8371	55.00	35.75	x
33.1325	Case		469 8372	55.00	35.75	x
33.1325	Case		469 8373	55.00	35.75	x
33.1325	Case		469 8374	55.00	35.75	x
33.3000	Mirror		469 8376	24.95	14.97	3.74
33.3000	Mirror		469 8377	24.95	14.97	3.74
33.3000	Mirror		469 8378	24.95	14.97	3.74
33.3000	Mirror		469 8379	24.95	14.97	3.74
33.2915	Notebook		469 8383	15.50	10.08	x
33.2915	Notebook		469 8384	15.50	10.08	x
33.2915	Notebook		469 8385	15.50	10.08	x
33.2915	Notebook		469 8386	15.50	10.08	x
34.0615	Control	Δ	469 8738	135.00	87.75	x
31.4350	Weathrstrp	Δ	469 8758	1.60	.96	.24
31.4350	Weathrstrp	Δ	469 8759	1.60	.96	.24
31.1712	Strip		469 8760	.50	.30	.08
31.5225	Harness		469 8823	27.50	16.50	4.13
34.6010	Molding		469 9638	22.50	13.50	3.38
34.6010	Molding		469 9639	22.50	13.50	3.38
34.0325	Rod		469 9700	127.00	82.55	x
38.0070	Clip		469 9705	.35	.21	.05
38.0070	Clip		469 9706	.35	.21	.05
38.0070	Clip		469 9707	.40	.24	.06
34.5570	Retainer		469 9754	.20	.12	.03
54.5798	Duct	Δ	469 9893	9.75	5.85	1.46
31.2800	Bumper	Δ	469 9999	.60	.36	.09
31.2810	Spacer		470 1093	.35	.21	.05

PARTS AND ACCESSORIES NUMERICAL PRICE LIST

MASTER GROUP NO.	PART NAME		PART NO	LIST PRICE	DIST.— DEALER PRICE	WHLSE. COMP.
31.0700	Hinge		470 1094	45.00	29.25	x
31.0700	Hinge		470 1095	45.00	29.25	x
31.0700	Hinge		470 1096	42.50	27.63	x
31.0700	Hinge		470 1097	42.50	27.63	x
54.0192	Duct		470 1345	6.25	3.75	.94
54.0192	Duct		470 1346	7.75	4.65	1.16
31.0725	Rod		470 1352	10.00	6.00	1.50
38.2873	Grommet		470 1357	.20	.12	.03
34.0620	Switch	Δ	470 1884	73.00	47.45	x
54.0133	Switch	Δ	470 2196	8.25	4.95	1.24
31.0596	Nut		470 2201	.05	.03	.01
35.1585	Retainer		470 2206	.15	.09	.02
33.1060	Door		470 2608			
33.1060	Door		470 2609	12.50	7.50	1.88
33.1060	Door		470 2610			
33.1060	Door		470 2611			
33.0020	Inst. Panel		470 2678	85.00	55.25	x
33.0020	Inst. Panel		470 2679	85.00	55.25	x
33.0020	Inst. Panel		470 2680	85.00	55.25	x
33.0020	Inst. Panel		470 2681	85.00	55.25	x
31.4954	Pin		470 2788	.50	.30	.08
35.1585	Retainer		470 2954	.35	.21	.05
34.0635	Lens		470 2981	8.50	5.10	1.28
34.0326	Spring		470 2987	2.25	1.46	.15
34.0326	Spring		470 2988	1.50	.98	.10
34.8015	Panel		470 3036			
34.8015	Panel		470 3037			
34.8015	Panel		470 3040			
34.8015	Panel		470 3041			
34.8015	Panel		470 3042			
34.8015	Panel		470 3043			
34.8045	Panel		470 3046			
34.8045	Panel		470 3047			
34.8045	Panel		470 3050			
34.8045	Panel		470 3051			
34.8045	Panel		470 3052			
34.8045	Panel		470 3053			
34.8745	Panel		470 3056			
34.8745	Panel		470 3057			
34.8745	Panel		470 3060			
34.8745	Panel		470 3061			
34.8745	Panel		470 3062			
34.8745	Panel		470 3063			
33.3000	Mirror		470 3256	19.95	11.97	2.99
33.3000	Mirror		470 3257	19.95	11.97	2.99
33.2915	Notebook		470 3258	15.50	10.08	x
33.2915	Notebook		470 3259	15.50	10.08	x
33.1060	Door		470 3269			
33.1060	Door		470 3270			
33.1060	Door		470 3271			
33.0020	Panel		470 3292	85.00	55.25	x
35.0050	Weathrstrp		470 3663	1.65	.99	.25
35.0050	Weathrstrp		470 3664	1.65	.99	.25
38.6070	Valve	Δ	470 3808	10.95	6.57	1.64
33.2940	Bottle		470 3991	85.00	55.25	x
34.0045	Pad		470 4263	49.50	29.70	7.43
33.2118	Escutcheon		470 5042	2.70	1.62	.41
34.0208	Nut	Δ	470 5361	16.00	9.60	2.40
31.2800	Bumper		470 5769	.10	.06	.02
33.0003	Cover		470 8300	48.95	29.37	7.34
38.2850	Molding		470 8301	11.75	7.05	1.76
38.2850	Molding		470 8302	11.75	7.05	1.76
38.2850	Molding		470 8303	21.50	12.90	3.23
31.3950	Panel		470 8304	28.50	17.10	4.28
31.3950	Panel		470 8305	28.50	17.10	4.28
33.5800	Robe Cord		470 9237	14.50	8.70	2.18
34.4240	Carpet		470 9245			
34.4240	Carpet		470 9246			
33.5800	Robe Cord		470 9280	14.50	8.70	2.18
54.6375	Door		470 9689	6.95	4.17	1.04
54.6375	Door		470 9690	6.95	4.17	1.04
38.5465	Drive	Δ	471 1599	7.95	4.77	1.19
31.5370	Weathrstrp	Δ	471 1666	11.25	6.75	1.69
35.5070	Pillar		471 1772	44.95	26.97	6.74
35.5070	Pillar		471 1773	44.95	26.97	6.74
35.8090	Harness		471 1774	150.00	97.50	x
35.1040	Pan		471 1947	145.00	94.25	x
31.0030	Door		471 2283	225.00	146.25	x
31.0030	Door		471 2284	225.00	146.25	x
31.0040	Door		471 2285	210.00	136.50	x
31.0040	Door		471 2286	210.00	136.50	x
35.1255	Plate		471 2412	19.50	11.70	2.93
35.1255	Plate		471 2413	19.50	11.70	2.93
35.1255	Plate		471 2414	14.50	8.70	2.18
35.1255	Plate		471 2415	14.50	8.70	2.18
35.1235	Panel		471 2420	54.50	35.43	x.
35.1235	Panel		471 2421	54.50	35.43	x
31.1820	Lever		471 3176	1.35	.81	.20
31.1600	Lock	Δ	471 3185	73.50	47.78	x
31.1600	Lock	Δ	471 3186	73.50	47.78	x
31.1700	Plate	Δ	471 3187			
31.1700	Plate	Δ	471 3188			
31.1755	Rod		471 3191	1.00	.65	x
31.1755	Rod		471 3192	1.00	.65	x
31.1755	Rod		471 3193	.80	.52	x
31.1755	Rod		471 3194	.80	.52	x
31.1755	Rod		471 3195	1.00	.65	x
31.1755	Rod		471 3196	1.00	.65	x
31.2350	Rod		471 3197	1.75	1.05	.26
31.2350	Rod		471 3200	2.05	1.23	.31
31.2350	Rod		471 3201	2.05	1.23	.31
31.1800	Link		471 3202	.95	.62	x
31.1810	Link		471 3205	1.05	.68	x
31.0984	Brace		471 3215	.95	.57	.14
31.0984	Brace		471 3216	.95	.57	.14
38.2850	Molding		471 3229	12.50	7.50	1.88
38.2850	Molding		471 3230	14.25	8.55	2.14
38.2850	Molding		471 3231	14.25	8.55	2.14
31.0985	Guide		471 3289	5.50	3.30	.83
31.0985	Guide		471 3290	5.50	3.30	.83

MASTER GROUP NO.	PART NAME	PART NO.	LIST PRICE	DIST.—DEALER PRICE	WHLSE. COMP.
31.2400	Handle	471 3295	11.90	7.74	x
31.2400	Handle	471 3296	11.90	7.74	x
31.1100	Channel	471 3297	4.50	2.93	x
31.1100	Channel	471 3298	4.50	2.93	x
31.1140	Channel	471 3300	4.50	2.93	x
31.1140	Channel	471 3301	4.50	2.93	x
31.2410	Handle	471 3305	8.75	5.69	x
31.2410	Handle	471 3306	8.75	5.69	x
31.0966	Support	471 3312			
31.4360	Weathrstrp Δ	471 3337	1.50	.90	.23
31.4360	Weathrstrp Δ	471 3338	1.50	.90	.23
35.1270	Molding Δ	471 3568	42.50	27.63	x
35.1270	Molding Δ	471 3569	42.50	27.63	x
31.2800	Bumper	471 3733	1.15	.69	.17
31.2800	Bumper	471 3734	1.15	.69	.17
31.2800	Bumper	471 3735	1.15	.69	.17
31.1710	Spacer Δ	471 3739	4.75	3.09	x
31.1710	Spacer Δ	471 3740	4.75	3.09	x
31.1710	Spacer Δ	471 3741	4.75	3.09	x
31.1710	Spacer Δ	471 3742	4.75	3.09	x
31.1610	Lock	471 3775	94.00	61.10	x
31.1610	Lock	471 3776	94.00	61.10	x
31.3960	Panel	471 3818	65.50	39.30	x
31.3960	Panel	471 3819	65.50	39.30	x
31.3960	Panel	471 3820	65.50	39.30	x
31.3960	Panel	471 3821	65.50	39.30	x
31.3960	Panel	471 3822	65.50	39.30	x
31.3960	Panel	471 3823	65.50	39.30	x
31.3960	Panel	471 3824	65.50	39.30	x
31.3960	Panel	471 3825	65.50	39.30	x
31.3960	Panel	471 3826	65.50	39.30	x
31.3960	Panel	471 3827	65.50	39.30	x
37.1050	Panel	471 3829	39.50	23.70	x
37.1050	Panel	471 3830	39.50	23.70	x
37.1050	Panel	471 3831	39.50	23.70	x
37.1050	Panel	471 3832	39.50	23.70	x
37.1050	Panel	471 3833	39.50	23.70	x
37.1050	Panel	471 3834	39.50	23.70	x
37.1050	Panel	471 3835	39.50	23.70	x
37.1050	Panel	471 3836	39.50	23.70	x
37.1050	Panel	471 3837	39.50	23.70	x
37.1050	Panel	471 3838	39.50	23.70	x
31.0580	Molding Δ	471 3843	18.50	11.10	2.78
31.0580	Molding Δ	471 3844	18.50	11.10	2.78
35.1258	Retainer	471 3846	4.50	2.70	.68
37.1505	Molding	471 3847	6.50	3.90	.98
37.1505	Molding	471 3848	6.50	3.90	.98
37.1505	Molding	471 3849	17.95	10.77	2.69
35.5470	Molding	471 3850	12.95	7.77	1.94
35.5470	Molding	471 3851	12.95	7.77	1.94
35.5470	Molding	471 3852	14.75	8.85	2.21
35.5470	Molding	471 3853	14.75	8.85	2.21
34.4340	Support	471 3864	4.95	2.97	.74
34.4340	Support	471 3865	4.95	2.97	.74
34.4340	Support	471 3866	4.25	2.55	.64
34.4340	Support	471 3867	4.25	2.55	.64
34.4340	Support	471 3868			
34.4340	Support	471 3869			
37.1507	Clip	471 3882	.05	.03	.01
34.0326	Spring Δ	471 3885	1.75	1.05	.26
34.0326	Spring Δ	471 3886	2.00	1.20	.30
34.0323	Bolt	471 3887	2.25	1.35	.34
34.0323	Bolt	471 3888	.48	.35	x
31.0985	Guide	471 3897	4.95	2.97	.74
31.0985	Guide	471 3898	4.95	2.97	.74
31.0590	Clip	471 3908	.15	.09	.02
31.1820	Lever	471 4003	6.25	3.75	.94
31.1820	Lever	471 4004	6.25	3.75	.94
31.1155	Support	471 4005			
31.4360	Weathrstrp Δ	471 4158	3.25	1.95	.49
31.4360	Weathrstrp Δ	471 4159	3.25	1.95	.49
31.4360	Weathrstrp Δ	471 4160	15.75	10.24	x
31.4360	Weathrstrp Δ	471 4161	15.75	10.24	x
31.4350	Weathrstrp Δ	471 4162	6.95	4.17	1.04
31.4350	Weathrstrp Δ	471 4163	6.95	4.17	1.04
31.4355	Retainer	471 4171			
31.4355	Retainer	471 4172			
35.1400	Molding	471 4176	13.50	8.10	2.03
35.1400	Molding	471 4177	13.50	8.10	2.03
35.1400	Molding	471 4502	3.95	2.37	.59
35.1400	Molding	471 4503	3.95	2.37	.59
35.1235	Panel	471 4517	8.25	4.95	1.24
35.1235	Panel	471 4518	8.25	4.95	1.24
34.0620	Switch Δ	471 4547	3.95	2.37	.59
34.0622	Gasket	471 4548	.07	.04	.01
31.5070	Guard	471 4705	22.95	13.77	3.44
35.1402	Spacer	471 4790	.15	.09	.02
33.2150	Support	471 4793	18.95	11.37	2.84
31.0780	Screw	471 4801			
31.0780	Screw	471 4804			
31.0780	Screw	471 4828			
33.3000	Mirror	471 5085	22.50	13.50	3.38
33.2915	Notebook	471 5086	15.50	10.08	x
34.8015	Trim Panel	471 5352			
34.8015	Trim Panel	471 5353			
34.8045	Trim Panel	471 5356			
34.8045	Trim Panel	471 5357			
34.8745	Trim Panel	471 5360			
34.8745	Trim Panel	471 5361			
54.5803	Strip	471 6183	.70	.42	.11
34.8700	Trim Cover	471 6315			
34.8700	Trim Cover	471 6316			
34.8700	Trim Cover	471 6317			
34.8700	Trim Cover	471 6318			
34.8700	Trim Cover	471 6319			
34.8700	Trim Cover	471 6320			
34.8700	Trim Cover	471 6321			
34.8700	Trim Cover	471 6322			
34.8700	Trim Cover	471 6323			
34.8700	Trim Cover	471 6324			
34.0320	Adjuster	471 6872	143.50	93.28	x
34.0320	Adjuster	471 6873	148.50	96.53	x
33.5800	Robe Cord	471 7095	14.25	8.55	2.14
33.0070	Molding	471 7240			

PARTS AND ACCESSORIES NUMERICAL PRICE LIST

MASTER GROUP NO.	PART NAME		PART NO	LIST PRICE	DIST.— DEALER PRICE	WHLSE. COMP.
33.0070	Molding		471 7241			
33.0020	Inst. Panel		471 7399	67.50	43.88	x
38.2880	Plate		471 7637	6.75	4.05	1.01
38.2880	Plate		471 7638	6.75	4.05	1.01
38.2880	Plate		471 7639	6.75	4.05	1.01
38.2880	Plate		471 7640	6.75	4.05	1.01
38.2880	Plate		471 7641	6.75	4.05	1.01
38.2880	Plate		471 7642	6.75	4.05	1.01
38.2880	Plate		471 7643	6.75	4.05	1.01
38.2880	Plate		471 7644	6.75	4.05	1.01
38.2880	Plate		471 7645	6.75	4.05	1.01
38.2880	Plate		471 7646	6.75	4.05	1.01
33.1330	Container		471 9580	3.25	1.95	.49
31.4350	Weathrstrp		472 1915	7.50	4.50	1.13
31.4350	Weathrstrp		472 1916	7.50	4.50	1.13
31.4360	Weathrstrp		472 2363			
35.1403	Cap		472 2630			
31.2300	Control		472 7337			
31.2300	Control		472 7338			
31.1880	Control		472 7339			
31.1880	Control		472 7340			
31.1890	Control		472 7341			
31.1890	Control		472 7342			
31.4960	Cover		490 1287	.55	.33	.08
31.4950	Power Unit		504 7934	55.95	33.57	8.39
31.4951	Motor	Δ	504 7947			
54.0125	Motor	Δ	504 7956	16.95	10.17	2.54
34.0200	Regulator	Δ	504 7970	45.55	27.33	6.83
34.0200	Regulator	Δ	504 7971	45.10	27.06	6.76
31.1417	Motor	Δ	504 7976	24.30	14.58	3.64
31.1417	Motor	Δ	504 7977	24.30	14.58	3.64
17.1800	Compressor	Δ	530 2935			
17.2305	Tee		534 1736			
17.0680	Shock Abs	Δ	553 1508	15.35	7.68	2.31
17.1900	Solenoid	Δ	553 3165			
17.2290	Tee Check	Δ	553 3166			
17.0680	Shock Abs.	Δ	553 5533	7.90	3.95	1.18
17.2170	Valve	Δ	553 6758			
17.2170	Valve	Δ	553 6759			
8.2960	Cartridge	Δ	557 2128	2.98	▲	▲
18.0305	Shaft	Δ	568 4482	9.50	5.70	1.43
18.2010	Pump	Δ	568 5972	61.00	36.60	9.15
14.1748	Screw	Δ	594 6946	.10	.06	.02
53.0136	Gasket	Δ	594 7599	.60	.36	.09
53.0140	Reflector		594 7617	6.90	4.14	1.24
53.0140	Reflector		594 7618	6.90	4.14	1.24
53.0135	Lens	Δ	594 7619	1.95	1.17	.35
53.0135	Lens	Δ	594 7620	1.95	1.17	.35
14.1419	Gasket	Δ	594 7692	.20	.12	.04
14.1741	Lens	Δ	594 7693	1.10	.66	.20
14.1409	Lens	Δ	594 7694	1.70	1.02	.31
14.1935	Wire	Δ	594 7808	1.20	.72	.22
14.1928	Lens	Δ	594 7809	2.80	1.68	.50
14.1928	Lens	Δ	594 7810	2.80	1.68	.50
14.1682	Body	Δ	594 7822	12.55	7.53	2.26
14.1741	Lens	Δ	594 7840	2.00	1.20	.36
14.0310	Headlamp	Δ	594 7841	36.40	21.84	6.55
14.0310	Headlamp	Δ	594 7842	36.40	21.84	6.55
14.1747	Gasket	Δ	594 7852	.35	.21	.06
14.1688	Gasket		594 7853	.30	.18	.05
53.0155	Wire		594 7922	5.80	3.48	1.04
14.0317	Adapter	Δ	594 8011	2.10	1.26	.38
14.0317	Adapter	Δ	594 8012	2.10	1.26	.38
14.0317	Adapter	Δ	594 8013	2.10	1.26	.38
14.0317	Adapter	Δ	594 8014	2.10	1.26	.38
14.0314	Bearing	Δ	594 8015	.10	.06	.02
14.0680	Wire		594 8018	2.40	1.44	.43
14.0680	Wire		594 8021	2.10	1.26	.38
14.0325	Rim	Δ	594 8024	1.90	1.14	.34
53.0246	Wire		594 8216	1.10	.66	.20
53.0301	Harness		594 8230			
14.0335	Light Unit		594 8291			
33.2114	Handle		594 8341	1.90	1.14	.34
14.0335	Light Unit	Δ	594 8501	2.52	1.27	.32
14.0335	Light Unit	Δ	594 8502	2.62	1.34	.35
14.0310	Headlamp		594 8873	42.45	25.47	7.64
14.0310	Headlamp		594 8874	42.45	25.47	7.64
31.4869	Cap		700 9887			
31.4868	Case		700 9888	.95	.57	.14
31.5085	Retainer		700 9889	.35	.21	.05
31.4870	Spring		700 9890	.30	.18	.05
31.4866	Shaft		700 9891	.80	.48	.12
55.0051	Socket		725 7318			
55.0075	Coil		725 8554	2.00	1.20	.36
55.0109	Relay		726 3471	15.00	9.00	2.70
55.0075	Coil		726 5642	.85	.51	.15
55.0105	Switch		726 8030	1.00	.60	.18
55.0070	Transformer		726 8193	6.00	3.60	1.20
55.0055	Speaker		726 8625	10.50	6.30	1.58
55.0305	Speaker		726 8635	7.25	4.35	1.09
55.0045	Escutcheon		726 9138	1.50	.90	.27
55.0109	Relay		726 9296	4.00	2.40	.72
55.0070	Transformer		726 9336	8.00	4.80	1.60
55.0070	Transformer		726 9339	9.00	5.40	1.80
55.0125	Shaft		726 9438	.65	.39	.12
55.0061	Control		726 9482	3.50	2.10	.63
55.0060	Control		726 9483	4.00	2.40	.72
55.0080	Condenser		726 9656			
55.0050	Transistor		726 9745	6.75	4.05	1.20
55.0050	Transistor		726 9746	1.25	.75	.28
55.0050	Transistor		726 9747	6.75	4.05	1.20
55.0050	Transistor		726 9748	5.35	3.22	.97
55.0050	Transistor		726 9749	6.75	4.05	1.20
55.0105	Switch		726 9755	4.00	2.40	.72
55.0080	Condenser		726 9776	.45	.27	.11
55.0050	Transistor		726 9844	6.75	4.05	1.20
55.0050	Transistor		726 9845	6.75	4.05	1.20
55.0050	Transistor		726 9846	6.75	4.05	1.20
55.0050	Transistor		726 9847	5.35	3.22	.97
54.5654	Clamp	Δ	852 3755	.25	.15	.04
54.1505	Condenser		852 5248	83.35	50.01	12.50
20.1720	Shaft		861 7943	82.15	49.29	12.32
20.1625	Shaft	Δ	861 7947	14.70	8.82	2.20
20.0005	Trans.		861 8917	Price on application		
7.3265	Horn	Δ	900 0329	6.95	4.17	1.23
12.4132	Tee	Δ	940 9943	1.50	.90	.23

471 7241 ▲ See AC Parts Section

AC PARTS SECTION - RESALE PRICES

AC parts included in this section are subject to the resale price maintenance provisions of the Fair Trade Acts of those States having such legislation. The Net Prices shown apply to purchases by Distributors, Dealers and Wholesale buyers.

In States not having Fair Trade Act legislation, the Net Prices shown are the prices at which the Cadillac Motor Car Division, General Motors Corporation, sells such parts to their franchised Distributors and Dealers. The List Prices and Net Prices shown in this section are suggestions only with respect to the pricing of such parts by Distributors and Dealers.

CONTENTS

Oil Filter Cartridge

CARTRIDGE, OIL FILTER - GROUP 8.2960
ASSORTMENT ALLOWED

Part No.	Type	List Price	Quantity	Whlse. Price	Dist. Dlr. Price	Whlse. Comp.
557 2128	PF-122	2.98	24 or more	1.64	1.64	.45
			1-23	1.94	1.94	